

PROCESSOR TECHNOLOGY CORPORATION

Sol TERMINAL COMPUTERTM

CONTENTS

****This manual for the Sol Terminal Computer is made up of those****
sections and appendices preceded with a check (X) mark.

<u>SECTION</u>	<u>TITLE</u>	<u>PAGE</u>
(X) I	INTRODUCTION and GENERAL INFORMATION	
1.1	Introduction	I-1 ✓
1.2	General Information	I-1 ✓
1.2.1	Sol-PC Description	I-1 ✓
1.2.2	Receiving Inspection	I-2 ✓
1.2.3	Warranty Information	I-2 ✓
1.2.4	Replacement Parts	I-2 ✓
1.2.5	Factory Service	I-3 ✓
(X) II	Sol POWER SUPPLY ASSEMBLY and TEST	
2.1	Introduction	II-1 ✓
2.2	Parts and Components	II-1 ✓
2.2.1	Sol Regulator (Sol-REG)	II-1 ✓
2.2.2	Power Supply Subchassis and Components	II-1 ✓
2.3	Assembly Tips	II-5 ✓
2.3.1	Electrical	II-5 ✓
2.3.2	Mechanical	II-5 ✓
2.4	Assembly Precautions	II-5 ✓
2.5	Required Tools, Equipment and Materials . .	II-6 ✓
2.6	Orientation	II-6 ✓
2.6.1	Sol-REG PC Board	II-6 ✓
2.6.2	Fan Closure Plate	II-6 ✓
2.7	Assembly-Test	II-6 ✓
2.7.1	Fan Closure Plate Assembly	II-7 ✓
2.7.2	Sol-REG Assembly and Test	II-10 ✓
2.7.3	Power Supply Subchassis Assembly and Test	II-14 ✓
(X) III	Sol-PC ASSEMBLY and TEST	
3.1	Parts and Components	III-1 ✓
3.2	Assembly Tips	III-1 ✓
3.3	Assembly Precautions	III-6 ✓
3.3.1	Handling MOS Integrated Circuits . .	III-6 ✓
3.3.2	Soldering	III-6 ✓

<u>SECTION</u>	<u>TITLE</u>	<u>PAGE</u>
(X) III	Sol-PC ASSEMBLY and TEST (Continued)	
	3.3.3 Power Connection (J10)	III-6
	3.3.4 Installing and Removing Integrated Circuits	III-6
	3.3.5 Installing and Removing Personality Module	III-6
	3.3.6 Use of Clip Leads	III-7
	3.4 Required Tools, Equipment and Materials . .	III-7
	3.5 Orientation (Sol-PCB)	III-7
	3.6 Sol-PC Assembly-Test Procedure	III-7
	3.6.1 Circuit Board Check	III-8
	3.6.2 Personality Module Assembly	III-9
	3.6.3 Sol-PCB Assembly and Test	III-9
(X) IV	PERSONALITY MODULE ASSEMBLY	
	4.1 Parts and Components	IV-1
	4.2 Assembly Tips	IV-1
	4.3 Assembly Precautions	IV-1
	4.4 Required Tools, Equipment and Materials . .	IV-1
	4.5 Orientation	IV-1
	4.6 Assembly-Test	IV-2
	4.6.1 Circuit Board Check	IV-2
	4.6.2 Assembly-Test Procedure	IV-2
(X) V	KEYBOARD ASSEMBLY and TEST	
	5.1 Parts and Components	V-1
	5.2 Assembly Tips	V-1
	5.3 Assembly Precautions	V-1
	5.4 Required Tools, Equipment and Materials . .	V-1
	5.5 Orientation	V-1
	5.6 Assembly-Test	V-3
	5.6.1 Circuit Board Check	V-3
	5.6.2 Assembly-Test Procedure	V-3
(X) VI	Sol CABINET-CHASSIS ASSEMBLY	
	6.1 Introduction	VI-1
	6.2 Parts and Components	VI-1

<u>SECTION</u>	<u>TITLE</u>	<u>PAGE</u>
(X) VI	Sol CABINET-CHASSIS ASSEMBLY (Continued)	
6.3	Assembly Tips	VI-1
6.3.1	General	VI-1
6.3.2	Electrical	VI-1
6.3.3	Mechanical	VI-5
6.4	Required Tools, Equipment and Materials . .	VI-6
6.5	Orientation	VI-6
6.5.1	Sol Backplane Board, Sol-BPB	VI-6
6.5.2	Sol Cabinet-Chassis	VI-6
6.6	Assembly-Test	VI-7
6.6.1	Backplane Board (Sol-BPB) Assembly .	VI-7
6.6.2	Wooden-Masonite Parts	VI-8
6.6.3	Sol Assembly	VI-10
() VII	OPERATING PROCEDURES	
() VIII	THEORY OF OPERATION	
(X) IX	SOFTWARE	
9.1	CONSOL	IX-1
9.1.1	DUMp (addr) (addr)	IX-2
9.1.2	ENter addr	IX-2
9.1.3	TLoad (speed)	IX-2
9.1.4	EXecute addr	IX-3
9.1.5	BAsic	IX-3
9.2	Standard I/O Routines	IX-3
(X) X	DRAWINGS	
X-1	Assembly, Fan Closure Plate, Drawing #105014	
X-2	Assembly, Sol-10 & 20 Power Supply, Drawing #105001	
X-3	Sol-PC Assembly Drawing	
X-4	Personality Module Assembly Drawing, PM5204	
X-5	Personality Module Assembly Drawing, PM6834	
X-6	Personality Module Assembly Drawing, PM2708	
X-7	Sol Keyboard Assembly Drawing	

<u>SECTION</u>	<u>TITLE</u>	<u>PAGE</u>
(X) X	DRAWINGS (Continued)	
	X-8 Side Assembly, Left-hand, Drawing #101007	
	X-9 Side Assembly, Right-hand, Drawing #101008	
	X-10 Assembly, Sol, Drawing #101000 (Sheet 1)	
	X-11 Assembly, Sol, Drawing #101000 (Sheet 2)	
	X-12 Sol-REG Schematic Drawing	
	X-13 Sol-10 Schematic Drawing	
	X-14 Sol-20 Schematic Drawing	
	X-15 Sol CPU and Bus Schematic, Drawing 1	
	X-16 Sol Memory and Decoder Schematic, Drawing 2	
	X-17 Sol Input/Output Schematic, Drawing 3	
	X-18 Sol Display Control Schematic, Drawing 4	
	X-19 Sol Audio Tape I/O Schematic, Drawing 5	
	X-20 Personality Module (PM5204) Schematic	
	X-21 Personality Module (PM6834) Schematic	
	X-22 Personality Module (PM2708) Schematic	
	X-23 Sol Keyboard Schematic	
APPENDICES		
(X)	I Statement of Warranty	
(X)	II 8080 Operating Codes	
(X)	III Standard Color Code	
(X)	IV Loading DIP Devices, Soldering Tips and Installing Augat Pins	
()	V IC Pin Configurations	
(X)	VI TV Interface	
(X)	VII Memory and I/O Allocation Chart	

PROCESSOR TECHNOLOGY CORPORATION

Sol TERMINAL COMPUTERTM

LIST OF ILLUSTRATIONS

<u>FIGURE</u>	<u>TITLE</u>	<u>PAGE</u>
2-1	Sol-20 fan closure plate assembly	II-7
2-2	Coaxial cable preparation	II-9
2-3	Aluminum heat sink installation	II-12
2-4	Sol-10 power supply subchassis assembly	II-15
2-5	Sol-20 power supply subchassis assembly	II-16
2-6	Sol-PC power connector and voltage measurements .	II-19
2-7	Sol-20 power connector and voltage measurements .	II-19
3-1	Identification of components	III-5
3-2	Clock circuit waveforms	III-15
3-3	Test probe for Steps 16B and 25B	III-16
3-4	Coaxial cable preparation	III-19
3-5	Display section timing waveforms	III-21
3-6	Bending selected pins on U42, 59 and 75	III-23
3-7	U14 through U21 socket jumpers	III-24
3-8	Display circuits test pattern	III-25
3-9	CPU Functional Test No. 1 display	III-29
3-10	CPU Functional Test No. 2 display	III-31
3-11	Personality module bracket/guide installation . .	III-31
4-1	R1 through R4 installation	IV-4
4-2	Handle bracket (Sol-1045) installation	IV-5
6-1	Types of screws used in Sol cabinet-chassis assembly	VI-4
6-2	Brackets used in Sol cabinet-chassis assembly . .	VI-4
6-3	Sol-20 with covers removed	VI-11
6-4	Sol-20 with covers removed	VI-11
6-5	Sol-PC coaxial cable connector assembly	VI-14
6-6	Backplane board (Sol-BPB) installation	VI-16
6-7	Backplane board (Sol-BPB) installation	VI-17
6-8	Protective foot pad installation	VI-20

PROCESSOR TECHNOLOGY CORPORATION

Sol TERMINAL COMPUTERTM

LIST OF TABLES

<u>TABLE</u>	<u>TITLE</u>	<u>PAGE</u>
2-1	Sol Regulator Parts List	II-2,3
2-2	Sol-10 Power Supply Parts List	II-4
2-3	Sol-20 Power Supply Parts List	II-4
3-1	Sol-PC Parts List	III-2,3,4
4-1	PM5204 Personality Module Parts List	IV-1
5-1	Sol Keyboard Parts List	V-2,3
6-1	Sol-10 Cabinet-Chassis Parts List	VI-2
6-2	Sol-20 Cabinet-Chassis Parts List	VI-3