

PROCESSOR TECHNOLOGY CORPORATION

So1 PERSONALITY MODULE

SECTION IV

- () If you do not see a blinking cursor, locate and correct the problem before proceeding.
- () If a blinking cursor is present, the ENTER and DUMP commands should operate as described in Section IX of this manual.
- () If the ENTER and DUMP commands do not operate correctly, locate and correct the problem before proceeding.
- () If the personality module is operating correctly, turn monitor and power off, disconnect power cable and video output cable and go on to Step 50 in Section III. (The personality module can be left plugged in.)