

PROCESSOR TECHNOLOGY CORP.
6200 HOLLIS STREET
EMERYVILLE, CALIF. 94608

--- CONSOL ---
COPYRIGHT 1976

C180 80	0423	DB	MODE	MODE KEY
C181 B4 C1	0424	DW	COMND	
C183 00	0425	DB	0	END OF TABLE
C184	0426 *			
C184	0427 *			
C184	0428 *			
C184 4C C0	0429 OTAB	DW	VDMOL	VDM DRIVER
C186 40 C0	0430	DW	SEROT	SERIAL OUTPUT
C188 AD C1	0431	DW	ERROT	ERROR HANDLER (FOR CONSOL)
C18A AD C1	0432	DW	ERROT	ERROR HANDLER
C18C	0433 *			
C18C	0434 *			
C18C	0435 *			
C18C 27 C0	0436 ITAB	DW	KREAL	KEYBOARD INPUT
C18E 36 C0	0437	DW	SREAL	SERIAL INPUT
C190 AD C1	0438	DW	ERROT	ERROR HANDLER (FOR CONSOL)
C192 AD C1	0439	DW	ERROT	ERROR HANDLER
C194	0440 *			
C194	0441 *			
C194	0442 *			
C194	0443 *			
C194	0444 *			
C194	0445 *			
C194 54 45	0446	ASC	'TE'	
C196 70 C2	0447	DW	TERM	
C198 44 55	0448	ASC	'DU'	
C19A A1 C2	0449	DW	DUMP	
C19C 45 4E	0450	ASC	'EN'	
C19E 07 C3	0451	DW	ENTER	
C1A0 45 58	0452	ASC	'EX'	
C1A2 35 C3	0453	DW	EXEC	
C1A4 54 4C	0454	ASC	'TL'	
C1A6 39 C3	0455	DW	TLOAD	
C1A8 42 41	0456	ASC	'BA'	
C1AA 00 00	0457	DW	0	
C1AC 00	0458	DB	0	
C1AD	0459 *			
C1AD	0460 *			
C1AD	0461 *			
C1AD	0462 *			
C1AD AF	0463 ERROT	XRA	A	
C1AE 32 04 C8	0464	STA	IPOINT	DEFAULT TO SCREEN
C1B1 32 03 C8	0465	STA	OPORT	DEFAULT TO SCREEN
C1B4	0466 *			
C1B4	0467 *			
C1B4	0468 *			
C1B4	0469 *			
C1B4	0470 *			
C1B4	0471 *			
C1B4	0472 *			
C1B4	0473 *			
C1B4	0474 *			
C1B4 31 00 CC	0475	COMND	LXI	SP,SYSTP SET STACK POINTER

THIS TABLE DESCRIBES THE VALID COMMANDS FOR CONSOL

COMMAND TABLE

'TE'
TERM
'DU'
DUMP
'EN'
ENTER
'EX'
EXEC
'TL'
TLOAD
'BA'
0
0

SPECIAL COMMAND TO EXECUTE 0

END OF TABLE MARK

CONSOL PORT ERROR HANDLER

--- COMMAND MODE ---

THIS ROUTINE GETS AND PROCESSES COMMANDS