

```

C335 * THIS ROUTINE GETS THE FOLLOWING PARAMETER AND DOES A
C335 * PROGRAM JUMP TO THE LOCATION GIVEN BY IT. IF PROPER
C335 * STACK OPERATIONS ARE USED WITHIN THE EXTERNAL PROGRAM
C335 * IT CAN DO A STANDARD 'RET'URN TO THE CONSL COMMAND MODE.
C335 *
C335 CD 3E C2
C335 C338 E9
C339
C339 CD 3E C2
C339 C338 E9
C339
C339 CD 24 C2
C339 CA 4A C3
C339 CD 44 C2
C339 C342 7D
C343 E6 01
C345 3E 20
C347 C2 4B C3
C34A AF
C34B F6 C0
C34D D3 FA
C34F CD F1 C3
C352 DB FB
C354 CD 94 C3
C357 C2 54 C3
C35A 2A 0C C8
C35D EB
C35E 2A 0E C8
C361 7A
C362 B3
C363 CA ED C3
C366 01 00 FF
C369 EB
C36A 09
C36B D2 E1 C3
C36E 06 00
C370 0E 00
C370 EB
C373

0794 * SCONV . SCAN PAST BLANKS AND GET PARAM
0795 * GO.....(AMD TAKE NOTE)
0796 * THIS MANY PRIOR TO CRC TEST
0797 * COUNT IS ZERO-TURN OFF TAPE AND
0798 * COUNT TO HL
0799 * THIS MANY PRIOR TO CRC TEST
0800 EXEC CALL PCHL .
0801 * .
0802 * .
0803 * .
0804 * .
0805 * TAPE LOAD COMMAND
0806 * THIS ROUTINE READS FROM EITHER TAPE UNIT PLACING
0807 * THE READ DATA INTO MEMORY. WHILE SPACE WITHIN CONSL
0808 * DOES NOT ALLOW FOR 'STANDARD' TAPE ROUTINES THIS
0809 * COMMAND WILL LOAD SOL-BASIC5 AND OTHER STANDARD SOL
0810 * SYSTEM SOFTWARE FOR DIRECT EXECUTION.
0811 * .
0812 * .
0813 * .
0814 TLOAD CALL SBLK
0815 DFLT
0816 CALL DFLT
0817 MOV SHEX
0818 ANI CONVERT IT
0819 MVN A,L
0820 MVN 1
0821 MVN A,32
0822 SETSP PRETEND ITS SLOW
0823 SETSP
0824 OUT
0825 CALL
0826 IN
0827 * .
0828 TL0D1 CALL RHEAD
0829 JNZ TL0D1
0830 * .
0831 LHLD BLOCK
0832 XCHG .
0833 LHLD LOADR
0834 * .
0835 LOOOP GET COUNT
0836 ORA A,D
0837 JZ E
0838 LXI TOFF
0839 XCHG B,-256
0840 DAD .
0841 JNC B
0842 MVN B,0
0843 * .
0844 RDBLK MVI C,0
0845 RDBLK XCHG .
00000 * .

```