




6. Exploded Views & Parts List

Main Ass'y

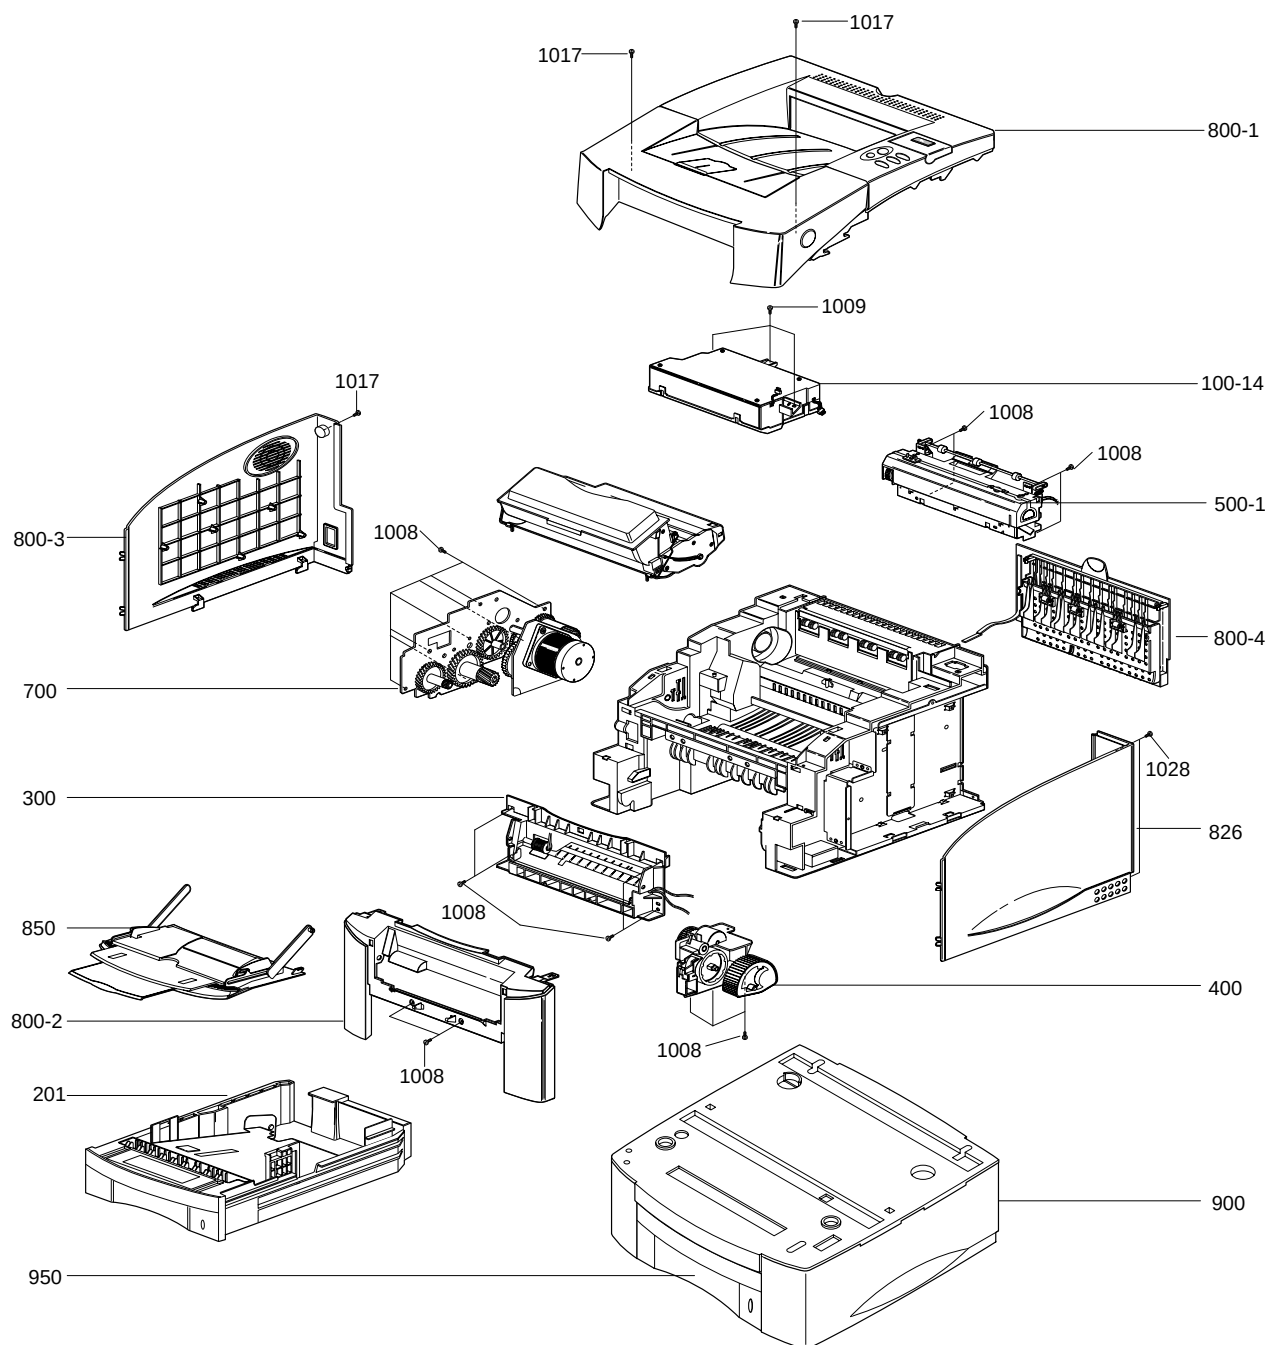

6-1-1. Cover Ass'y

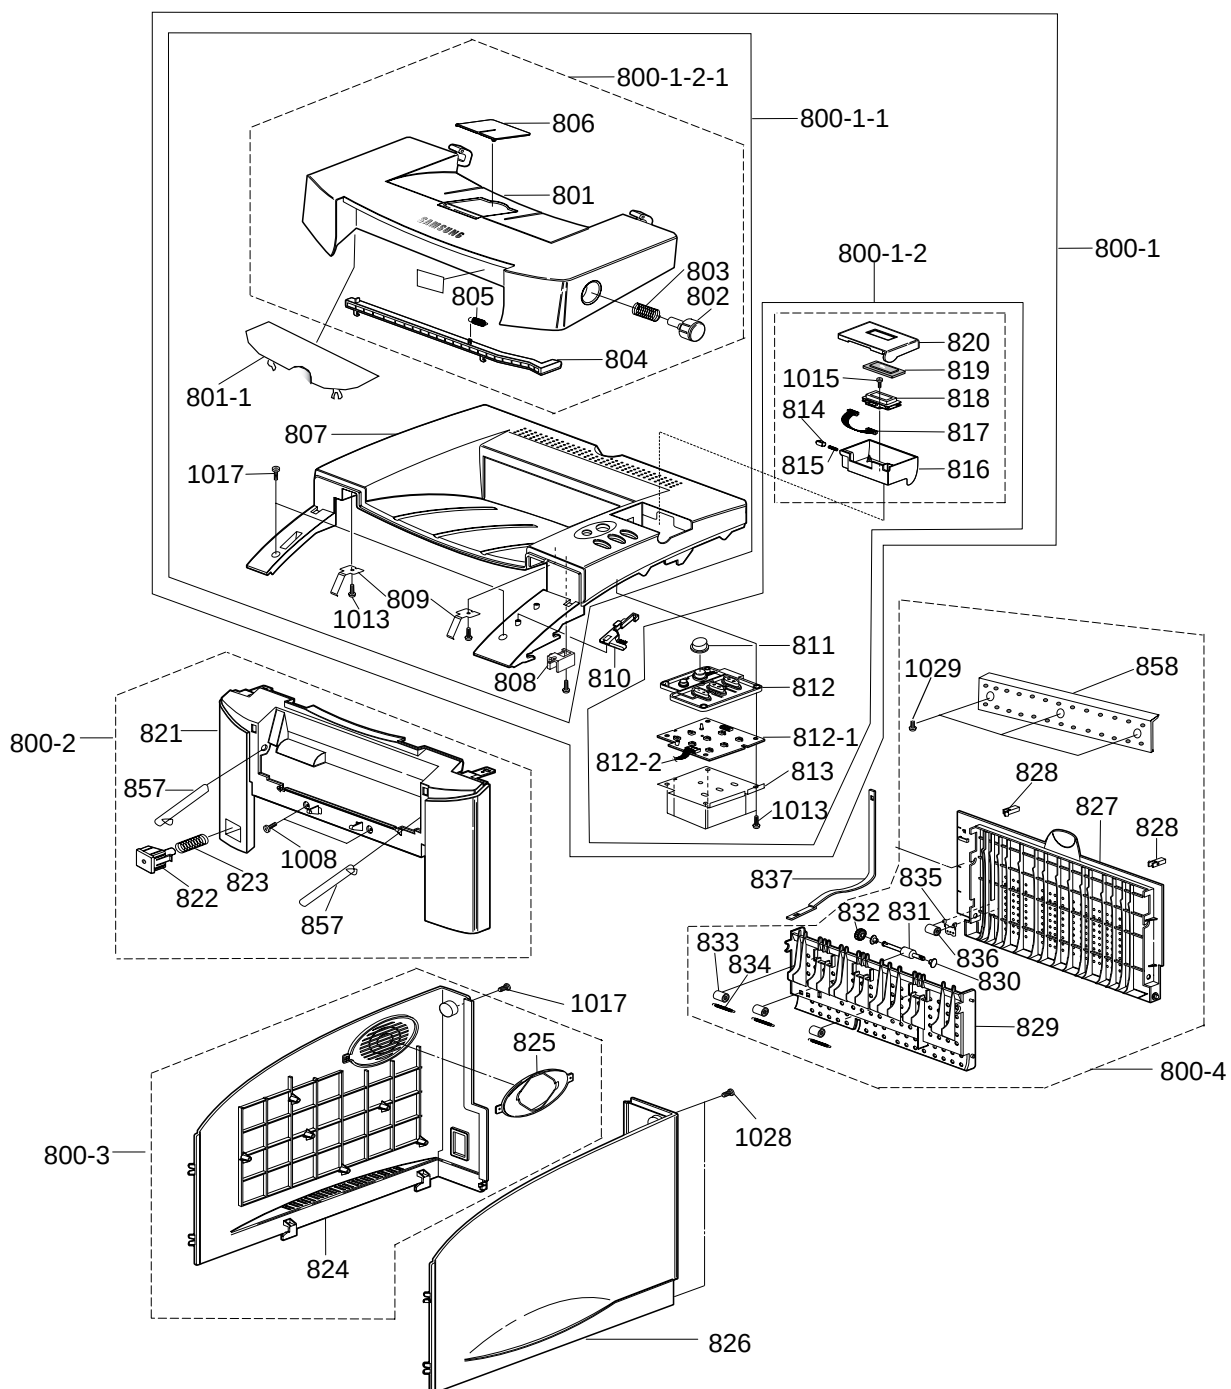

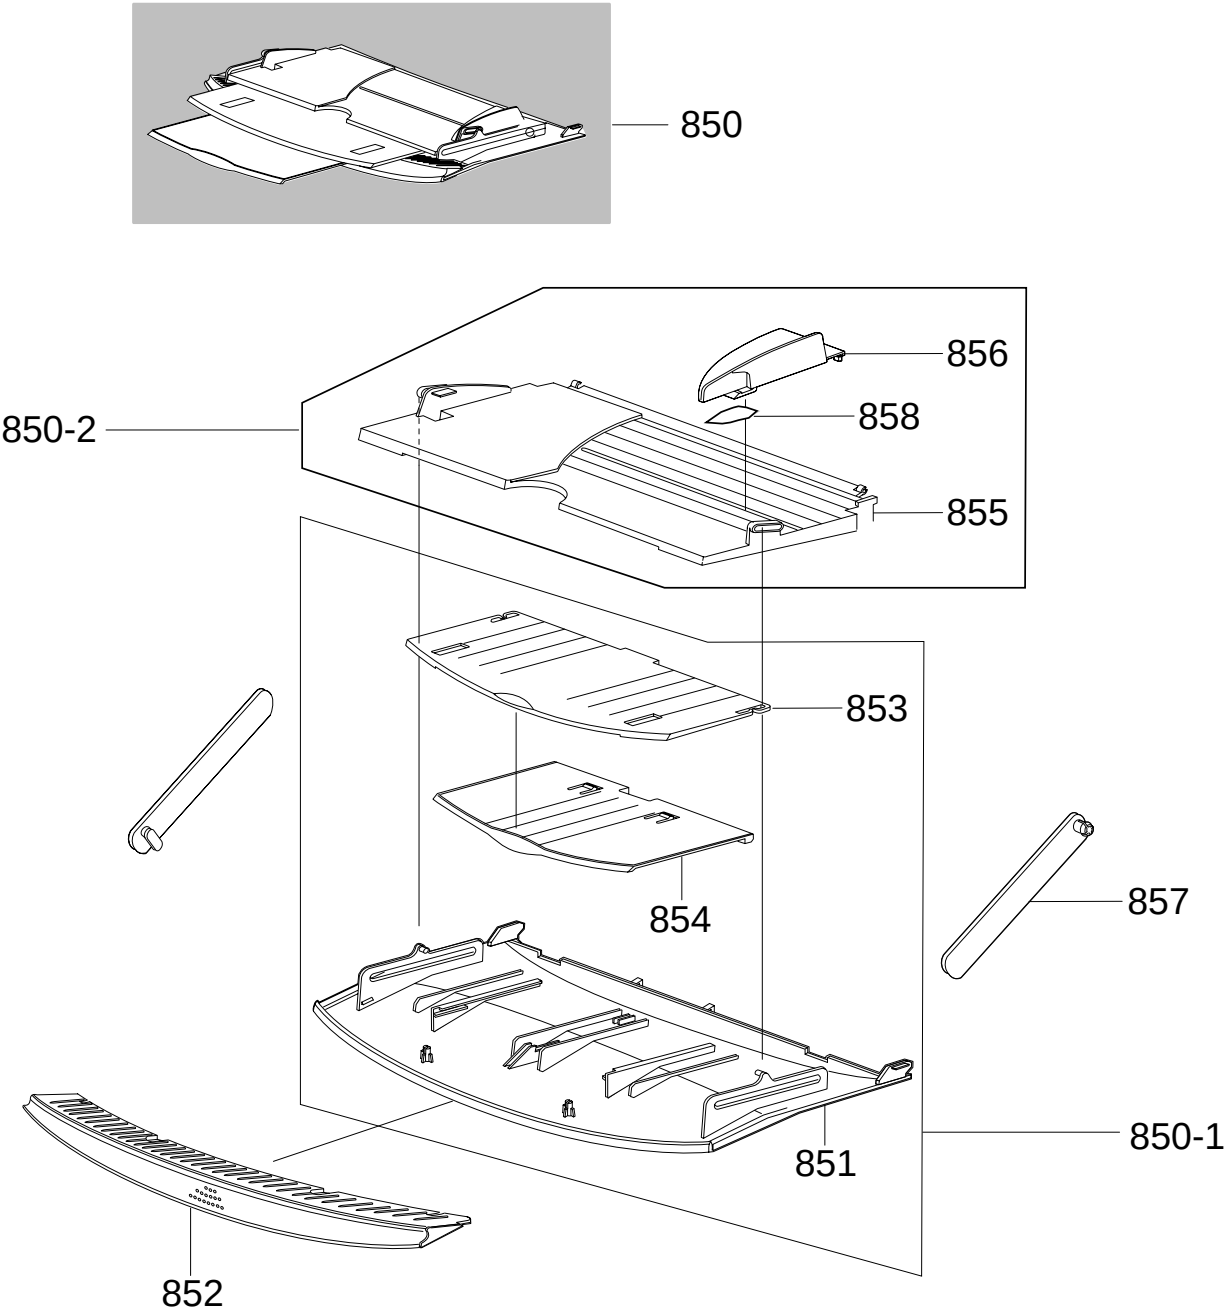


6-1-2. Cover Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
194	PMO-COVER EXIT	JC72-40943F	1	O	
826	PMO-COVER RIGHT	JC72-40941E	1	O	
857	PMO-LINK TRAY	JC72-40957D	2	O	
800-1	ELA HOU-COVER MAIN	*	1	X	
1013	SCREW-TAPTITE	*	6	X	
800-1-1	ELA HOU-COVER TOP	JC68-01535B	1	O	
807	PMO-COVER TOP	*	1	X	
808	PMO-STOPPER HINGE	*	1	X	
809	IPR-SPRING HINGE	*	2	X	
1012	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	1	X	
800-1-1-1	MEA RACK-COVER OPEN	*	1	X	
801	PMO-COVER OPEN	*	1	X	
802	PMO-BUTTON OPEN	*	1	X	
803	SPRING-CS	*	1	X	
804	PMO-HOOK OPEN	*	1	X	
805	SPRING-HOOK LEVER2	*	1	X	
806	PMO-SACKER	*	1	X	
800-1-2	ELA HOU-PNL&LCD	*	1	X	
810	PMO-HOLDER CLEANER LSU	*	1	X	
811	PMO-KEY ONLINE	*	1	X	
812	PMO-KEY SEESAW	*	1	X	
813	IPR-INSULATOR PANEL	*	1	X	
814	PMO-LCD LOCKER	*	1	X	
815	SPRING-LCD LOCKER	*	1	X	
816	PMO-HOUSING PANEL L	*	1	X	
817	CBF HARNESS-LCD	*	1	X	
818	PBA SUB DISP-LCD	*	1	X	
819	PMO-WINDOW PANEL	*	1	X	
820	PMO-HOUSING PANEL U	*	1	X	
1015	SCREW-TAPTITE	*	1	X	
812-1	PBA SUB DISP-PANEL	*	1	X	
812-2	CBF HARNESS-PANEL	*	1	X	
800-2	MEA RACK-COVER FRONT	JC97-01024B	1	O	
821	PMO-COVER FRONT	*	1	X	
822	PMO-BOTTOM POWER	*	1	X	
823	SPRING-CS	*	1	X	
800-3	MEA RACK-COVER LEFT	JC97-01025B	1	O	
824	PMO-COVER LEFT	*	1	X	
825	PMO-AIRDUCT	*	1	X	
800-4	MEA RACK-COVER REAR	JC97-01026B	1	O	
827	PMO-COVER REAR	*	1	X	
828	SPRING-REAR	*	2	X	
829	PMO-GUIDE INNER DP	*	1	X	
830	PMO-BEARING LARGE DP	*	2	X	
831	RCT-ROLLER REAR DP	*	1	X	
832	GEAR-DUPLEX	*	1	X	
833	PMO-IDLE PICK UP	*	3	X	
834	SPRING-FEED ROLL	*	3	X	
835	IPR-SPRING UPPER DP	*	1	X	
836	PMO-ROLLER UPPER DP	*	1	X	
858	ICT-BRKT REAR COVER	*	1	X	
1029	SCREW-TAPTITE	*	3	X	
850-1	MEA RACK-COVER TRAY	JC97-01037B	1	O	
851	PMO-COVER TRAY	*	1	X	
852	PMO-COVER COLOR	*	1	X	
853	PMO-SUB TRAY FIRST	*	1	X	
854	PMO-SUB TRAY SECOND	*	1	X	
850-2	MEA RACK-TRAY MP	JC97-01038B	1	O	
851	PMO-TRAY MP	*	1	X	
853	PMO-SIDE GUIDE TRAY	*	1	X	
858	ICT-SHEET SIDE GUIDE	*	1	X	

Exploded Views

6-2-1. Frame Ass'y

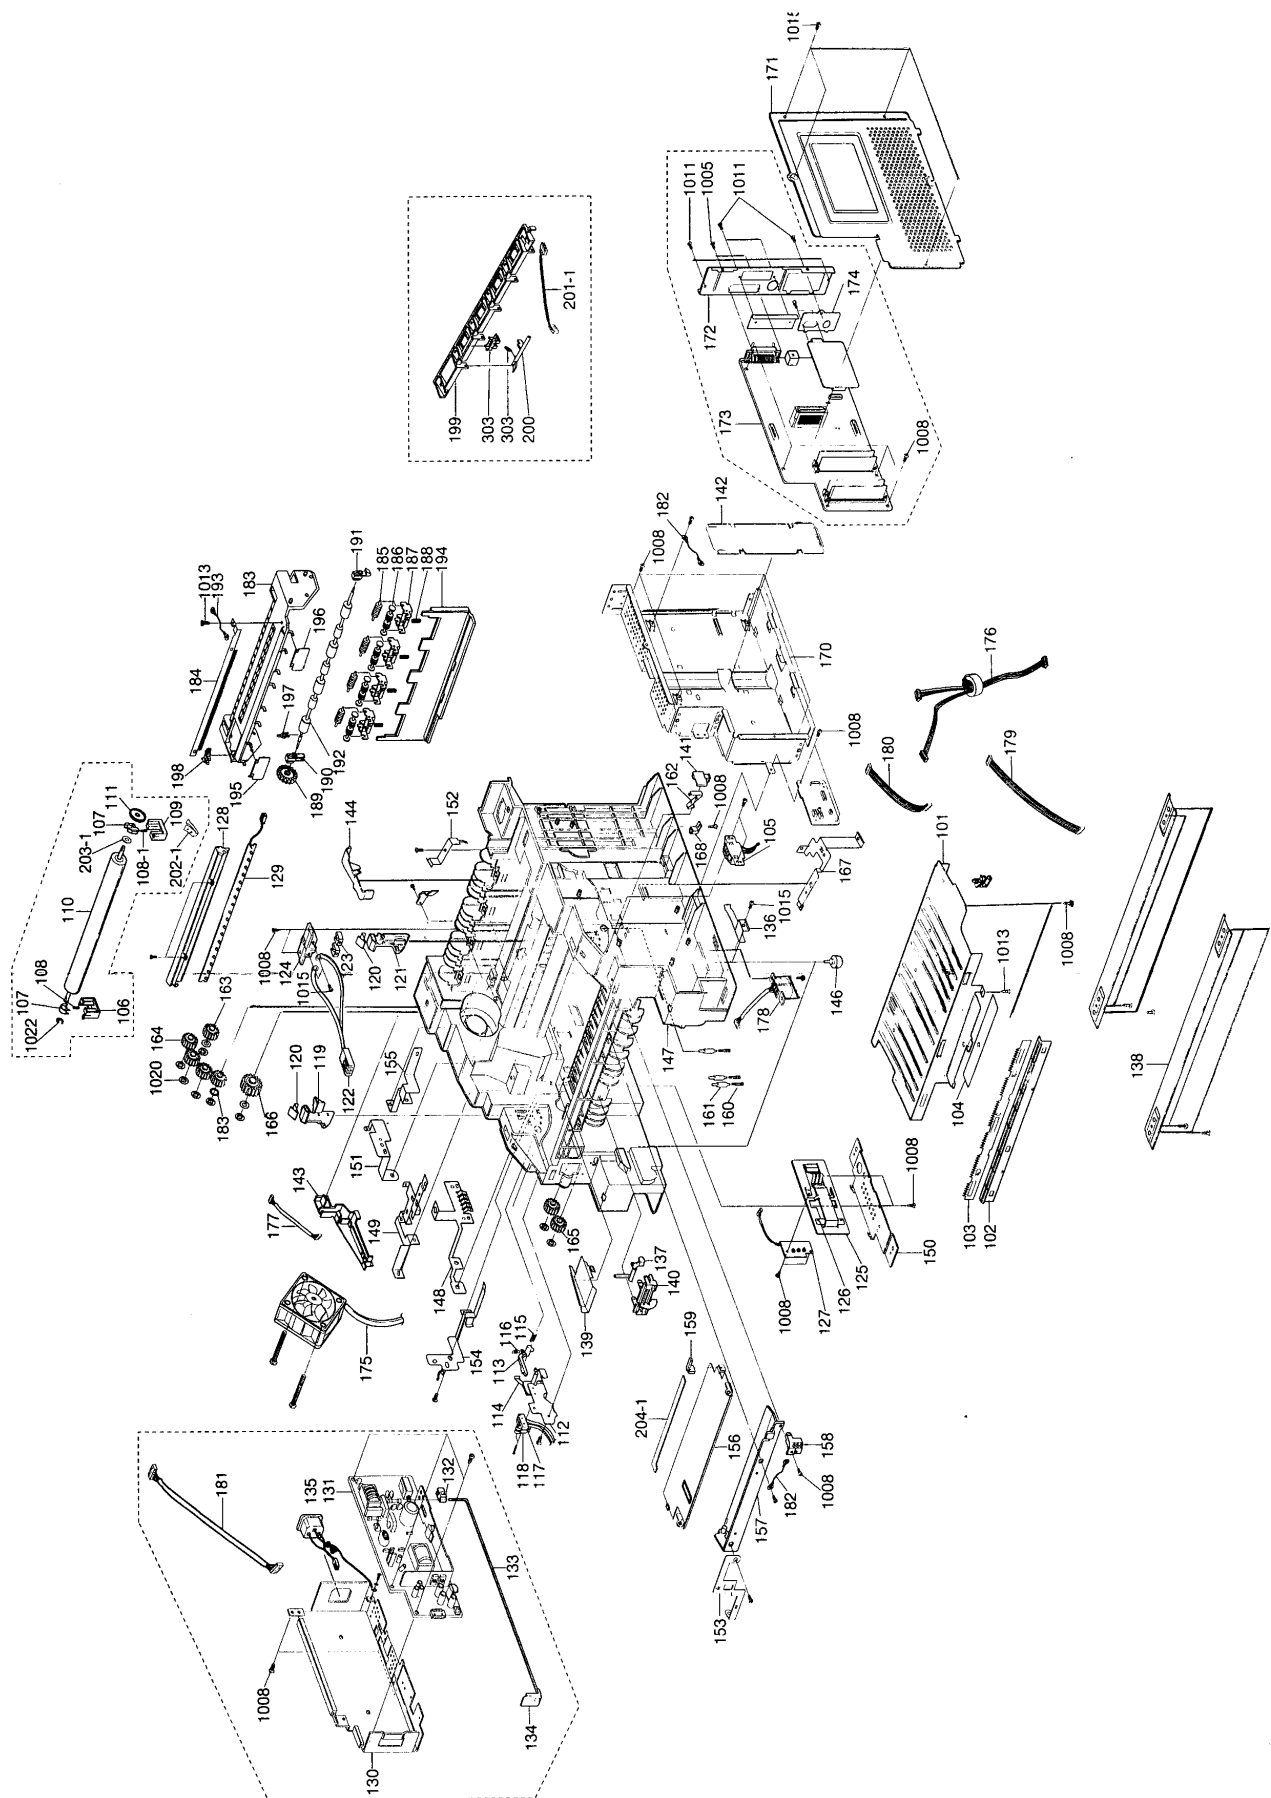


6-2-2. Frame Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
170-1	ELA HOU-CONTROLLER	*		X	
170-1-1	PBA MAIN CTRL-CONTROLLER	JC92-01242A	1	O	
172	IPR-BRKT ICU	JC70-10931B	1	O	
173	IPR-BKT NETWORK	JC70-10932A	1	O	
174	IPR-BKT SERIAL	JC70-10933A	1	O	
1015	SCREW-TAPTITE	*	3	X	
100-1	MEA RACK-GUIDE T/R	JC97-01033A	1	O	
101	PMO-GUIDE TRANSFER	*	1	X	
102	PMO-HOLDER SAW	*	1	X	
103	IPR-PLATE SAW	*	1	X	
104	PPR-INSULATOR G/TR	*	1	X	
1026	CABLE CLAMP	*	1	X	
100-2	ROLLER TR ASSY	JC97-01094A	1	O	
100-2-1	MEA RACK-HOLDER TR L	JC97-01020A	1	O	
106	PMO-HOLDER TR L	*	1	X	
107	PMO-BUSH	*	1	X	
108	SPRING-TR_L	*	1	X	
100-2-2	MEA RACK-HOLDER TR R	JC97-01021A	1	O	
107	PMO-BUSH	*	1	X	
109	PMO-HOLDER TR R	*	1	X	
108-1	SPRING-TR_R	*	1	X	
202-1	SPRING-PLATE TR	*	1	X	
100-2-3	MEA RACK-ROLLER TR	*	1	X	
110	MEC-ROLLER TRANSFER	JC75-10954A	1	O	
111	GEAR-TRANSFER	JC66-40947A	1	O	
1022	RING-E	*	1	X	
100-3	ELA HOU-BRKT C/O	*	1	X	
112	MEA RACK-BRKT C/O	*	1	X	
113	PMO-ACTUATOR C/O	*	1	X	
115	SPRING-C/O COM	*	1	X	
116	SPRING-C/O	*	1	X	
117	ELA CBF PWR-5VSWITCH	JC96-01144A	1	O	
118	ELA CBF PWR-24VSWITCH	JC96-01145A	1	O	
1006	SCREW-MACHINE	*	2	X	
1025	CABLE TIE	*	1	X	
100-4	MEA RACK-GUIDE DEV L	JC97-01018A	1	O	
119	PMO-GUIDE DEV L	*	1	X	
120	"SPRING-PS,G/DEV"	*	1	X	
100-5	MEA RACK-GUIDE DEV R	JC97-01019A	1	O	
120	"SPRING-PS,G/DEV"	*	1	X	
121	PMO-GUIDE DEV R	*	1	X	
100-6	ELA HOU-FUSER TER	JC96-01142A	1	O	
122	CBF HARNESS-FUSING	JC39-40522A	1	O	
123	IPR-TERMINAL FU	*	2	X	
124	PMO-HOUSING TERMINAL	*	1	X	
1015	SCREW-TAPTITE	*	2	X	
1025	CABLE TIE	*	1	X	
100-7	ELA HOU-CST SENSER	JC96-01143A	1	O	
125	IPR-BRKT PAPER SIZE	*	1	X	
126	IPR-PUSH PLT SPRING	*	1	X	
127	PBA SUB-CASSETTE	*	1	X	
1001	SCREW-MACHINE	*	2	X	
100-8	ELA HOU-PTL	JC96-01141A	1	O	
128	PMO-COVER QUENCHING	*	1	X	
129	PBA SUB-PTL	*	1	X	
100-9	ELA HOU-SMPS 220V	*	1	X	
130	IPR-SHIELD SMPS	*	1	X	
131	SMPS-220V	JC44-10503A	1	O	
100-9	ELA HOU-SMPS 110V	*	1	X	
130	IPR-SHIELD SMPS	*	1	X	
131	SMPS-110V	JC44-10502A	1	O	
132	PMO-CAP WIRE SUPPORT	*	1	X	

Exploded Views

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
133	SPRING-LINK WIRE	*	1	X	
134	PMO-CAP POWER	*	1	X	
100-11	MEA RACK-EXIT ROLLER	JC97-01034A	4	O	
185	PMO-ROLLER FD R	*	1	X	
186	PMO-ROLLER FD F	*	1	X	
187	PMO-HOLDER EXIT ROLL	*	1	X	
188	SPRING-EXIT ROLL FD	*	1	X	
100-12	MEA RACK-TERMINAL HV	JC97-01035A	3	O	
160	SPRING-CS	*	1	X	
161	ICT-TERMINAL HV	*	1	X	
100-14	UNIT-LSU	JC59-00001A	1	O	
105	ELA HOU-SOCKET CON	JC96-01071A	1	O	
136	IPR-PLATE CST GUIDE	*	1	X	
137	PMO-ACTUATOR FEED	JC72-40984A	1	O	
138	IPR-BAR CROSS BOTTOM	JC70-10958A	2	O	
139	IPR-BRKT DUST	*	1	X	
140	PMO-CAP ACT FEED	*	1	X	
141	PMO-CAP TERMINAL TR	*	1	X	
142	PMO-CAP WIRE	*	1	X	
143	PMO-CAP WIRE CST	*	1	X	
144	PMO-CAP WIRE LSU	*	1	X	
1008	SCREW-TAPTITE	*	8	X	
1008	SCREW-TAPTITE	*	3	X	
1008	SCREW-TAPTITE	*	4	X	
1008	SCREW-TAPTITE	*	7	X	
1008	SCREW-TAPTITE	*	1	X	
1008	SCREW-TAPTITE	*	2	X	
1008	SCREW-TAPTITE	*	4	X	
1008	SCREW-TAPTITE	*	2	X	
1008	SCREW-TAPTITE	*	2	X	
1008	SCREW-TAPTITE	*	4	X	
1008	SCREW-TAPTITE	*	1	X	
1008	SCREW-TAPTITE	*	4	X	
1008	SCREW-TAPTITE	*	1	X	
145	IPR-COVER PCB	JC70-10953A	1	O	
146	FOOT-RUBBER	*	2	X	
147	PMO-FRAME BASE	*	1	X	
148	IPR-GROUND BRKT GEAR	*	1	X	
149	IPR-GROUND FUSER	*	1	X	
150	IPR-GND BAR BOTTOM	*	1	X	
151	IPR-GROUND DU BRKT	*	1	X	
152	IPR-GROUND EXIT ROLL	*	1	X	
153	IPR-GROUND MP CON	*	1	X	
154	IPR-GROUND OPC	*	1	X	
155	IPR-GND SHIELD SMPS	*	1	X	
156	IPR-GUIDE P/FRONT	JC70-10964A	1	O	
157	MEA RACK-GUIDE P/UPP	JC97-01228A	1	O	
158	PMO-HINGE GUIDE R	*	1	X	
159	PMO-HOLDER G/PAPER	*	1	X	
162	IPR-TERMINAL T/R	*	1	X	
164	"GEAR-EXIT/U,ID"	JC66-40211B	4	O	
164-1	"GEAR-EXIT,IDLE(Z17)"	*	1	X	
165	GEAR-P/UP DRIVE	*	2	X	
166	"GEAR-DP,IDLE"	*	1	X	
167	IPR-GROUND FUSER R	*	1	X	


Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
168	PMO-REAR CST ALIGN	*	2	X	
169	IPR-PLATE GRIP CST	*	1	X	
147-1	ICT-SPACER FRAME	JC70-40921A	1	X	
1015	SCREW-TAPTITE	6003-000266	2	X	
1015	SCREW-TAPTITE	6003-000266	4	X	
1015	SCREW-TAPTITE	6003-000266	1	X	
1015	SCREW-TAPTITE	6003-000266	5	X	
1015	SCREW-TAPTITE	*	2	X	
170	IPR-FRAME ICU	*	1	X	
171	IPR-SHIELD ICU	JC70-10930A	1	O	
175	FAN-DC	3103-001047	1	O	
175-1	SCREW-TAPTITE	*	2	X	
176	CBF HARNESS-LSU	JC39-40523A	1	O	
177	CBF HARNESS-CASSETTE	JC39-40524A	1	O	
178	CBF HARNESS-SCF1	JC39-40527A	1	O	
179	CBF HARNESS-JOINT	JC39-40605A	1	O	
180	CBF HARNESS-VIDEO	JC39-40530A	1	O	
181	CBF HARNESS-SMPS	JC39-40532A	1	O	
182	CBF HARNESS-MP GND	JC39-40538A	2	O	
183	PMO-GUIDE EXIT FD	*	1	X	
183-1	SPRING-CLUTCH	*	2	X	
184	MEC-BRUSH	JC75-10923A	1	O	
189	GEAR-EXIT	JC66-40209A	1	O	
190	"MEC-BEARING,EXIT"	*	1	X	
191	BEARING-E/UP R	*	1	X	
192	RCT-ROLLER EXIT FD	JC73-30906A	1	O	
193	CBF HARNESS-DPLX GND	JC39-40537A	1	O	
195	"PMO-LEVER STACKING1"	JC72-41188D	1	O	
196	"PMO-LEVER STACKING2"	JC72-41228D	1	O	
197	PMO-LEVER SEESAW	JC72-41189A	1	O	
198	PHOTO-INTERRUPTER	*	1	X	
604	PMO-ACTUATOR REAR DP	JC72-40974C	1	O	
624	ICT-BRKT SUPPORTER2	*	1	X	
810	PMO-CLEANER LSU	JC72-41022A	1	O	
837	PMO-STRIFE	JC72-41004C	1	O	
1028	SCREW-TAPTITE	*	2	X	
1008	SCREW-TAPTITE	*	1	X	
1009	SCREW-TAPTITE	*	3	X	
1010	SCREW-MACHINE	*	1	X	
1011	SCREW-TAPTITE	*	3	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	4	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	1	X	
1015	SCREW-TAPTITE	*	3	X	
1017	SCREW-TAPTITE	*	2	X	
1017-1	SCREW-TAPTITE	*	1	X	
1020	RING-CS	*	8	X	
1026	CABLE CLAMP	*	1	X	
1028	SCREW-MACHINE	*	2	X	
1030	SCREW-TAPTITE	*	1	X	

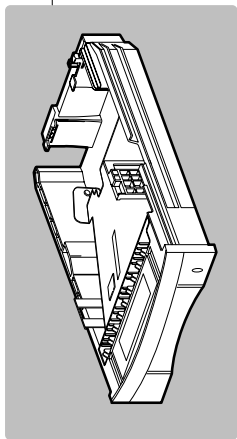

6-3-2. Cassette Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
201	MEA-RACK FEEDER CST	JC97-01023C	1	O	
202	PMO-BUSH K/UP	*	2	X	
203	PMO-CAP PLATE K/UP	*	1	X	
204	PMO-COVER GUIDE EXT	*	1	X	
205	PMO-FRAME CASSETTE	*	1	X	
206	PMO-GUIDE EXT CST	*	1	X	
207	PMO-GUIDE PAPER	*	1	X	
208	PMO-GUIDE PAPER SIZE	*	1	X	
209	PMO-GUIDE SIDE CST	*	1	X	
210	PMO-LEVER PAPER	*	1	X	
211	PMO-LINK LEVER	*	1	X	
212	PMO-ROLLER FD R	*	1	X	
213	PMO-SIDE GUIDE EXT	*	1	X	
214	PMO-SUB GUIDE CAST	*	1	X	
215	PMO-WINDOW PAPER	*	1	X	
216	IPR-FINGER	*	1	X	
217	IPR-GUIDE EXT LOCK	*	1	X	
218	IPR-GUIDE PAPER SCF	*	1	X	
219	IPR-GUIDE PLT PAPER	*	2	X	
220	IPR-PLATE KNOCK UP	*	1	X	
221	IPR-PLATE SPR LOCK	*	1	X	
222	IPR-PLATE SUB K/UP	*	1	X	
223	IPR-SPR PLATE G/SIDE	*	1	X	
224	SPRING-LEVER	*	1	X	
225	SPRING-PLATE K/UP	*	1	X	
226	SPRING-SUB PLATE	*	2	X	
227	RPR-PAD CST	*	1	X	
228	ICT-SHAFT SPR K/UP	*	1	X	
230	LABEL(R)-CST REAR	*	1	X	
229	LABEL(R)-INSTRUCTION	*	1	X	
970	"SPRING-LOCKER,PLATE"	*	1	X	
971	PMO-LOCKER PLATE	*	1	X	
1001	SCREW-MACHINE	*	1	X	
1007	SCREW-TAPTITE	*	1	X	
1007	SCREW-TAPTITE	*	2	X	
1007	SCREW-TAPTITE	*	1	X	
1007	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	1	X	
1023	RING-E	*	1	X	


Exploded Views
6-4-1. MP Tray Ass'y

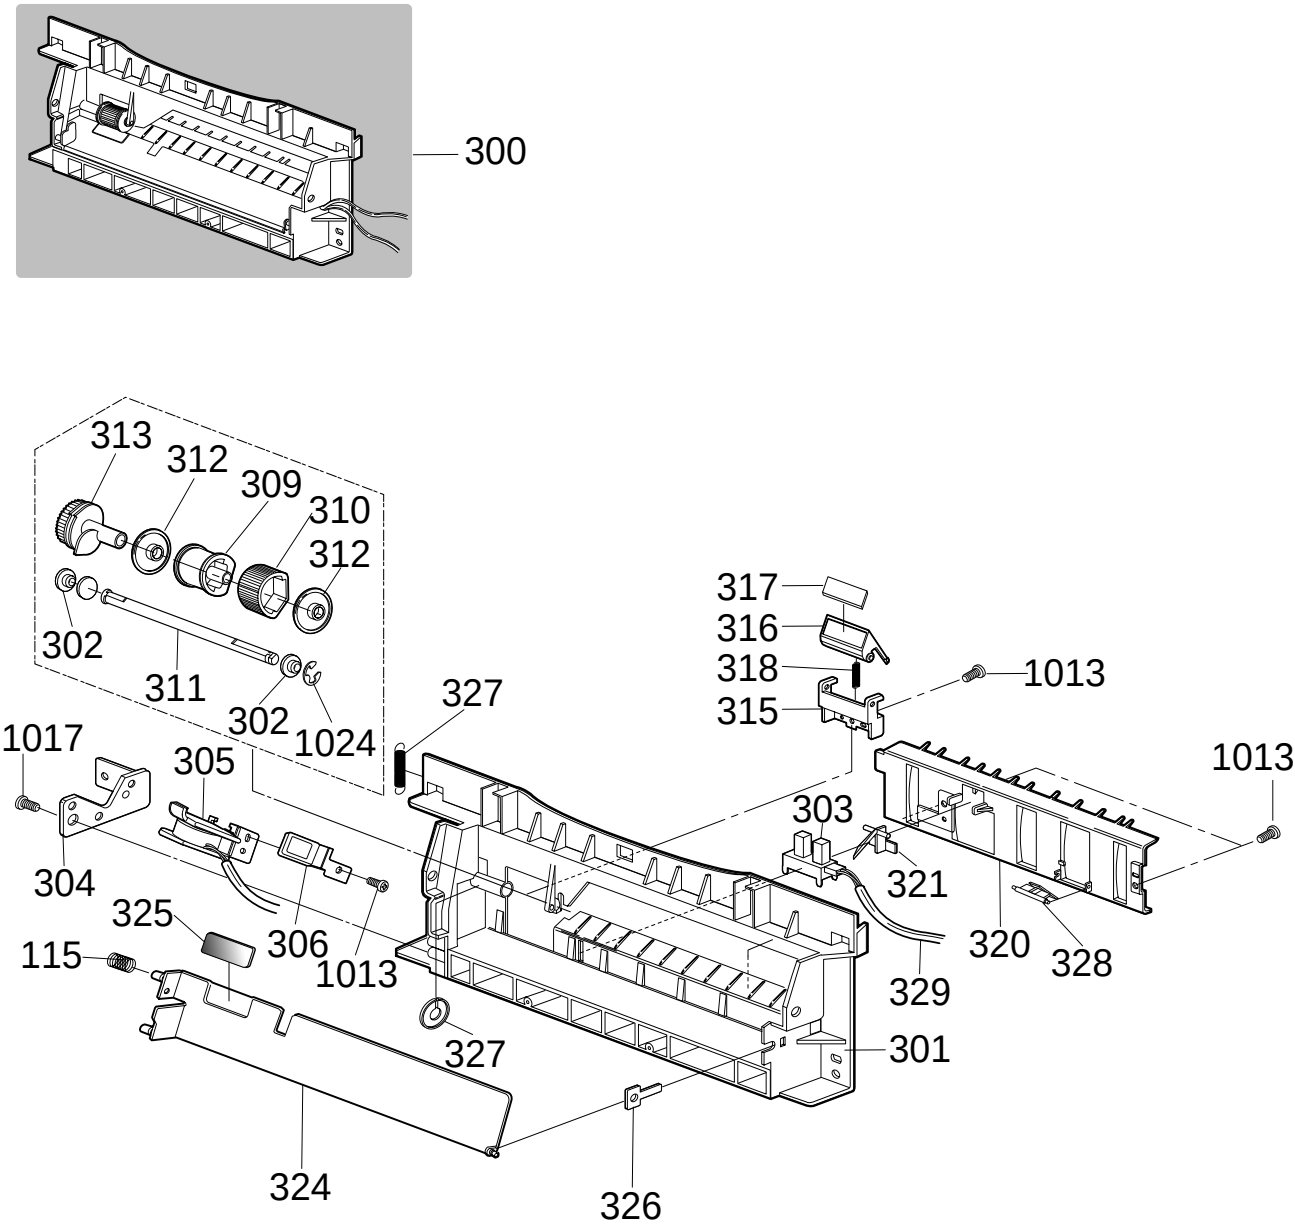


6-4-2. MP Tray Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
300	ELA HOU-MP TRAY	JC96-01055A	1	O	
115	SPRING-C/O COM	*	1	X	
301	PMO-FRAME MP	*	1	X	
302	BEARING-PICK UP	*	2	X	
303	PHOTO-INTERRUPTER	*	1	X	
304	IPR-BKT SOLENOID MP	*	1	X	
305	SOLENOID-MP	*	1	X	
306	PMO-LIMIT SOLENOID	*	1	X	
309	PMO-HOUSING P/UP MP	*	1	X	
310	RPR-RUBBER P/UP MP	*	1	X	
311	ICT-SHAFT PICK UP MP	*	1	X	
312	PMO-IDLE PICK UP MP	*	2	X	
313	GEAR-CAM	*	1	X	
315	PMO-BKT HOLDER MP	*	1	X	
316	PMO-HOLDER PAD MP	*	1	X	
317	RPR-FRICTION PAD MP	*	1	X	
318	SPRING-F/P MP	*	1	X	
320	PMO-SUB GUIDE MP	*	1	X	
321	PMO-ACTUATOR EMPTY	*	1	X	
322	PMO-ACTUATOR PAPER	*	1	X	
324	IPR-K/UP PLATE MP	*	1	X	
325	RPR-PAD KNOCK UP MP	*	1	X	
326	PMO-BUSHING K/UP MP	*	1	X	
327	SPRING-KNOCK UP MP	*	1	X	
328	PMO-GUIDE RING	*	1	X	
329	CBF HARNESS-MP	*	1	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	2	X	
1015	SCREW-TAPTITE	*	1	X	
1024	RING-E	*	1	X	

Exploded Views
6-5-1. Pick Up Ass'y

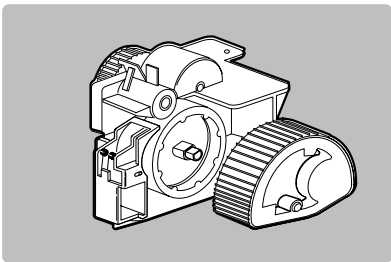


400

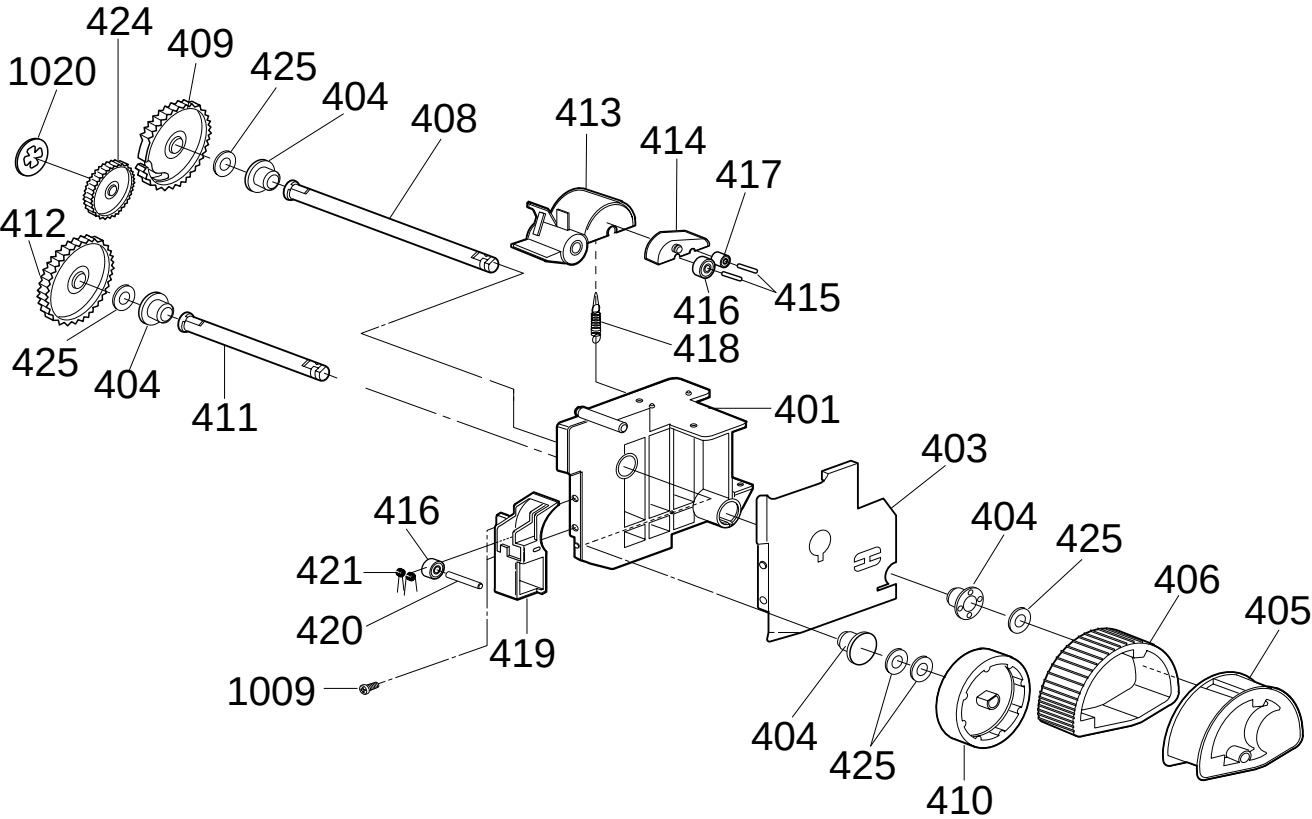

6-5-2. Pick Up Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
400	MEA RACK-PICK UP	JC97-01039A	1	O	
401	PMO-FRAME FEED	*	1	X	
403	IPR-PAPER GUIDE FEED	*	1	X	
404	BEARING-PICK UP	*	4	X	
405	PMO-HOUSING PICK UP	*	1	X	
406	RPR-RUBBER PICK UP	*	1	X	
407	ICT-SUB SHAFT P/UP	*	1	X	
408	ICT-SHAFT PICK UP	*	1	X	
409	GEAR-PICK UP	*	1	X	
410	PMO-FEED ROLL DRIVE	*	1	X	
411	ICT-SHAFT FEED	*	1	X	
412	GEAR-FEED	*	1	X	
413	PMO-HOLDER FEED S	*	1	X	
414	PMO-SUB HOLDER FEED	*	1	X	
415	IPR-SHAFT FEED IDLER	*	2	X	
416	PMO-ROLLER FEED L	*	2	X	
417	PMO-ROLLER FEED S	*	1	X	
418	SPRING-FEED SMALL	*	1	X	
419	PMO-HOLDER FEED L	*	1	X	
420	ICT-SHAFT IDLE LARGE	*	1	X	
421	SPRING-FEED LARGE	*	1	X	
424	GEAR-P/UP DRIVE	*	1	X	
425	WASHER-PLAIN	*	5	X	
1009	SCREW-TAPTITE	*	1	X	
1020	RING-CS	*	1	X	


Exploded Views
6-6-1. Fuser Ass'y

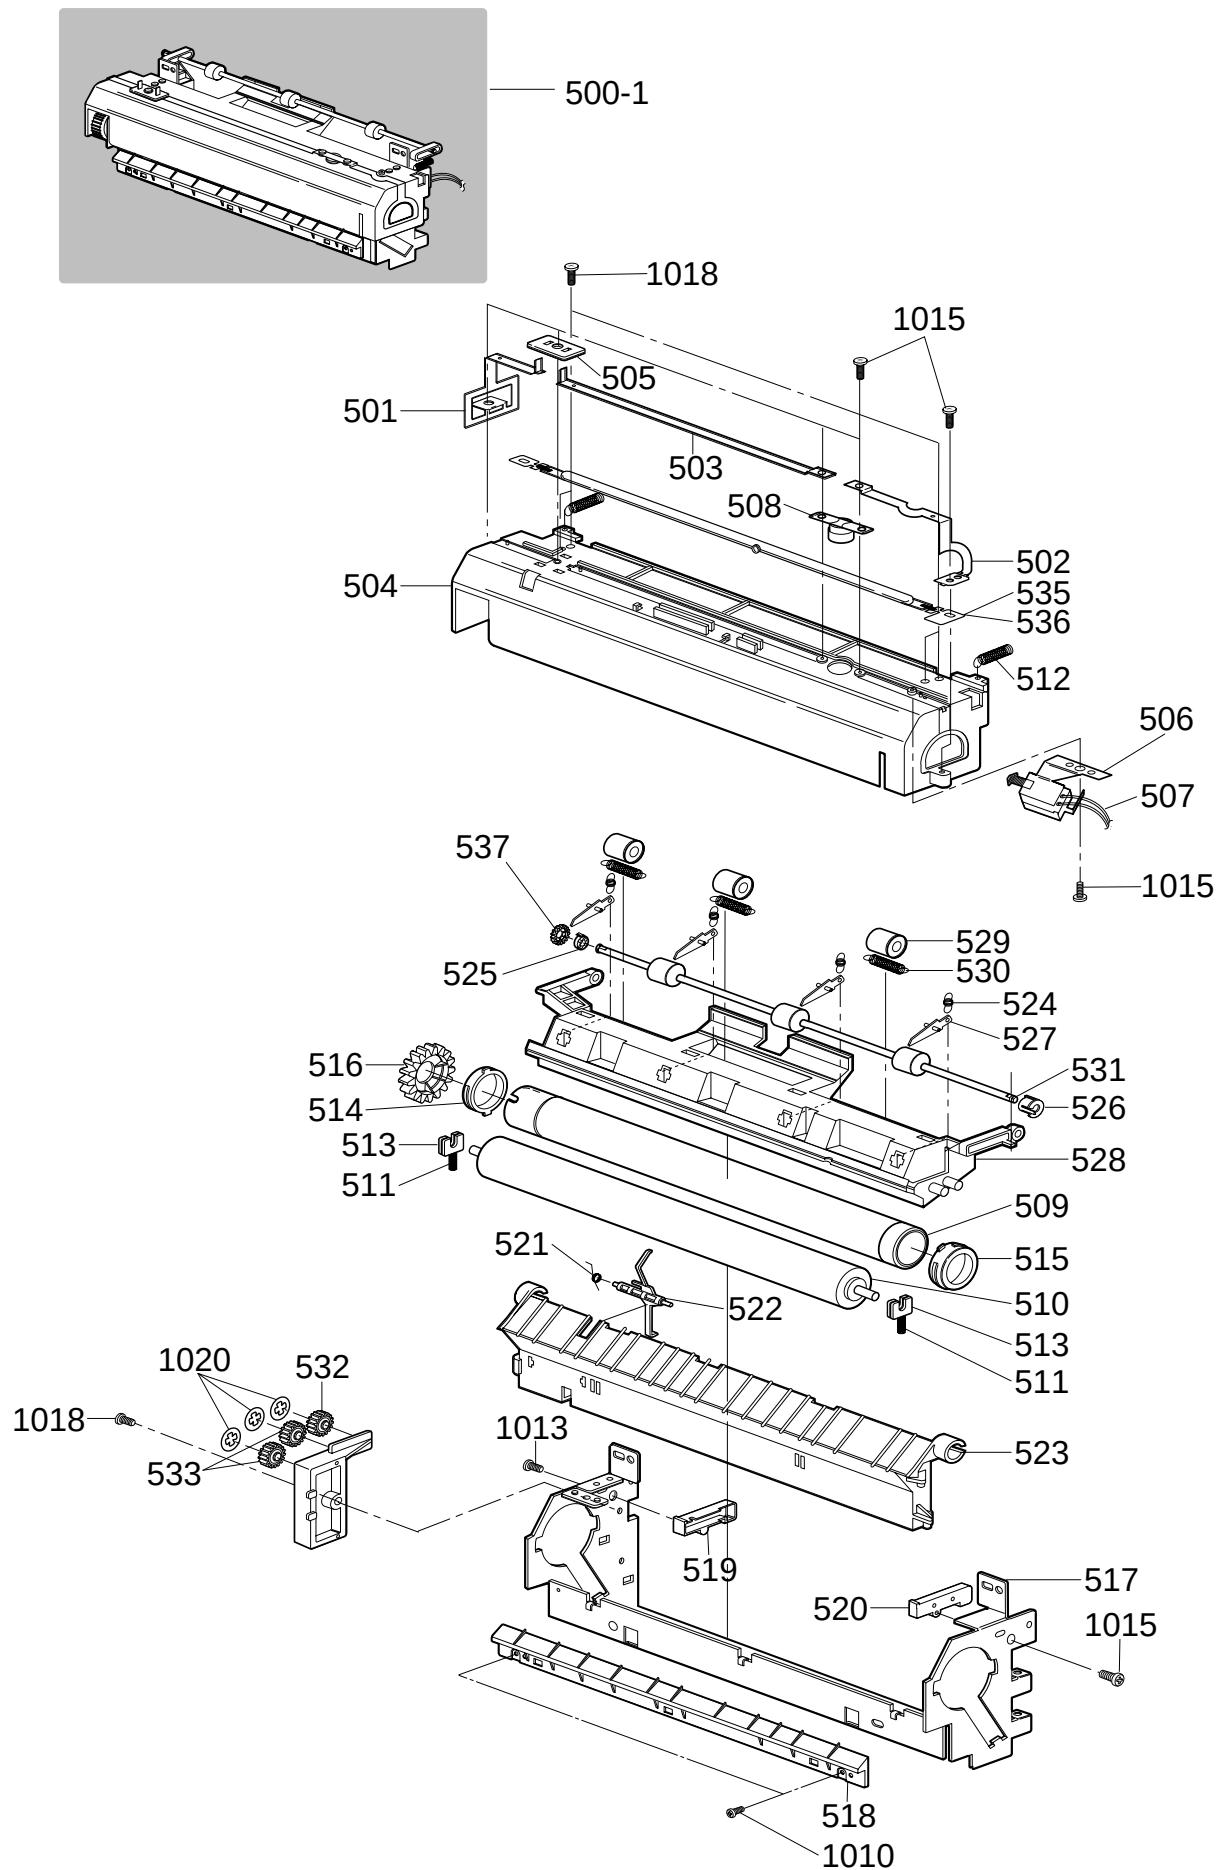

6-6-2. Fuser Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
500-1	ELA HOU-FUSER 110V	JC96-01072A	1	O	
500-1	ELA HOU-FUSER 220V	JC96-01062A	1	O	
501	IPR-ELECTRODE FU/L	*	1	X	
502	IPR-ELECTRODE FU R	*	1	X	
503	IPR-ELECTRODE M	*	1	X	
504	PMO-COVER FUSER UP	*	1	X	
505	PMO-CAP TERMINAL	*	1	X	
506	IPR-SPR THERMISTOR	*	1	X	
507	THERMISTOR-NTC	1404-001121	1	O	
508	THERMOSTAT-150C	4712-000001	1	O	
509	RCT-ROLLER HEAT	JC73-30904A	1	O	
510	RCT-ROLLER PRESSURE	JC73-30903A	1	O	
511	SPRING-P/R	*	2	X	
512	SPRING-RAIL	*	2	X	
513	BEARING-PRESSURE/R	JC66-10901A	2	O	
514	BEARING-H/R L	JC66-10902A	1	O	
515	BEARING-H/R R	JC66-10903A	1	O	
516	GEAR-FUSER	JC66-40913A	1	O	
517	IPR-FRAME FUSER	*	1	X	
518	PMO-GUIDE FRONT	*	1	X	
519	PMO-RAIL FUSER L	*	1	X	
520	PMO-RAIL FUSER R	*	1	X	
521	SPRING-ACTUATOR	*	1	X	
522	PMO-ACTUATOR EXIT	*	1	X	
523	PMO-GUIDE REAR	*	1	X	
524	SPRING-SAPERATION	*	4	X	
525	BEARING-EXIT FU L	*	1	X	
526	BEARING-EXIT FU	*	1	X	
527	PMO-GUIDE CLAW	*	4	X	
528	PMO-COVER FUSER LOW	*	1	X	
529	ROLLER-EXIT	*	3	X	
530	SPRING-FUSER EXIT	*	3	X	
531	RCT-ROLLER EXIT FU	*	1	X	
532	"GEAR-EXIT/U,ID"	*	2	X	
533	"GEAR-EXIT,IDLE(Z17)"	*	2	X	
534	PMO-BRKT FUSER GEAR	*	1	X	
535	LAMP-HALOGEN 115V	4713-001073	1	O	
536	LAMP-HALOGEN 220V	4713-001072	1	O	
537	GEAR-EXIT	*	1	X	
1010	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	1	X	
1013	SCREW-TAPTITE	*	2	X	
1016	SCREW-TAPTITE	*	1	X	
1016	SCREW-TAPTITE	*	3	X	
1020	RING-CS	*	4	X	


Exploded Views
6-7-1. Shield Ass'y

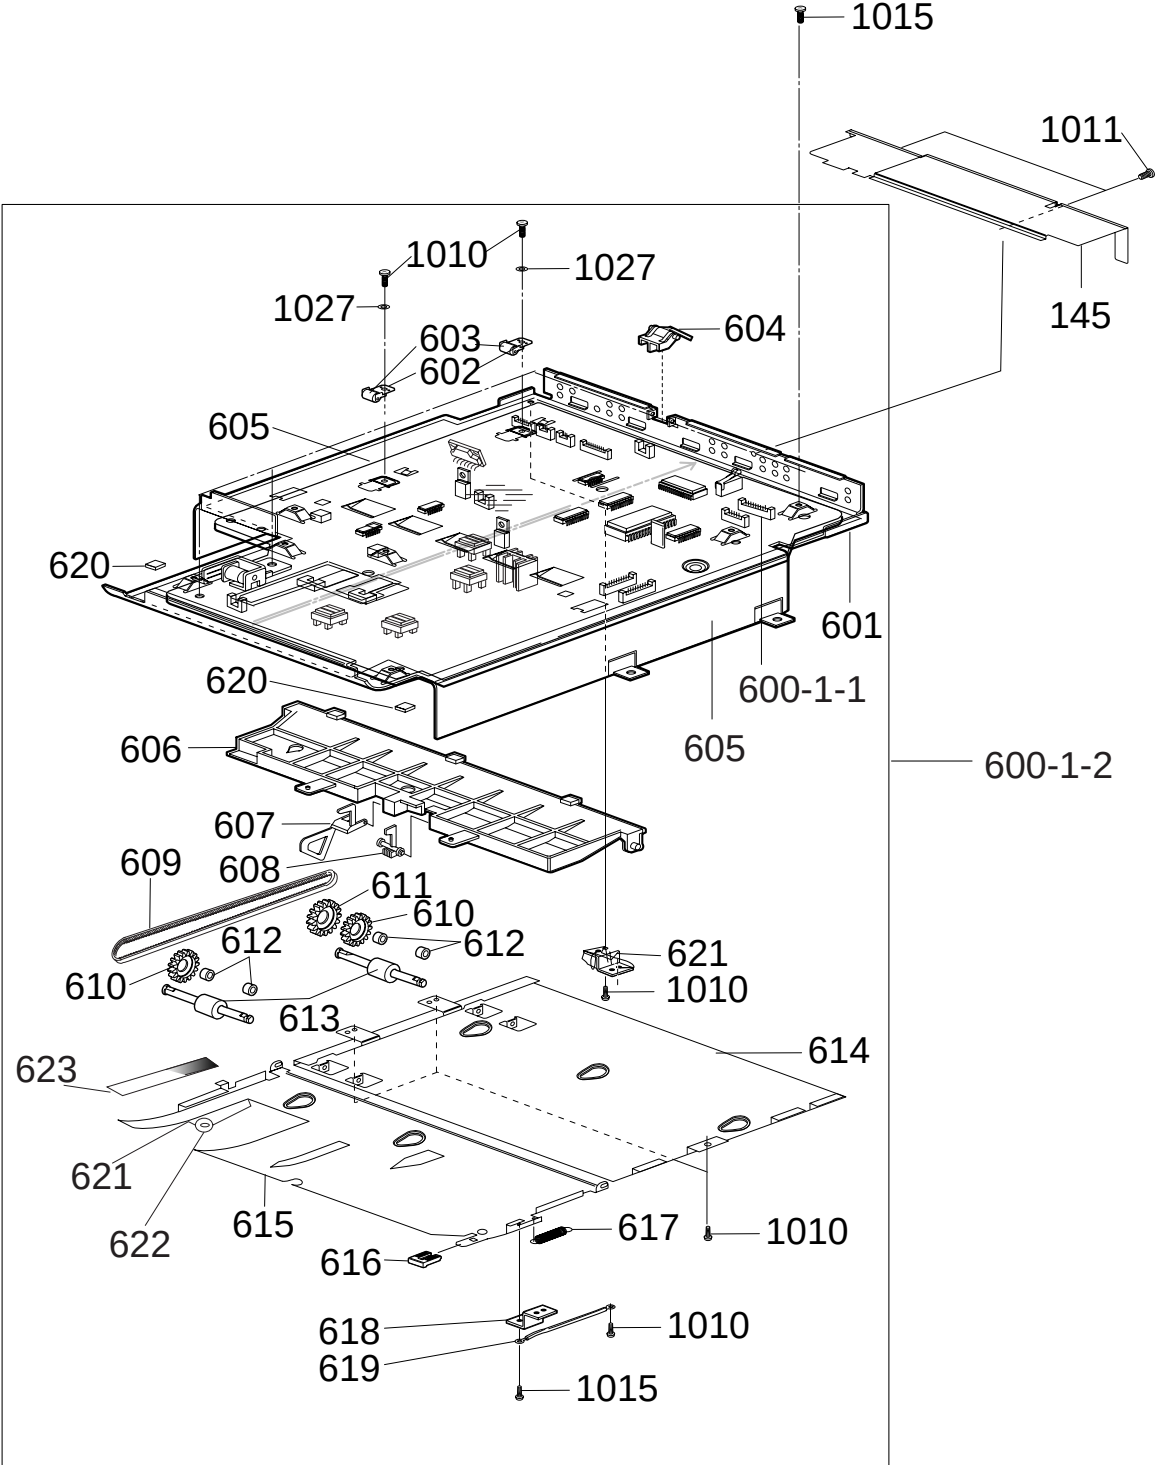

6-7-2. Shield Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
600-1	ELA HOU-ENGINE	JC96-01403B	1	O	
600-1-1	PBA MAIN-ENGINE	JC92-01100A	1	O	
600-1-2	MEA RACK-SHIELD PCU	JC97-01040B	1	O	
601	IPR-SHIELD PCB	*	1	X	
602	IPR-SPRING UPPER DP	*	2	X	
603	PMO-ROLLER UPPER DP	*	2	X	
606	PMO-GUIDE UPPER DP	*	1	X	
607	PMO-ACTUATOR EMPTY	*	1	X	
608	PMO-ACTUATOR FRONT DP	*	1	X	
609	BELT-TIMMING	*	1	X	
610	PMO-PULLEY DUPLEX	*	2	X	
611	GEAR-DUPLEX	*	1	X	
612	PMO-BEARING LARGE DP	*	4	X	
613	RCT-ROLLER LOWER DP	*	2	X	
614	IPR-GUIDE DUPLEX	*	1	X	
615	IPR-GUIDE FRONT DP	*	1	X	
616	PMO-LEVER OPEN DP	*	1	X	
617	SPRING-FRONT DP	*	1	X	
618	IPR-BRKT SUPPORTER	*	1	X	
619	CBF HARNESS-DPLX GND	*	1	X	
620	RPR-CUSHION GUIDE	*	1	X	
621	IPR-BRKT IDLE ROLLER	*	1	X	
622	PMO-IDLE ROLLER	*	1	X	
623	IPR-SHEET FRONT DP	*	1	X	
1010	SCREW-TAPTITE	*	2	X	
1010	SCREW-TAPTITE	*	1	X	
1010	SCREW-TAPTITE	*	4	X	
1015	SCREW-TAPTITE	*	3	X	
605	PPR-INSULATOR PCU	*	1	X	


Exploded Views
6-8-1. Bracket Duplex Ass'y

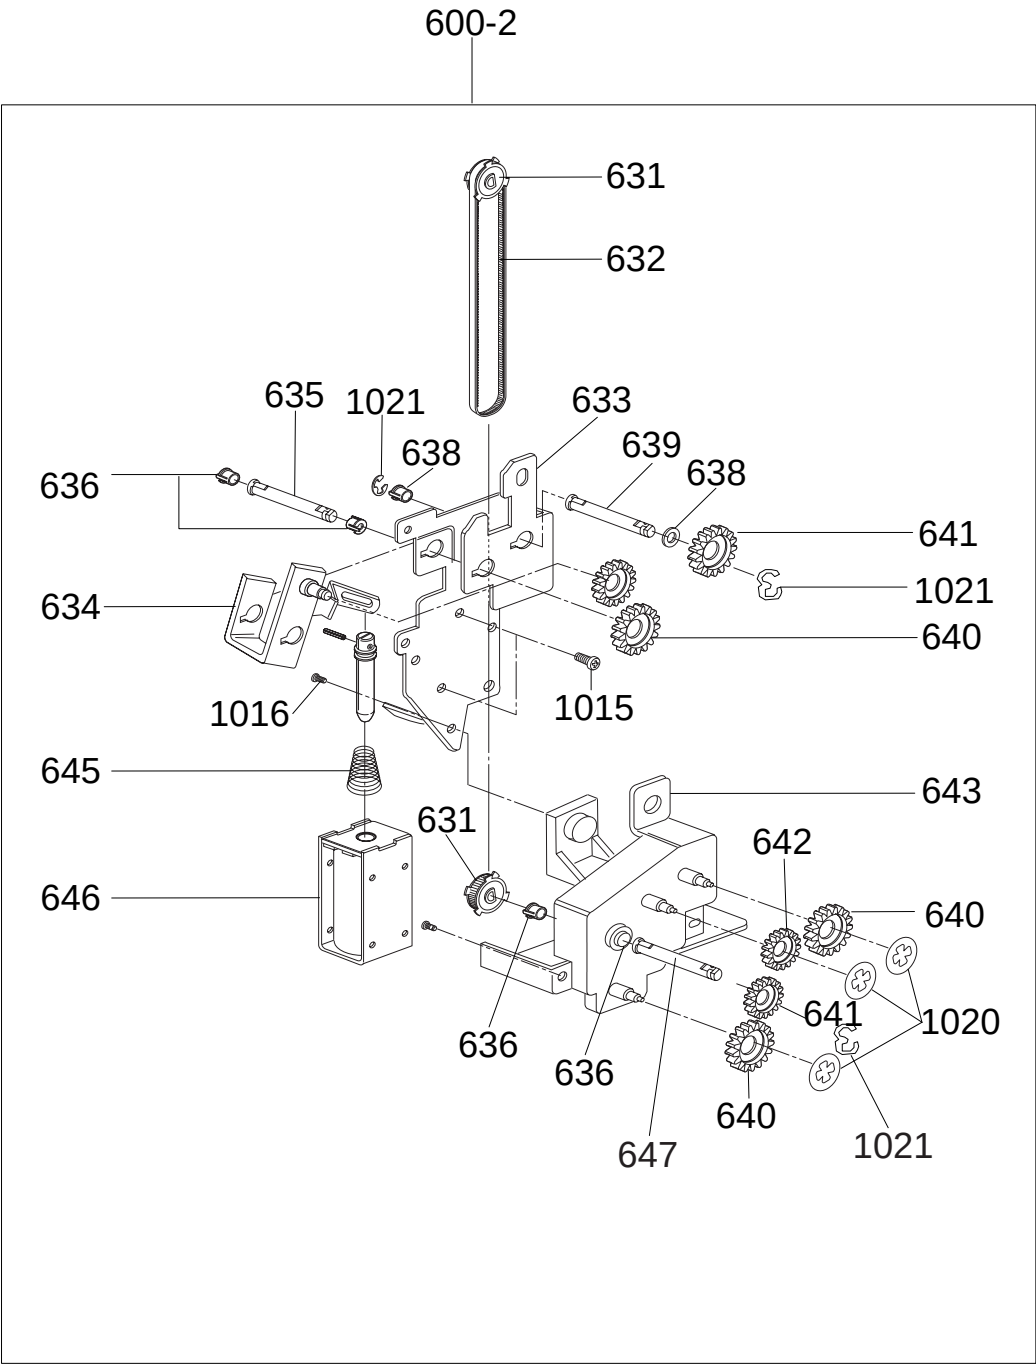

6-8-2. Bracket Duplex Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
600-2	ELA HOU-BRKT DUPLEX	JC96-01056A	1	O	
631	PMO-PULLEY DUPLEX	*	2	X	
632	BELT-TIMMING	*	1	X	
633	IPR-BRKT DUPLEX	*	1	X	
634	IPR-LINK DUPLEX	*	1	X	
635	ICT-SHAFT SWING	*	1	X	
636	PMO-BEARING LARGE DP	*	4	X	
638	"PMO-BEARING SMALL,DP"	*	2	X	
639	ICT-SHAFT BELT	*	1	X	
640	"GEAR-DP,IDLE"	*	2	X	
641	GEAR-DUPLEX	*	2	X	
642	"GEAR-EXIT/U,ID"	*	1	X	
643	PMO-BRKT GEAR LOWER	*	1	X	
645	SPRING-SOLENOID DP	*	1	X	
646	SOLENOID-DUPLEX	*	1	X	
647	ICT-SHAFT BELT2	*	1	X	
1015	SCREW-TAPTITE	*	1	X	
1015	SCREW-TAPTITE	*	2	X	
1020	RING-CS	*	3	X	
1021	RING-E	*	3	X	
1029	SCREW-TAPTITE	*	1	X	

Exploded Views
6-9-1. Bracket Motor Ass'y

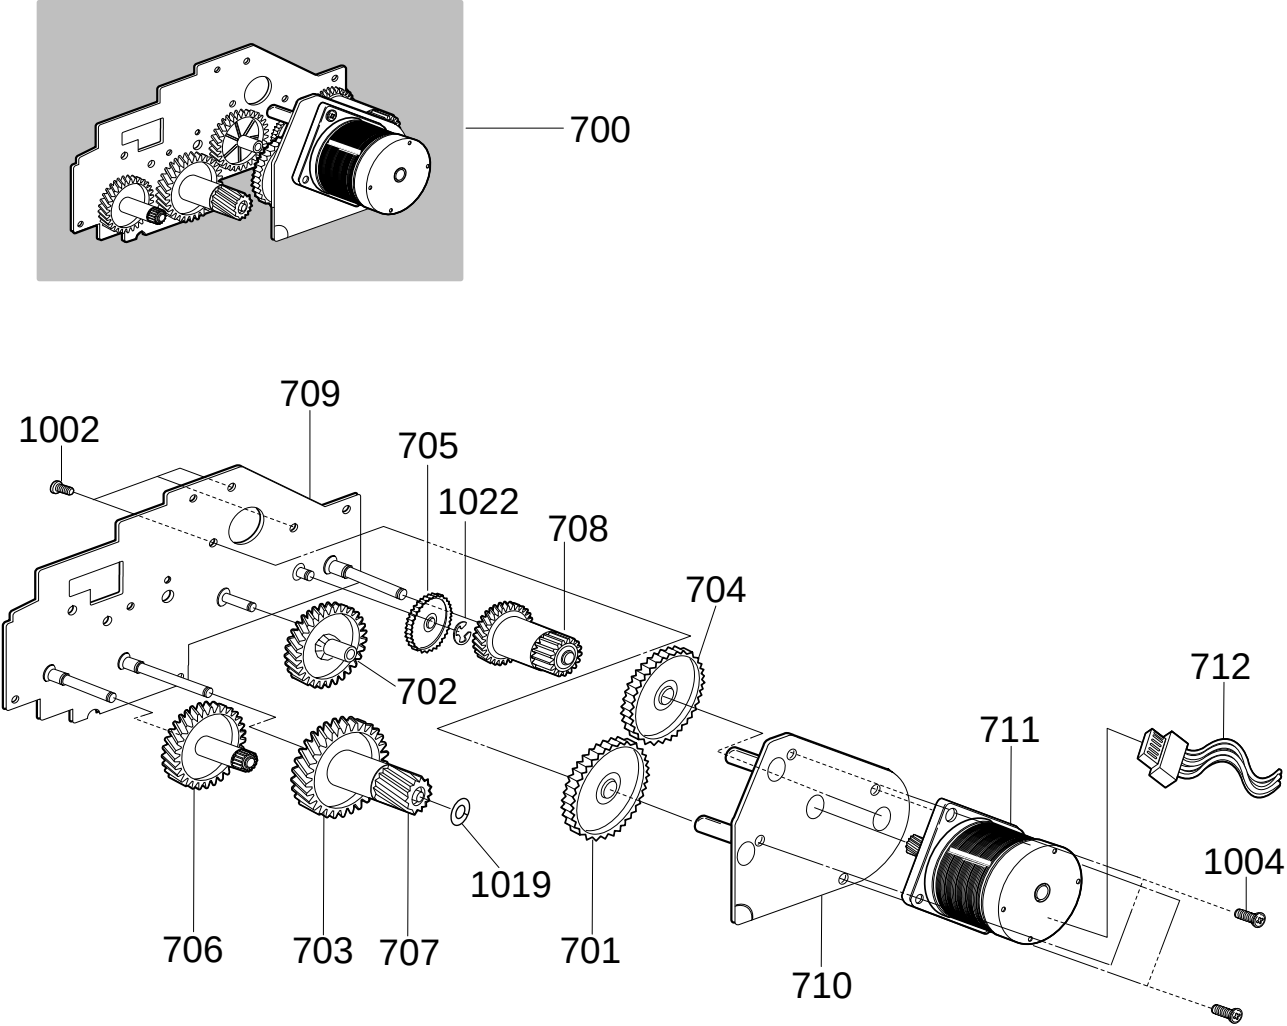


6-9-2. Bracket Motor Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
700	ELA HOU-BRKT MOTOR	JC96-01058B	1	O	
701	"GEAR-IDLE 142,X"	*	1	X	
702	"GEAR-66/25,X"	*	1	X	
703	GEAR-OPC DRIVE(12)	*	1	X	
704	GEAR-125/18	*	1	X	
705	GEAR-IDLE FU	*	1	X	
706	GEAR-FEED DRIVE	*	1	X	
707	GEAR-OPC DRV2	*	1	X	
708	GEAR-FUSER DRIVE	*	1	X	
709	IPR-BRKT GEAR	*	1	X	
710	"ICT-BRK MOTOR,X"	*	1	X	
711	MOTOR-STEP	3101-001152	1	O	
1002	SCREW-MACHINE	*	3	X	
1004	SCREW-MACHINE	*	2	X	
1019	WASHER-PLAIN	*	1	X	
1019	WASHER-PLAIN	*	1	X	
1022	RING-E	*	1	X	

Exploded Views

6-10-1. Frame SCF Ass'y

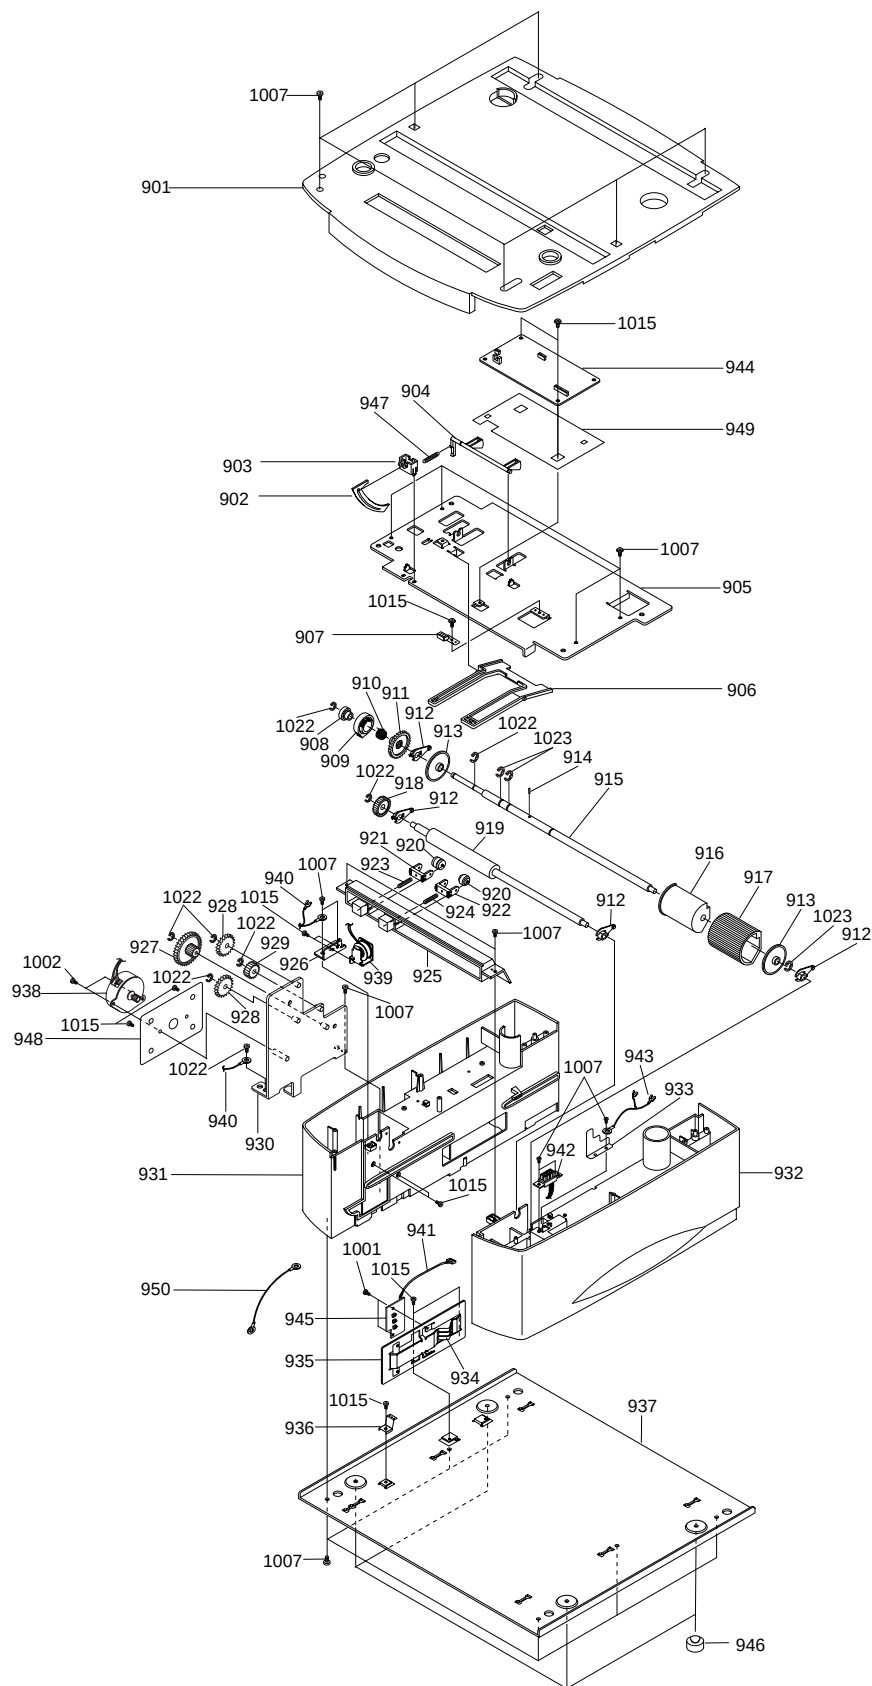


6-10-2. Frame SCF Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
900	MEA RACK-SCF ASS'Y	*	1	X	
900-1	MEA RACK-FRAME SCF	*	1	X	
901	PMO FRAME TOP	*			
902	PMO-SENSOR LEVER	*	1	X	
903	PMO-SENSOR FRAME	*	1	X	
904	PMO-ARM ENV	*	1	X	
905	IPR-CASE TOP	*	1	X	
906	PMO-GUIDE ENV	*	1	X	
907	IPR-GROUND TOP	*	1	X	
908	PMO-HUB_CLUTCH	*	1	X	
909	PMO-COLLAR_CLUTCH_PI	*	1	X	
910	"SPRING-TS, CLUTCH"	*	1	X	
911	GEAR-P/UP OPTION	*	1	X	
912	PMO-BEARING SHAFT	*	3	X	
912	PMO-BEARING SHAFT	*	1	X	
913	PMO-IDLE PICKUP	*	1	X	
914	"ICT-PIN_PARELLED,P/U"	*	1	X	
915	ICT-SHAFT PICK UP	*	1	X	
916	PMO-P/UP HOUSING	*	1	X	
917	RPR-PICK UP ROLL	*	1	X	
918	GEAR-FEED (SCF)	*	1	X	
919	RPR-FEED ROLLER	*	1	X	
920	PMO-IDLE FEED	*	2	X	
921	PMO-IDLE FRAME	*	1	X	
922	PMO-IDLE FRAME1	*	1	X	
923	SPRING-IDLE 1	*	1	X	
924	SPRING-IDLE 2	*	1	X	
925	PMO-GUIDE PAPER2	*	1	X	
926	IPR-SCF SOLENOID	*	1	X	
927	GEAR-IDLE(SCF)	*	1	X	
928	GEAR-IDLE(Z=30)	*	2	X	
929	GEAR-IDLE 19	*	1	X	
930	IPR-SCF MOTOR	*	1	X	
931	PMO-FRAME LEFT	*	1	X	
932	PMO-FRAME RIGHT	*	1	X	
933	IPR-GROUND FEED	*	1	X	
934	IPR-PUSH PLT SPRING	*	1	X	
935	IPR-BRKT PAPER SIZE	*	1	X	
936	IPR-GROUND BOTTOM	*	1	X	
937	IPR-CASE BOTTOM	*	1	X	
938	MOTOR-SCF	*	1	X	
939	SOLENOID-MAGNET	*	1	X	
940	CBF HARNESS-SCF MOT	*	1	X	
941	CBF HARNESS-SCF CST	*	1	X	
942	CBF HARNESS-SCF OPT	*	1	X	
943	CBF HARNESS-SCF FEED	*	1	X	
944	PBA SUB-SCF OPT	*	1	X	
945	PBA SUB-CASSETTE	*	1	X	
946	FOOT-RUBBER SCF	*	4	X	
947	"SPRING-IDLE,SCF"	*	1	X	
948	IPR-SCF MOTOR 1	*	1	X	
949	IPR-INSULATOR SCF	*	1	X	
950	CBF HARNESS-SCF GND	*	1	X	
1001	SCREW-MACHINE	*	2	X	
1002	SCREW-MACHINE	*	3	X	

Exploded Views

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
1007	SCREW-TAPTITE	*	2	X	
1007	SCREW-TAPTITE	*	2	X	
1007	SCREW-TAPTITE	*	6	X	
1007	SCREW-TAPTITE	*	1	X	
1007	SCREW-TAPTITE	*	2	X	
1007	SCREW-TAPTITE	*	6	X	
1007	SCREW-TAPTITE	*	2	X	
1007	SCREW-TAPTITE	*	4	X	
1015	SCREW-TAPTITE	*	1	X	
1015	SCREW-TAPTITE	*	1	X	
1015	SCREW-TAPTITE	*	2	X	
1015	SCREW-TAPTITE	*	2	X	
1015	SCREW-TAPTITE	*	2	X	
1015	SCREW-TAPTITE	*	2	X	
1015	SCREW-TAPTITE	*	1	X	
1015	SCREW-TAPTITE	*	2	X	
1015	SCREW-TAPTITE	*	4	X	
1022	RING-E	*	1	X	
1022	RING-E	*	4	X	
1022	RING-E	*	2	X	
1023	RING-E	*	3	X	

6-11-1. Cassette SCF Ass'y

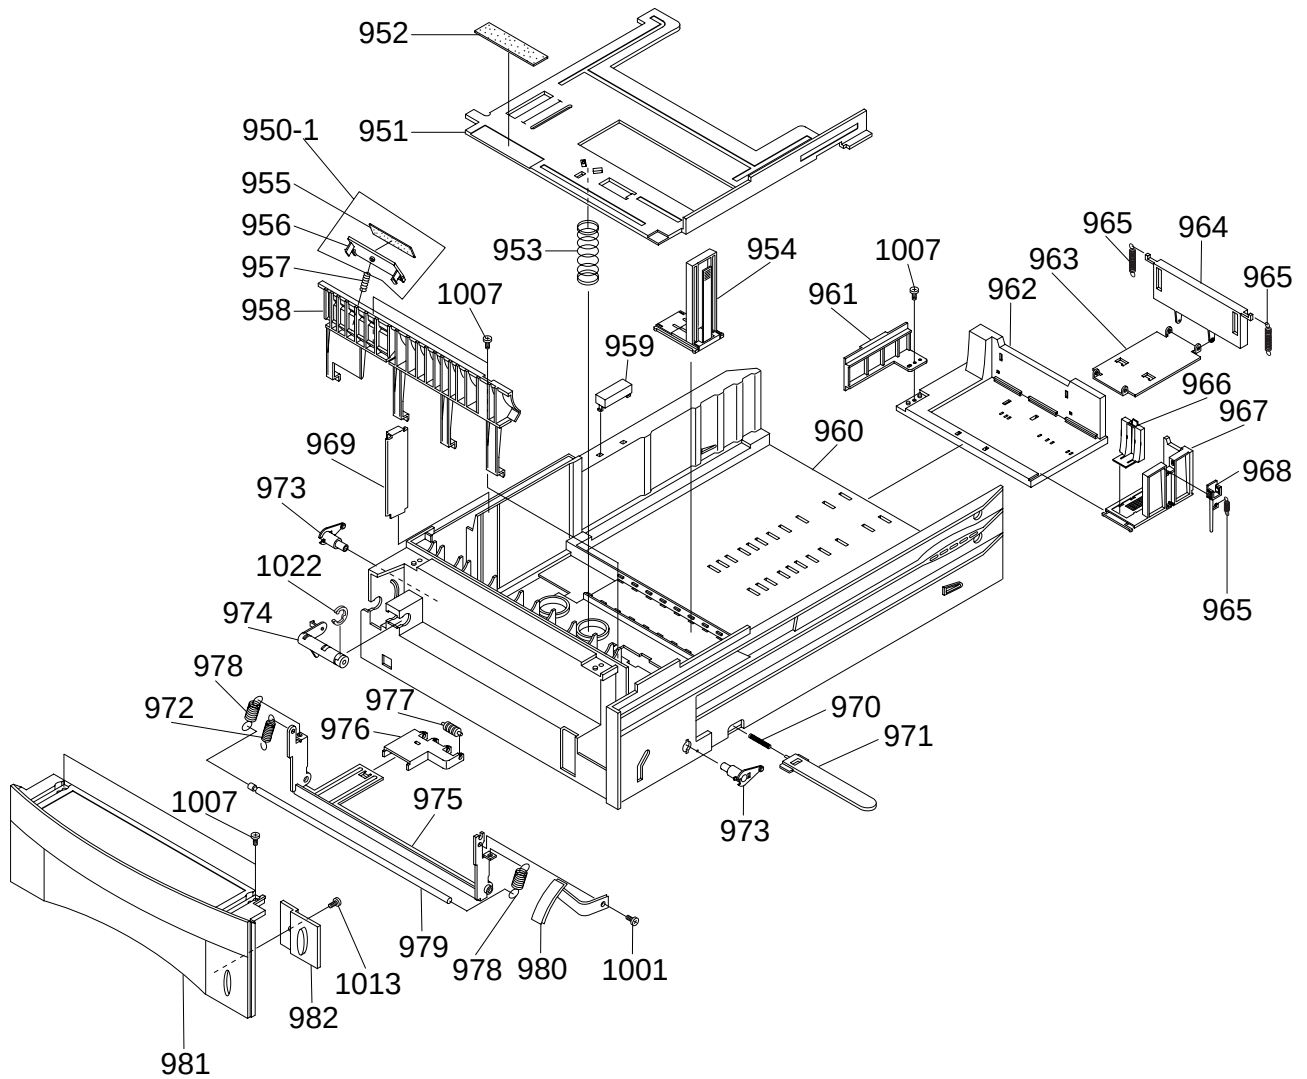

6-11-2. Cassette SCF Ass'y Parts List

Location NO.	Description	SEC.Code	Q'ty	A/S	Remark
950	MEA RACK-CAST SCF	*	1	X	
951	IPR-KNOCK UP(SCF)	*	1	X	
952	RPR-CORK KNOCKUP	*	1	X	
953	SPRING-SCF K/UP	*	1	X	
954	PMO-GUIDE SIDE	*	1	X	
955	RPR-CORK PAD	*	1	X	
956	PMO-FRAME PAD	*	1	X	
957	SPRING-PAD	*	1	X	
958	PMO-GUIDE PAPER1	*	1	X	
959	PMO-DUMMY ENV	*	1	X	
963	IPR-PLATE LEVER	*	1	X	
964	PMO-LEVER REAR	*	1	X	
965	"SPRING-IDLE,SCF"	*	3	X	
966	PMO-GUIDE REAR3	*	1	X	
967	PMO-GUIDE REAR2	*	1	X	
968	PMO-GUIDE LOCK	*	1	X	
969	IPR-PLATE PAPER	*	1	X	
970	"SPRING-LOCKER,PLATE"	*	1	X	
971	PMO-LOCKER PLATE	*	1	X	
972	SPRING-SCF LEVER	*	1	X	
973	PMO-BUSH K/UP	*	2	X	
974	PMO-LINK LEVER	*	1	X	
975	IPR-PLATE SUB K/UP	*	1	X	
976	PMO-CAP PLATE K/UP	*	1	X	
977	PMO-ROLLER FD R	*	1	X	
978	SPRING-SUB PLATE	*	2	X	
979	ICT-SHAFT SPR K/UP	*	1	X	
980	PMO-LEVER PAPER S	*	1	X	
981	PMO-SUB GUIDE CAST	*	1	X	
982	PMO-WINDOW PAPER	*	1	X	
1001	SCREW-MACHINE	*	1	X	
1007	SCREW-TAPTITE	*	1	X	
1007	SCREW-TAPTITE	*	2	X	
1007	SCREW-TAPTITE	*	2	X	
1013	SCREW-TAPTITE	*	1	X	
1022	RING-E	*	1	X	
950-1	MEA-RACK FRAME PAD	*	1	X	