

PROCESSOR TECHNOLOGY CORPORATION

Sol-PC SINGLE BOARD TERMINAL COMPUTER™

SECTION III

- (✓) Step 45. Using four 4-40 x $\frac{1}{4}$ binder head screws, lockwashers and hex nuts, install two brackets (Sol-1040) for personality module in area to right of J5. Position brackets over the mounting holes as shown in Figure 3-11. Insert screws from front (component) side of board, place lockwasher on each screw on back (solder) side of board, start nuts and tighten.

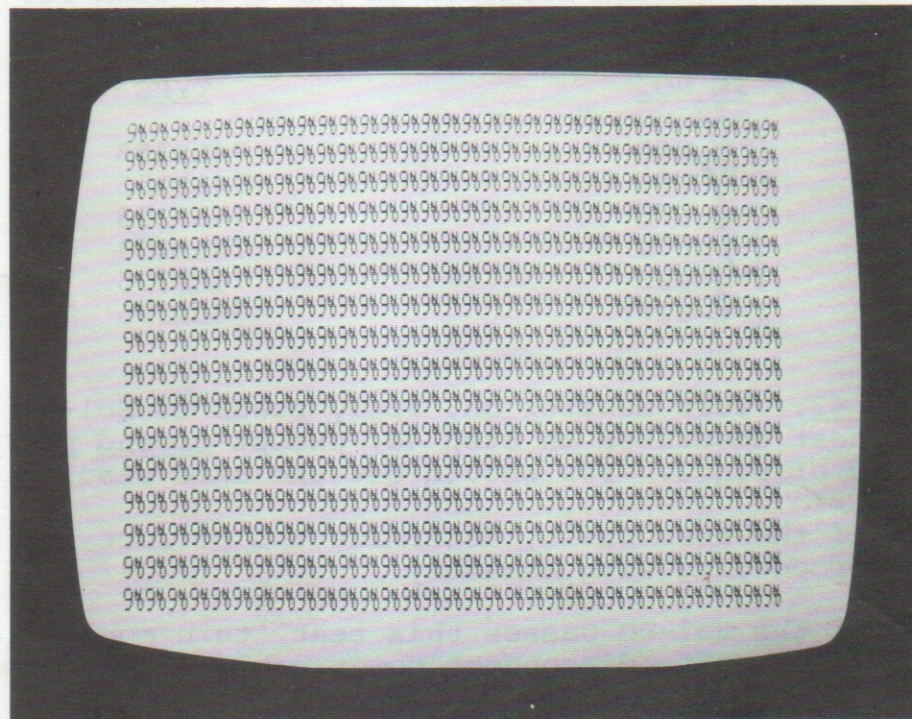


Figure 3-10. CPU Functional Test No. 2 display, 6575 character generator. (6574 pattern differs. See Section VIII.)

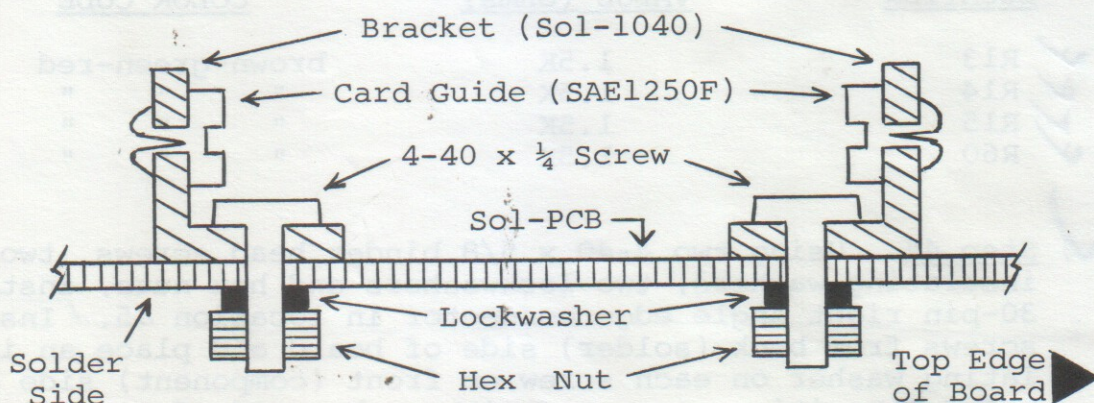


Figure 3-11. Personality module bracket/guide installation (Viewed from right end of Sol-PCB).