

(Step 44 continued.)

CAUTION

NEVER REMOVE OR INSTALL FUSE WITH POWER ON.

- () Step 45. Remove backing from connector identification label and affix it to rear of top cover. Position label just above Sol-PC connector opening in cover so that "J9" is aligned with left most (as viewed from rear of Sol) subminiature phone jack and "J1" is aligned with right most 25-pin female connector.
- () Step 46. Remove backing from serial number label and affix it to rear of top cover. Position label to right (as viewed from rear of Sol) of fan opening in cover.
- () Step 47. Affix self-stick protective pads to bottom of Sol as shown in Figure 6-8.

You have now completed assembly of your Sol Terminal ComputerTM. It is ready for use as a stand-alone computer or CRT terminal. Congratulations on a job well done.

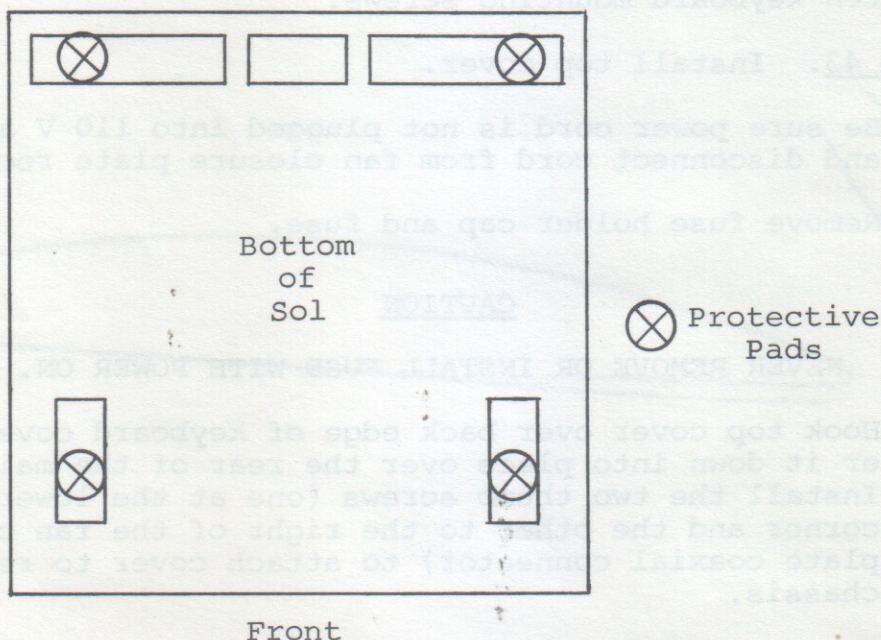


Figure 6-8. Protective foot pad installation.