



PAGE PRINTER

FS-400

PARTS CATALOGUE

FS-400 Parts Catalogue

Table of Contents

Enclosure Unit (Fig.1).....	3
Cassette Assy (Fig.1a).....	5
Covers (Fig.2).....	7
Frame Unit (Fig.2a).....	9
Controller Unit (Fig.3).....	12
Drive Unit (Fig.4).....	14
Fuser Unit (Fig.5).....	16
Face Down Unit (Fig.6).....	18
Drum Unit (Fig.8).....	20
Developer Unit (Fig.9).....	23


Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:

'Ref No.'Reference number which corresponds to the parts in the figure
'Part code'.....Part code which identifies the part
'Part description'A brief description of the part
'Quantity'.....Quantity of the part used in the printer or option


Only the parts highlighted in **BOLD** should be ordered. All other parts are for reference only and are not stocked.

Fig.1 - Enclosure Unit

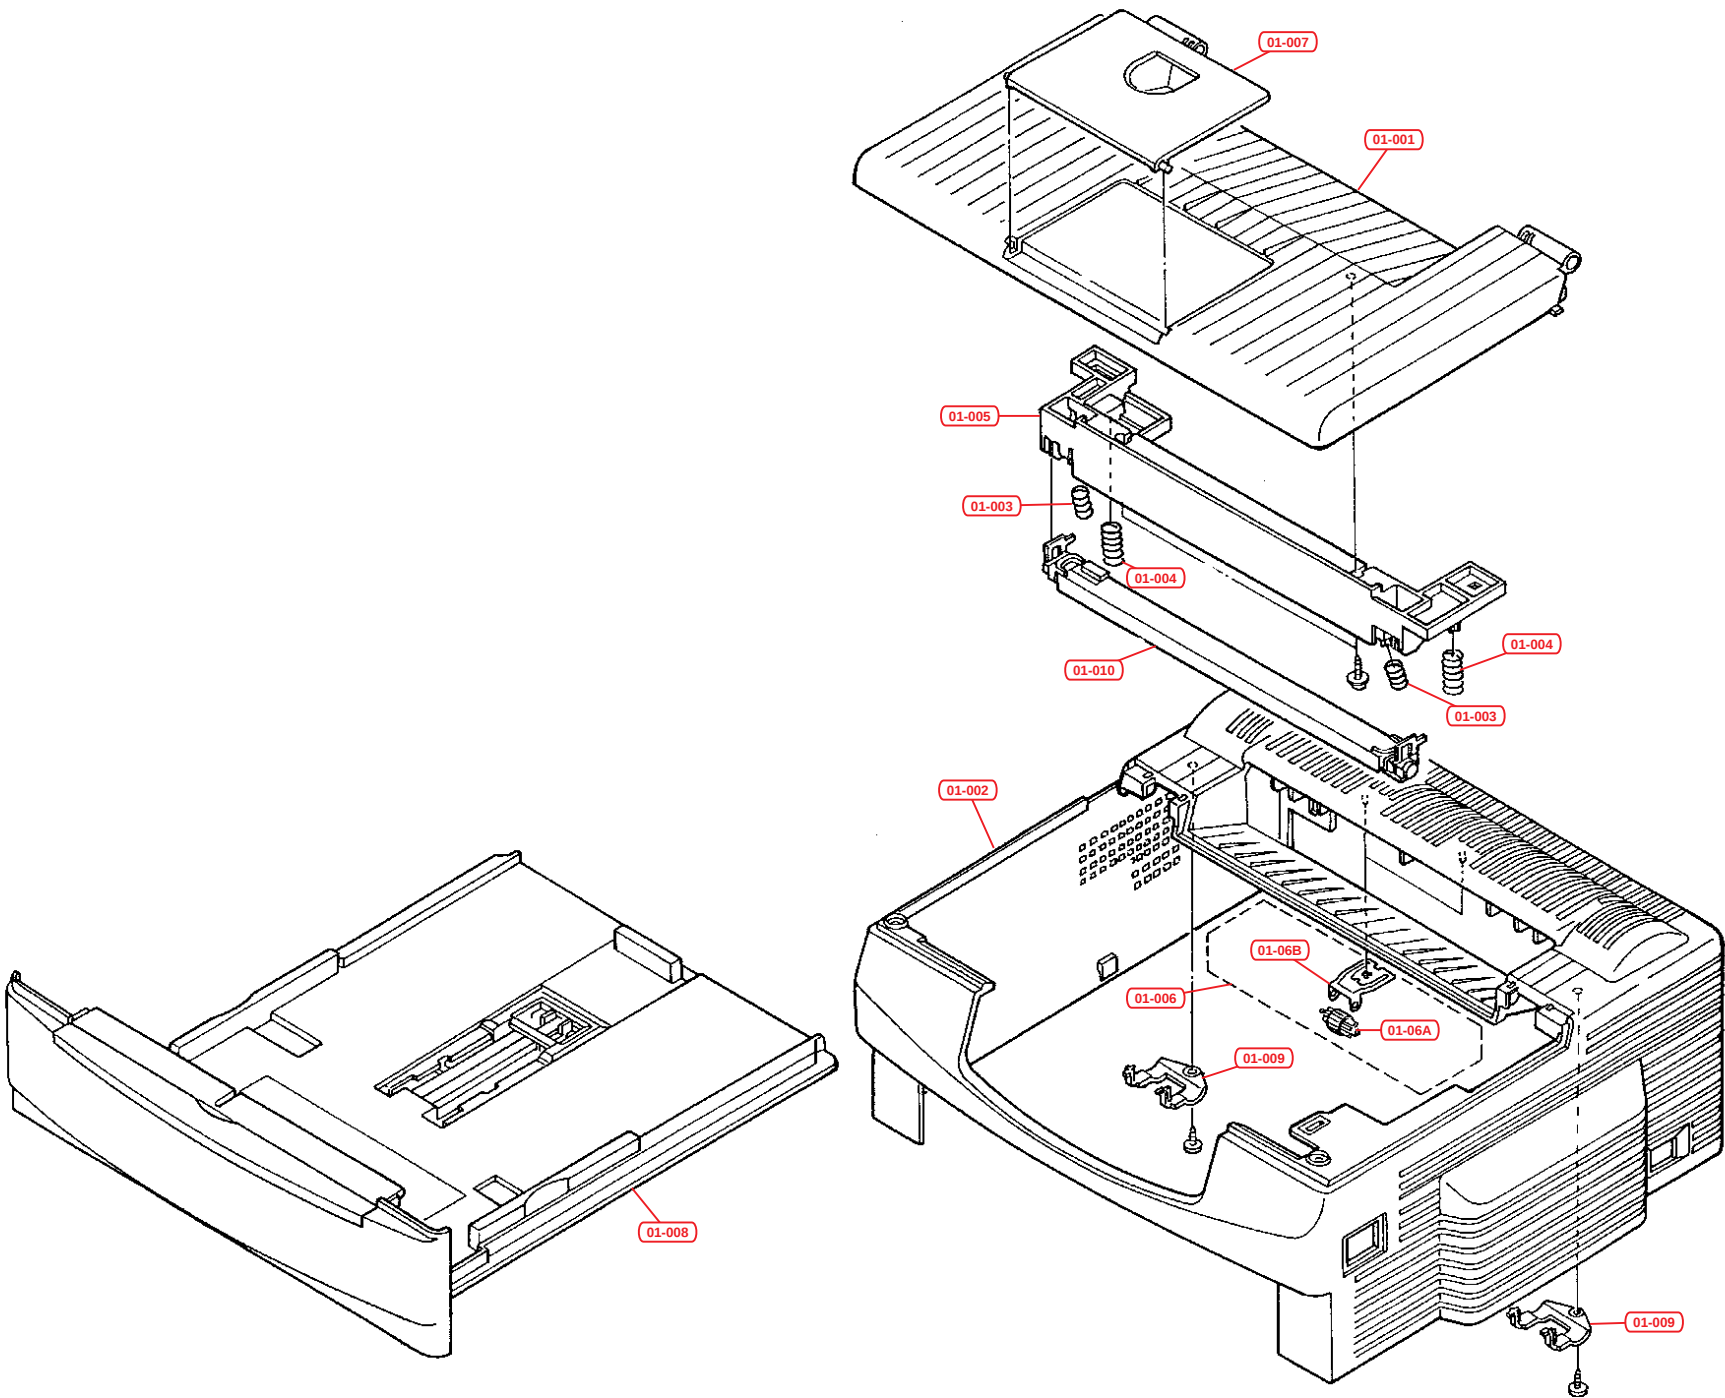


Ref No.	Part Code	Description	Quantity
01-001	VX884SH005	COVER TOP	1
01-002	VX887SH001	COVER OUTER	1
01-003	MW261LD011	SPRING LED	2
01-004	MW261LD012	SPRING HOLDER	2
01-005	VX863SB008	HOLDER LED	1
01-006	AVPULLY012	PULLEY EXIT ASSY	2
01-06A	VM366DB001	PULLY EXIT	1
01-06B	MX332LD005	SPRING EXIT	1
01-007	VU761SH001	TRAY EXIT	1
01-008	AVCASET190	CASSETTE ASSY PC-13	1
01-009	VL442SH001	LOCKING COVER	2
01-010	LK-58	LED HEAD ASSY	1

Fig.1a - Cassette Assy

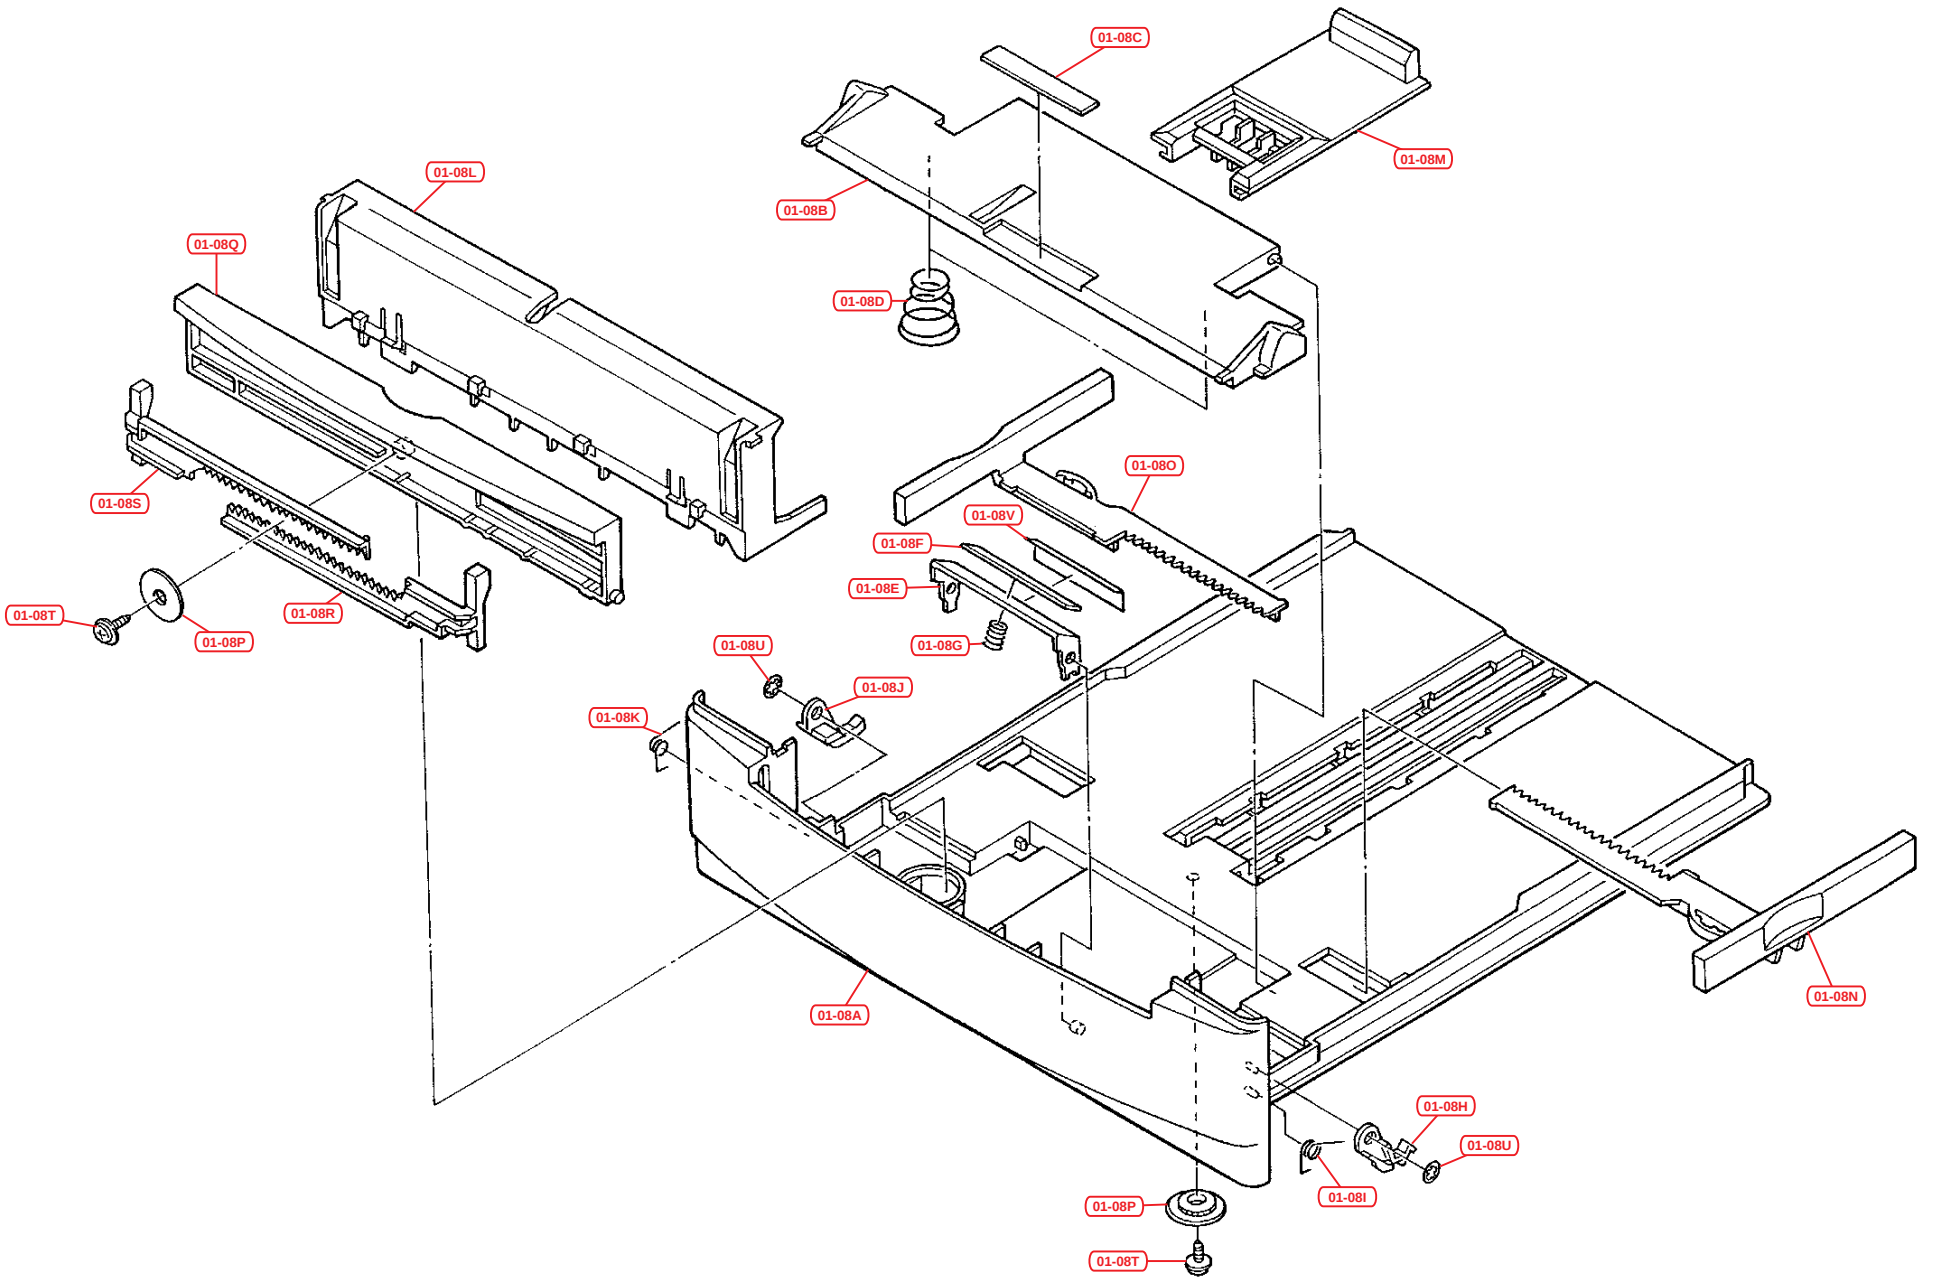


Ref No.	Part Code	Description	Quantity
01-000	AVCASET190	PAPER CASSETTE PC-13	1
01-08A	VB886SH036	BASE CASSETTE	1
01-08B	VB862SH009	BOTTOM	1
01-08C	VS617WK001	PAD FRICTION	1
01-08D	MW381LD001	SPRING BOTTOM	1
01-08E	VB633SH002	PAPER SEPARATOR	1
01-08F	VS617WK002	PAD SEPARATOR	1
01-08G	MW261LD013	SPRING SEPARATOR	1
01-08H	VX322DW002	LOCK CASSETTE R	1
01-08I	MW161LD021	SPRING LOCK RIGHT	1
01-08J	VX322DW003	LOCK CASSETTE L	1
01-08K	MW161LD020	SPRING LOCK LEFT	1
01-08L	VB865SH006	GUIDE FRONT	1
01-08M	VL562SH001	STOPPER	1
01-08N	VX772SH001	GUIDE SIDE R	1
01-08O	VX772SH002	GUIDE SIDE L	1
01-08P	VG127SH003	GEAR MANUAL	2
01-08Q	VB842SH001	BASE MANUAL	1
01-08R	VX642SH005	GUIDE MANUAL R	1
01-08S	VX642SH006	GUIDE MANUAL L	1
01-08T	BTP43005WZ	TP. T.T. SCREW (+)	2
01-08U	BCS3025XSP	CS STOP RING	2
01-08V	VS623KF005	SHEET CASSETTE	1

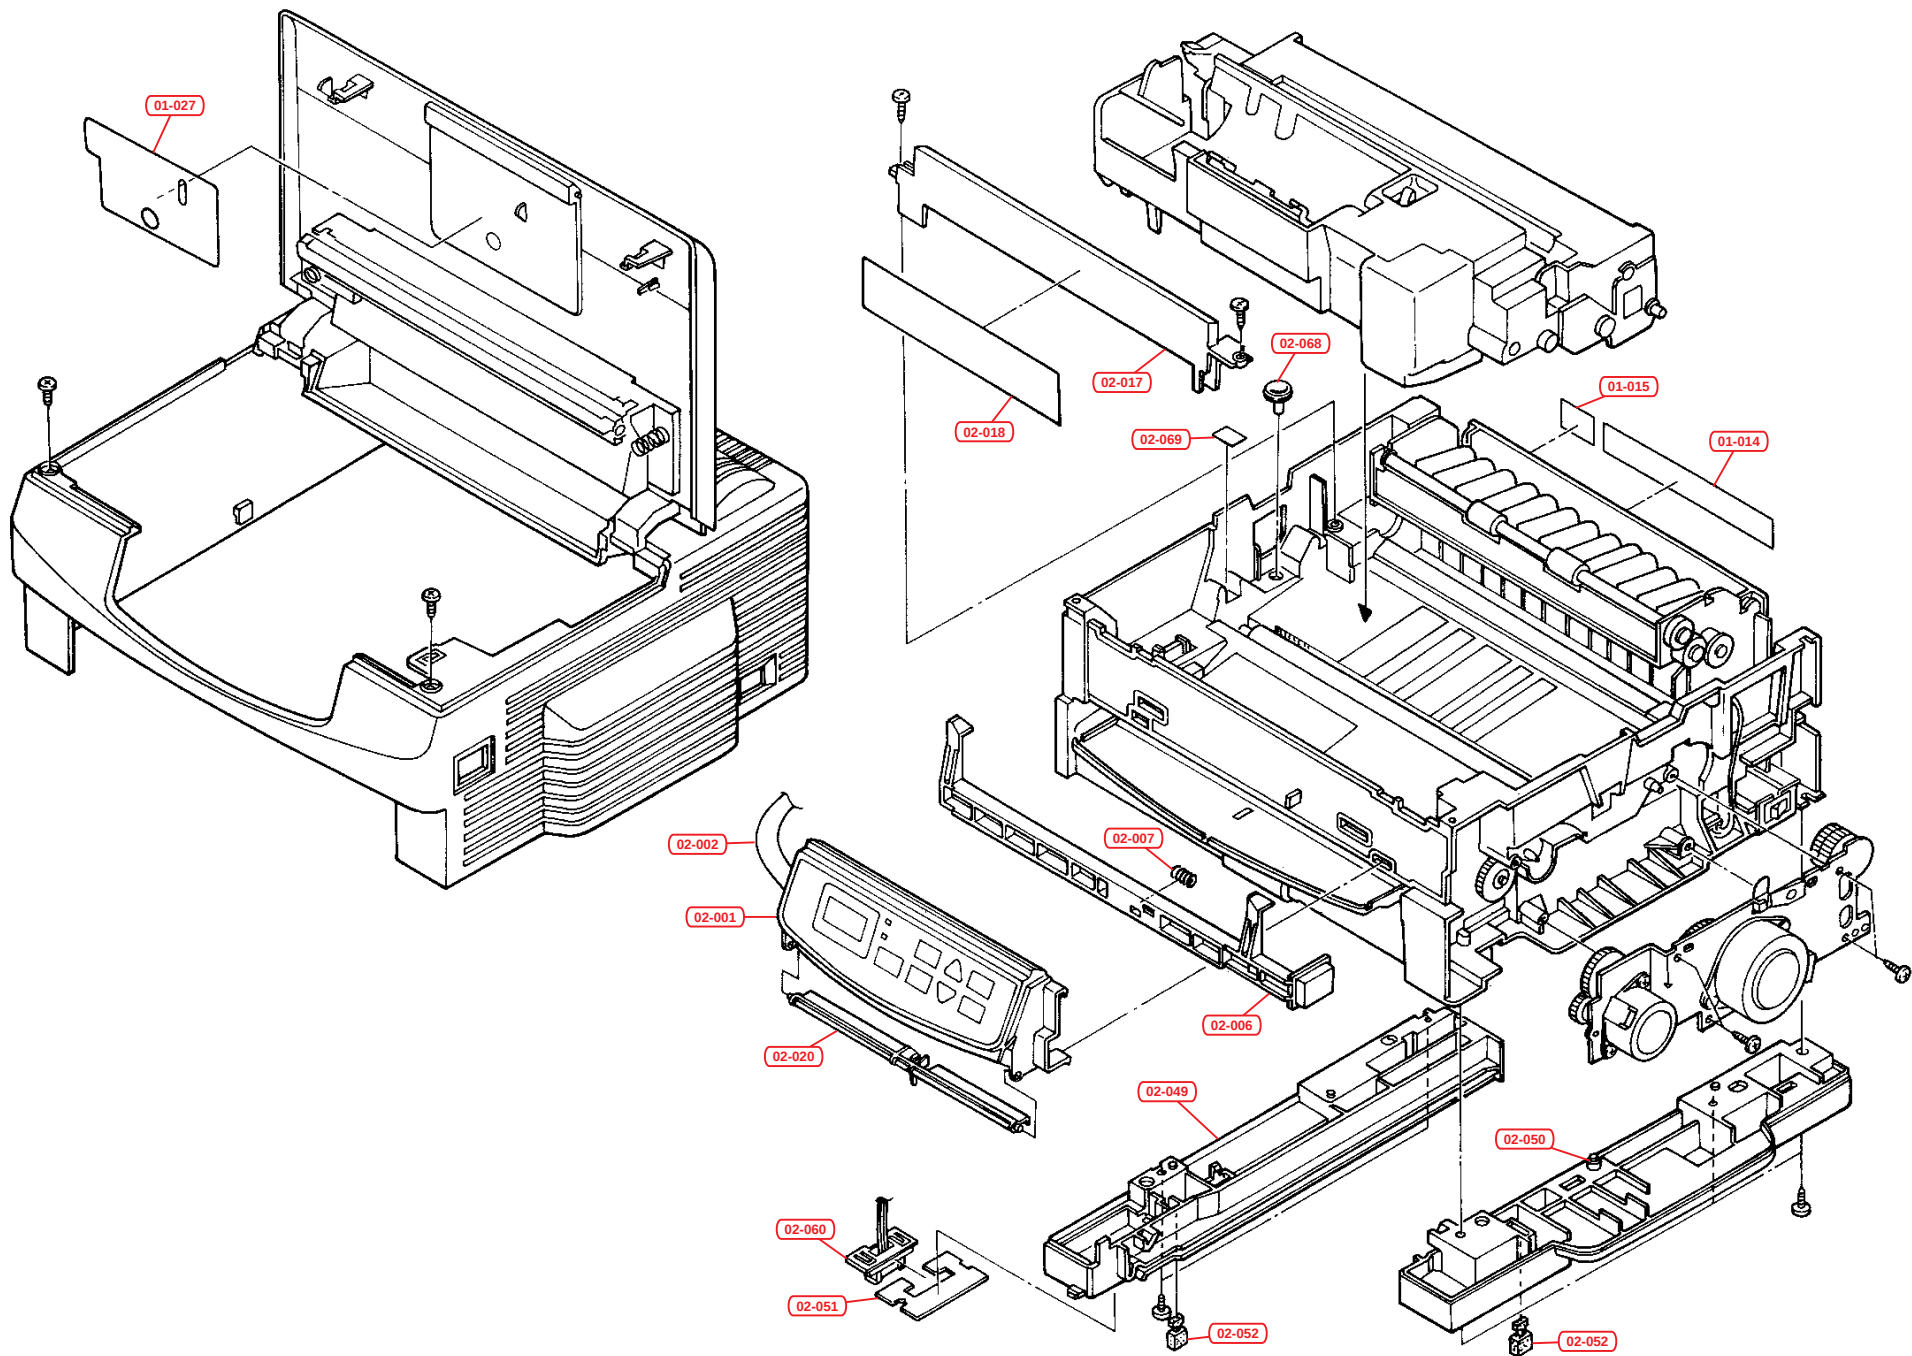

Ref No.	Part Code	Description	Quantity
01-014	VVSFS400E1	SER. NO. PLATE	1
01-015	VVL641WN33	LABEL CAUTION	1
01-027	VVL752WN002	LABEL DIAGRAM	1
02-001	AFZFS400E1	KEY BOARD ASSY	1
02-002	ACCNNF3GEA	CONN CORD ASSY	1
02-006	VL852SH001	HOOK	1
02-007	MW561RD001	SPRING HOOK	1
02-017	VX832SH004	BASE HOLDER	1
02-018	VVL731WN13	LABEL FUSER CAUTION	1
02-020	VX722SB006	ACTUATOR MANUAL	1
02-049	VB863SH006	GUIDE CASSETTE L	1
02-050	VB854SH001	GUIDE CASSETTE R	1
02-051	MS646SD008	PLATE CONNECTOR	1
02-052	VX321RH001	FOOT	4
02-060	ACCNNE7GEA	CONN CORD ASSY	1
02-068	VN276SG001	KNOB LED	1
02-069	VS225CB001	SHEET VOLUME	1


Fig.2a - Frame Unit

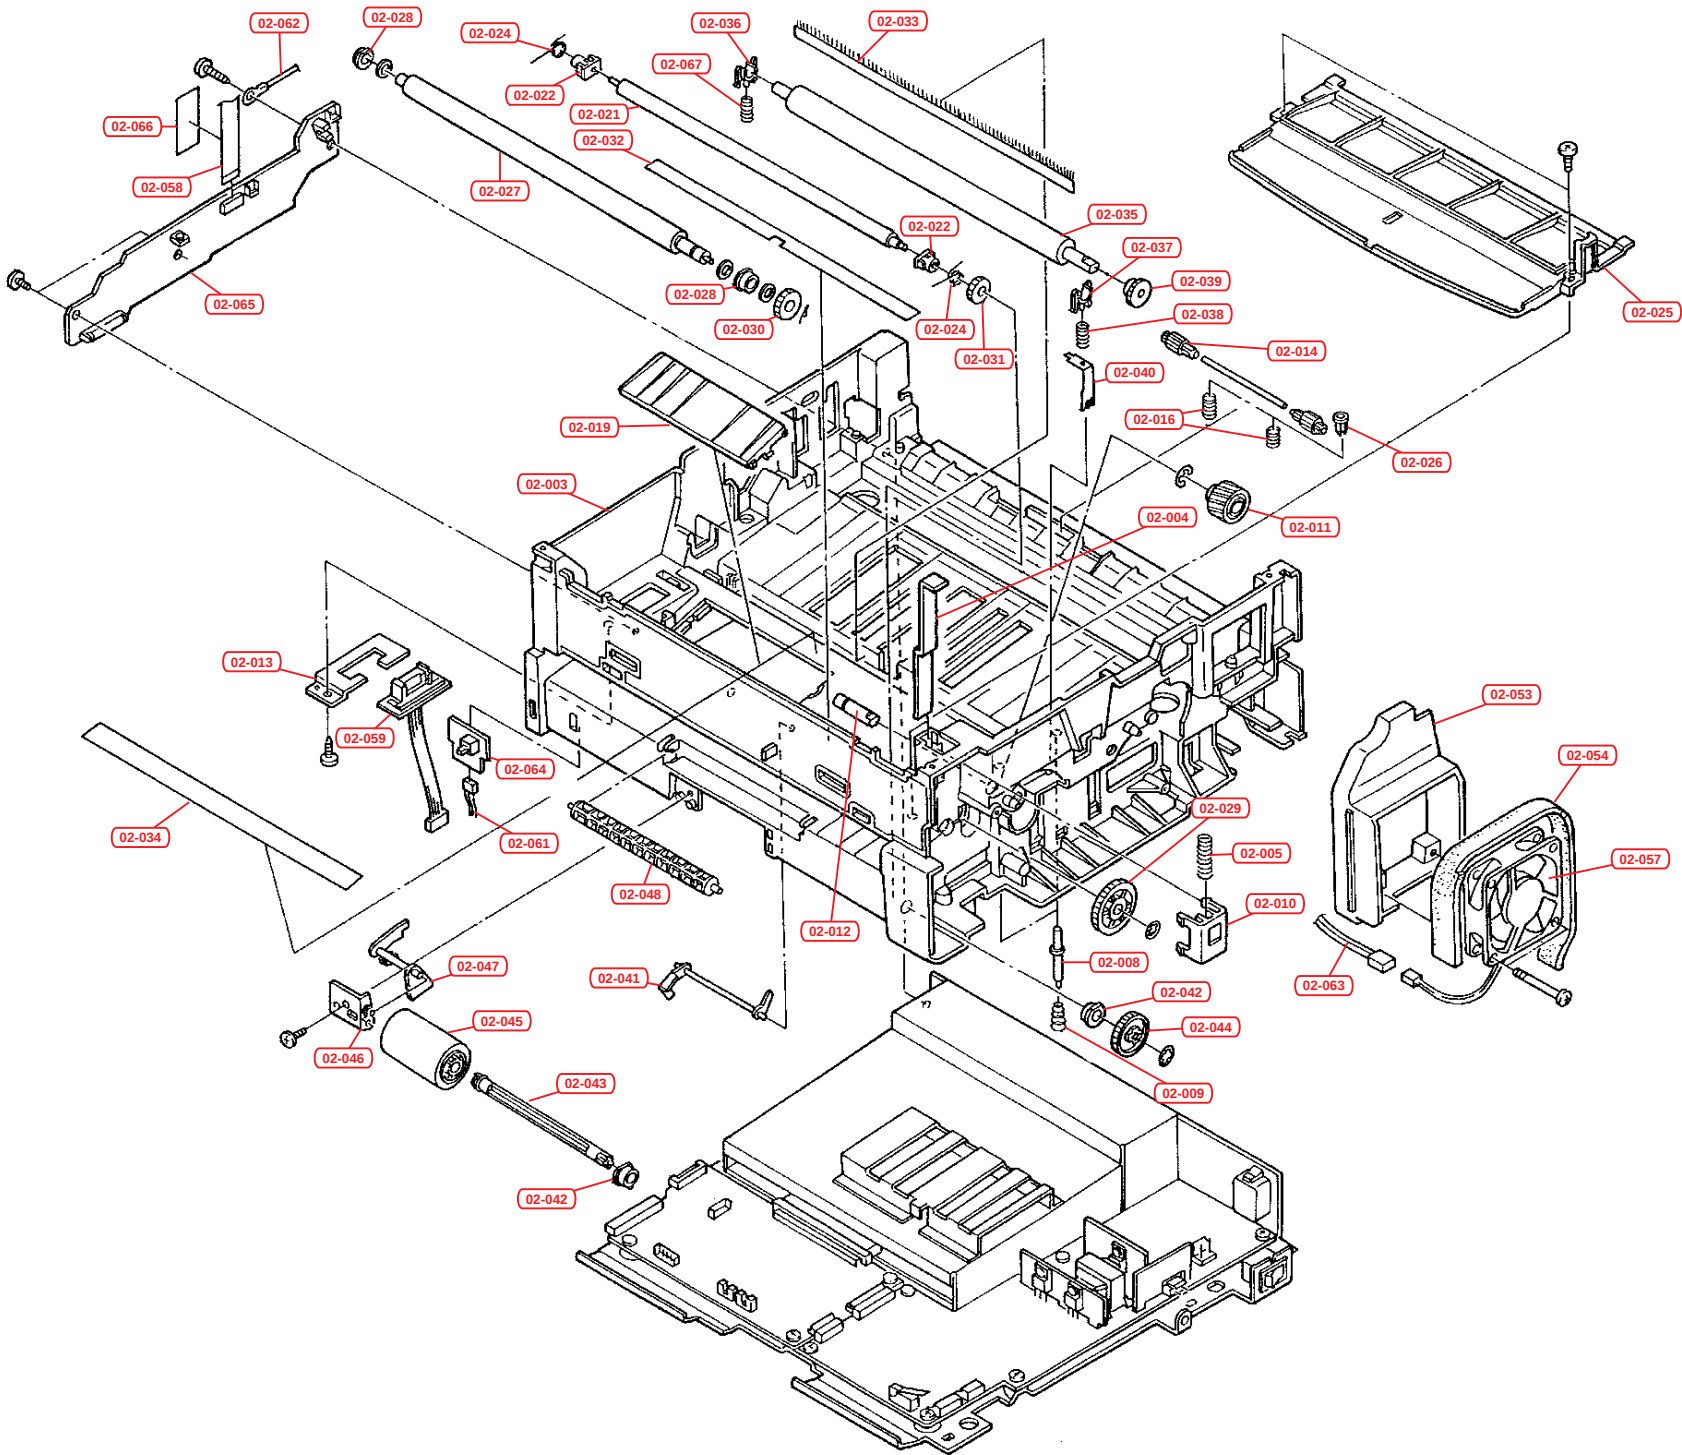

Ref No.	Part Code	Description	Quantity
02-003	VX887CB001	FRAME BASE	1
02-004	VZ632SB001	PLATE INTERLOCK	1
02-005	MW461LD005	SPRING INTERLOCK	1
02-008	MT454SZ001	PIN H/V	2
02-009	MW261LD010	SPRING H/V	2
02-010	VU332SB001	BKT INTERLOCK	1
02-011	VG137DN010	GEAR Z21H	1
02-012	MT366LD005	PIN GEAR	1
02-013	MZ631SD003	BRACKET CONNECT	1
02-014	VM366DW001	PULLEY EXIT FU	2
02-015	MT622SN002	SHAFT EXIT	1
02-016	MW231SD001	SPRING PULLEY	2
02-019	VU741SB001	ROM COVER	1
02-021	MT863LD003	ROLLER REGIST A	1
02-022	VX211DB012	BUSH REGIST A	2
02-024	MW167LD001	SPRING REGIST	2
02-025	VX874SB002	REGIST ENTRANCE	1
02-026	VM133DN001	BUSH SP PULLEY	2
02-027	MT876LD003	ROLLER REGIST B	1
02-028	VM176DN016	BUSH A	2
02-029	VG143DW001	GEAR REGIST Z33	1
02-030	VG137DW001	GEAR REGIST Z25	1
02-031	VG126DW002	GEAR REGIST Z16	1
02-032	VS722KF004	SHEET REGIST	1
02-033	VS825FF004	DISCHARGER	1
02-034	VS813KF004	SHEET T/R	1
02-035	MT876LD004	ROLLER TRANSFER	1
02-036	VX221DB016	BUSH TRANSFER L	1
02-037	VX221DB010	BUSH TRANSFER R	1
02-038	MW251LD013	SPRING TRANSFER R	1
02-039	VG127DB035	GEAR Z18	1
02-040	ML132LD002	CONTACT TRANSFER	1
02-041	VX632SB012	ACTUATOR FEED	1
02-042	VM176DN016	BUSH A	2
02-043	VM766SB001	SHAFT FEED	1
02-044	VG138DB047	GEAR FEED Z25	1
02-045	AVR0LL*025	ROLLER FEED ASSY	1
02-046	VX332DW001	BUSH FEED L	1
02-047	VX442SB008	ACTUATOR EMPTY	1
02-048	VM773DW001	PULLEY FEED	1
02-053	VK399SB001	BRACKET FAN	1
02-054	VS878RB002	SEAL FAN	1
02-055	MX221LD017	EARTH FRAME A	1
02-056	MX544LD001	EARTH FRAME B	1
02-057	ZNF2403701*01	FAN MOTOR	1


Ref No.	Part Code	Description	Quantity
02-058	ACCNF4GEA	CONN CORD ASSY	1
02-059	ACCNNE6GEA	CONN CORD ASSY	1
02-061	ACCNQ8GEA	CONN CORD ASSY	1
02-062	ACCNN7GEA	CONN CORD ASSY	1
02-063	ACCNQ9GEA	CONN CORD ASSY	1
02-064	APRSWC1005AH	Sencor PWB ASSY	1
02-065	APRZZC1040AH	Interconnect PWB ASSY	1
02-066	VS635KB001	SHEET HARNESS	1
02-067	MW251LD010	SPRING TRANSFER L	1
02-070	AXRD013GEA	HIGH MEG. R59 ASSY	1
02-071	MX761SLS001	PLATE EARTH	1
02-072	VX862CB005	GUIDE PAPER	1
02-073	MW261LD012	SPRING HOLDER	1
02-074	VM133DN001	BUSH SP PULLEY	2
02-075	VS222XN002	SHEET FUSER	1
02-076	VS429RB004	SEAL BASE TONER	1

Fig.3 - Controller Unit

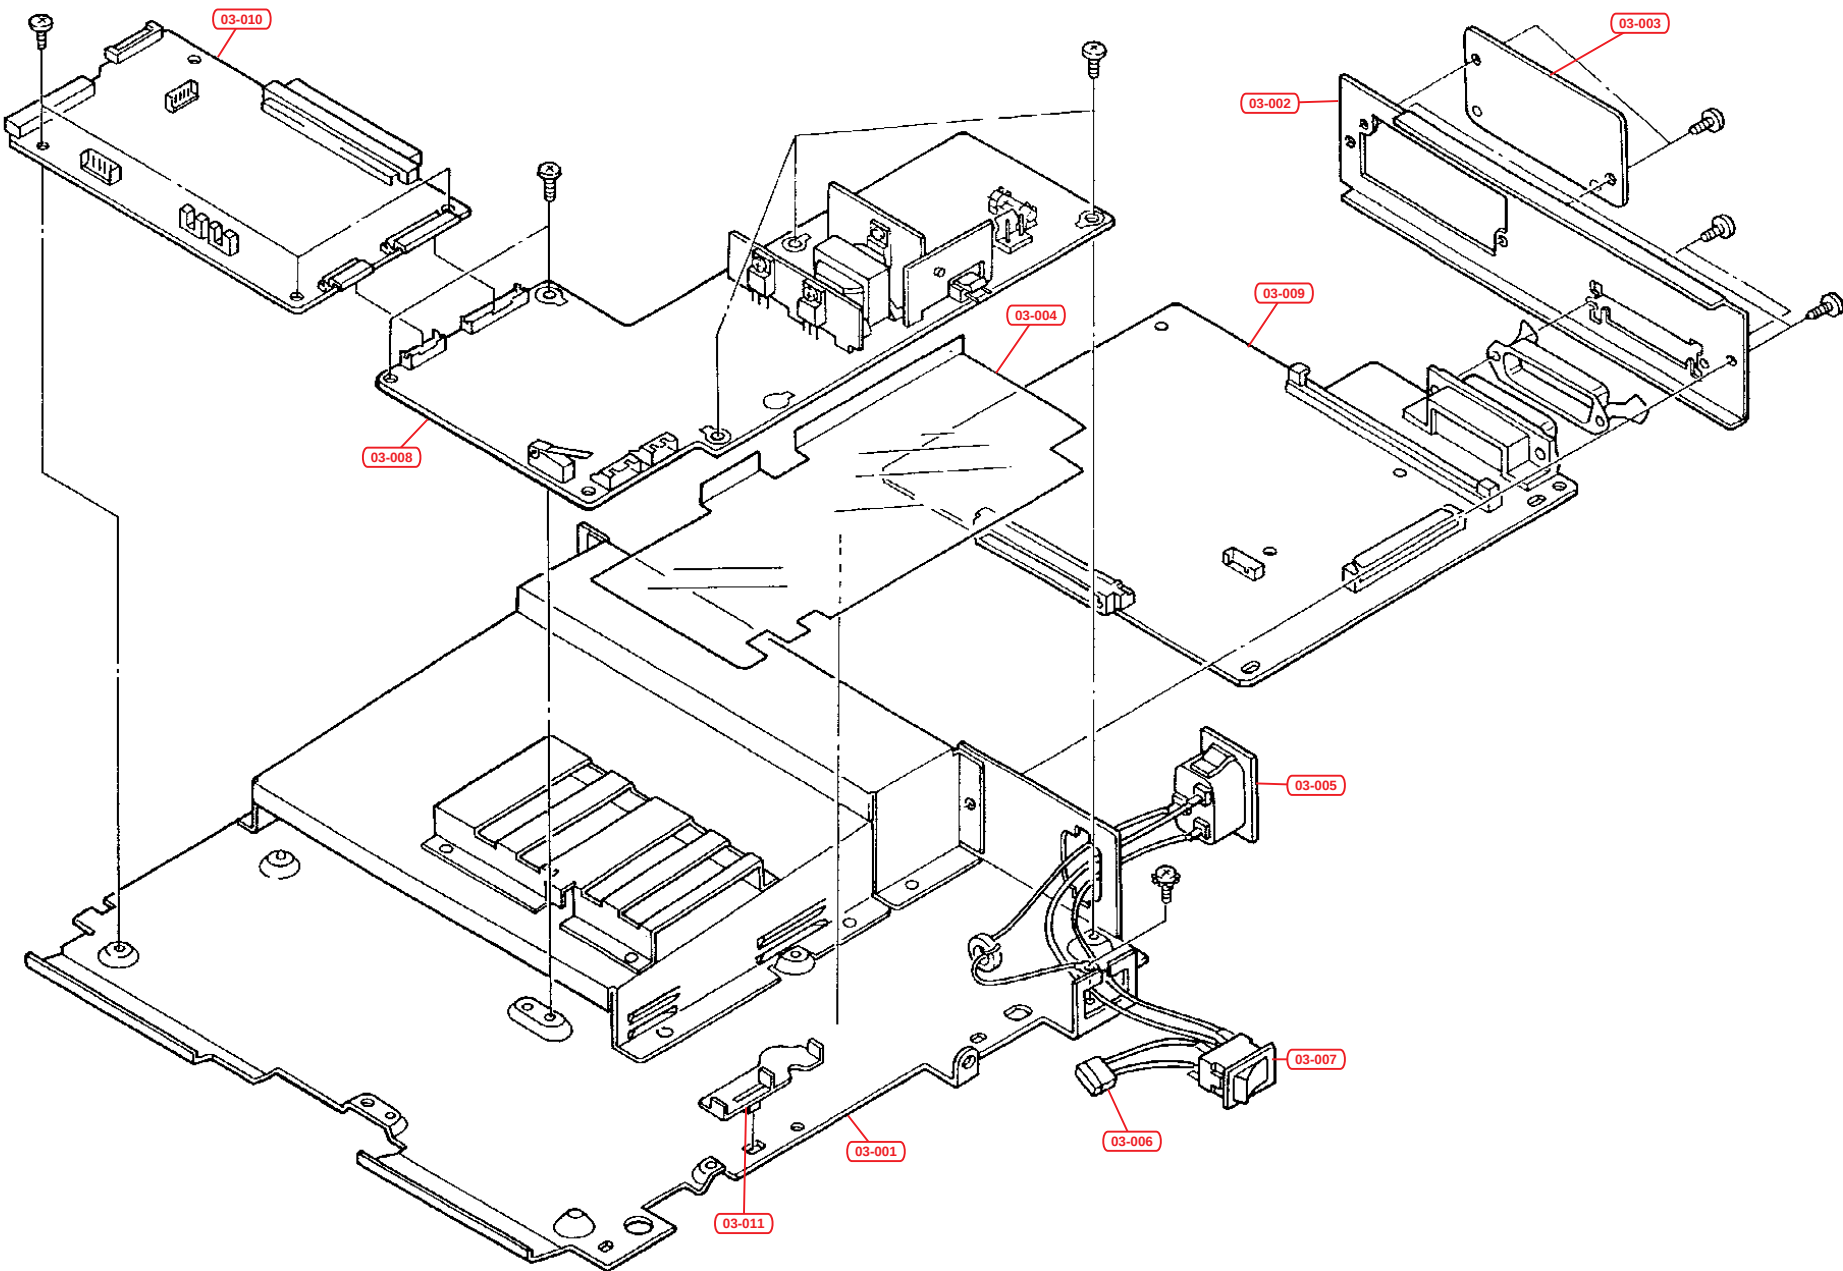


Ref No.	Part Code	Description	Quantity
03-001	AVFRAME087	CONT. ASSY	1
03-002	MU851SD001	PANEL REAR	1
03-003	MS646SD009	PLATE CONTROLLER	1
03-004	VS762KF005	SHEET CONTROLLER	1
03-005	ACCNNR0GEA	AC INLET ASSY	1
03-006	ACCNNF2GEA	CONN. CORD ASSY	1
03-007	SC020111***01	MAIN SWITCH	1
03-008	AEZFS400E1	POWER SUPPLY UNIT	1
03-009	APRLGC2004AH	Main PWB ASSY	1
03-010	APRLGC2003AH	Engine PWB ASSY	1
03-011	VX321SN001	SPACER CONT	1

Fig.4 - Drive Unit

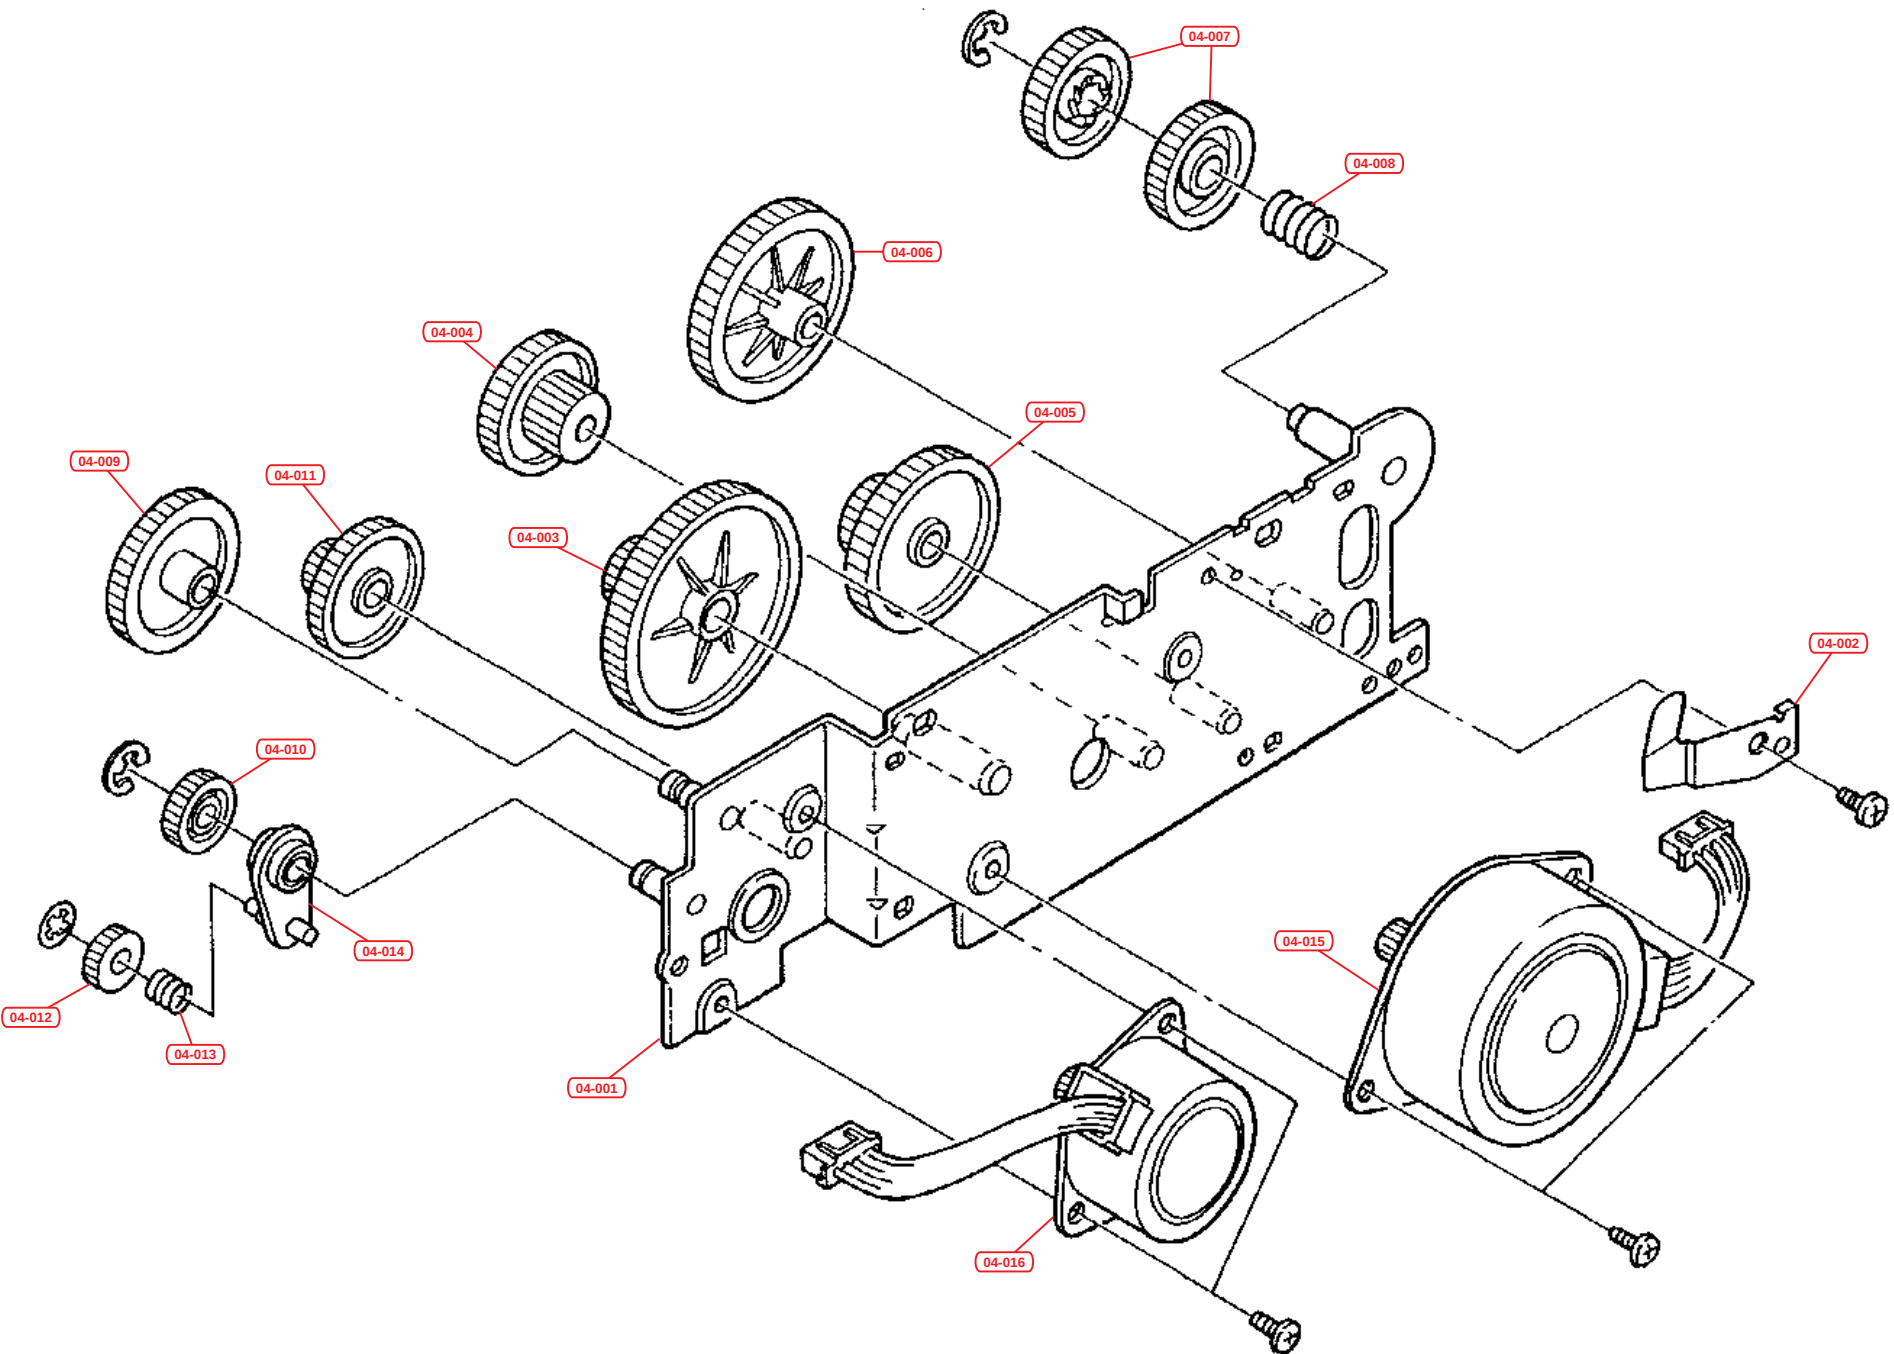

Ref No.	Part Code	Description	Quantity
04-000	AYFS400E*04	DRIVE ASSY	1
04-001	MX867SD001	PLATE DRIVE	1
04-002	MP434LD001	PLATE EARTH	1
04-003	VG179DB002	GEAR Z102-H17	1
04-004	VG168DN010	GEAR Z58-Z18	1
04-005	VG158DN009	GEAR Z46-Z20	1
04-006	VG169DN009	GEAR Z54	1
04-007	VG148DN015	GEAR Z32	2
04-008	MW271LD006	SPRING GEAR	1
04-009	VG148DN014	GEAR IDLE Z40	1
04-010	VG127DN037	GEAR IDLE Z20	1
04-011	VG168DN009	GEAR Z14-Z60	1
04-012	VG127DN036	GEAR Z15	1
04-013	MW171LD004	SPRING MOVER A	1
04-014	VF226NN001	MOVER	1
04-015	ZNT2400404*01	MAIN MOTOR	1
04-016	ZNT2400403*01	FEED MOTOR	1

Fig.5 - Fuser Unit

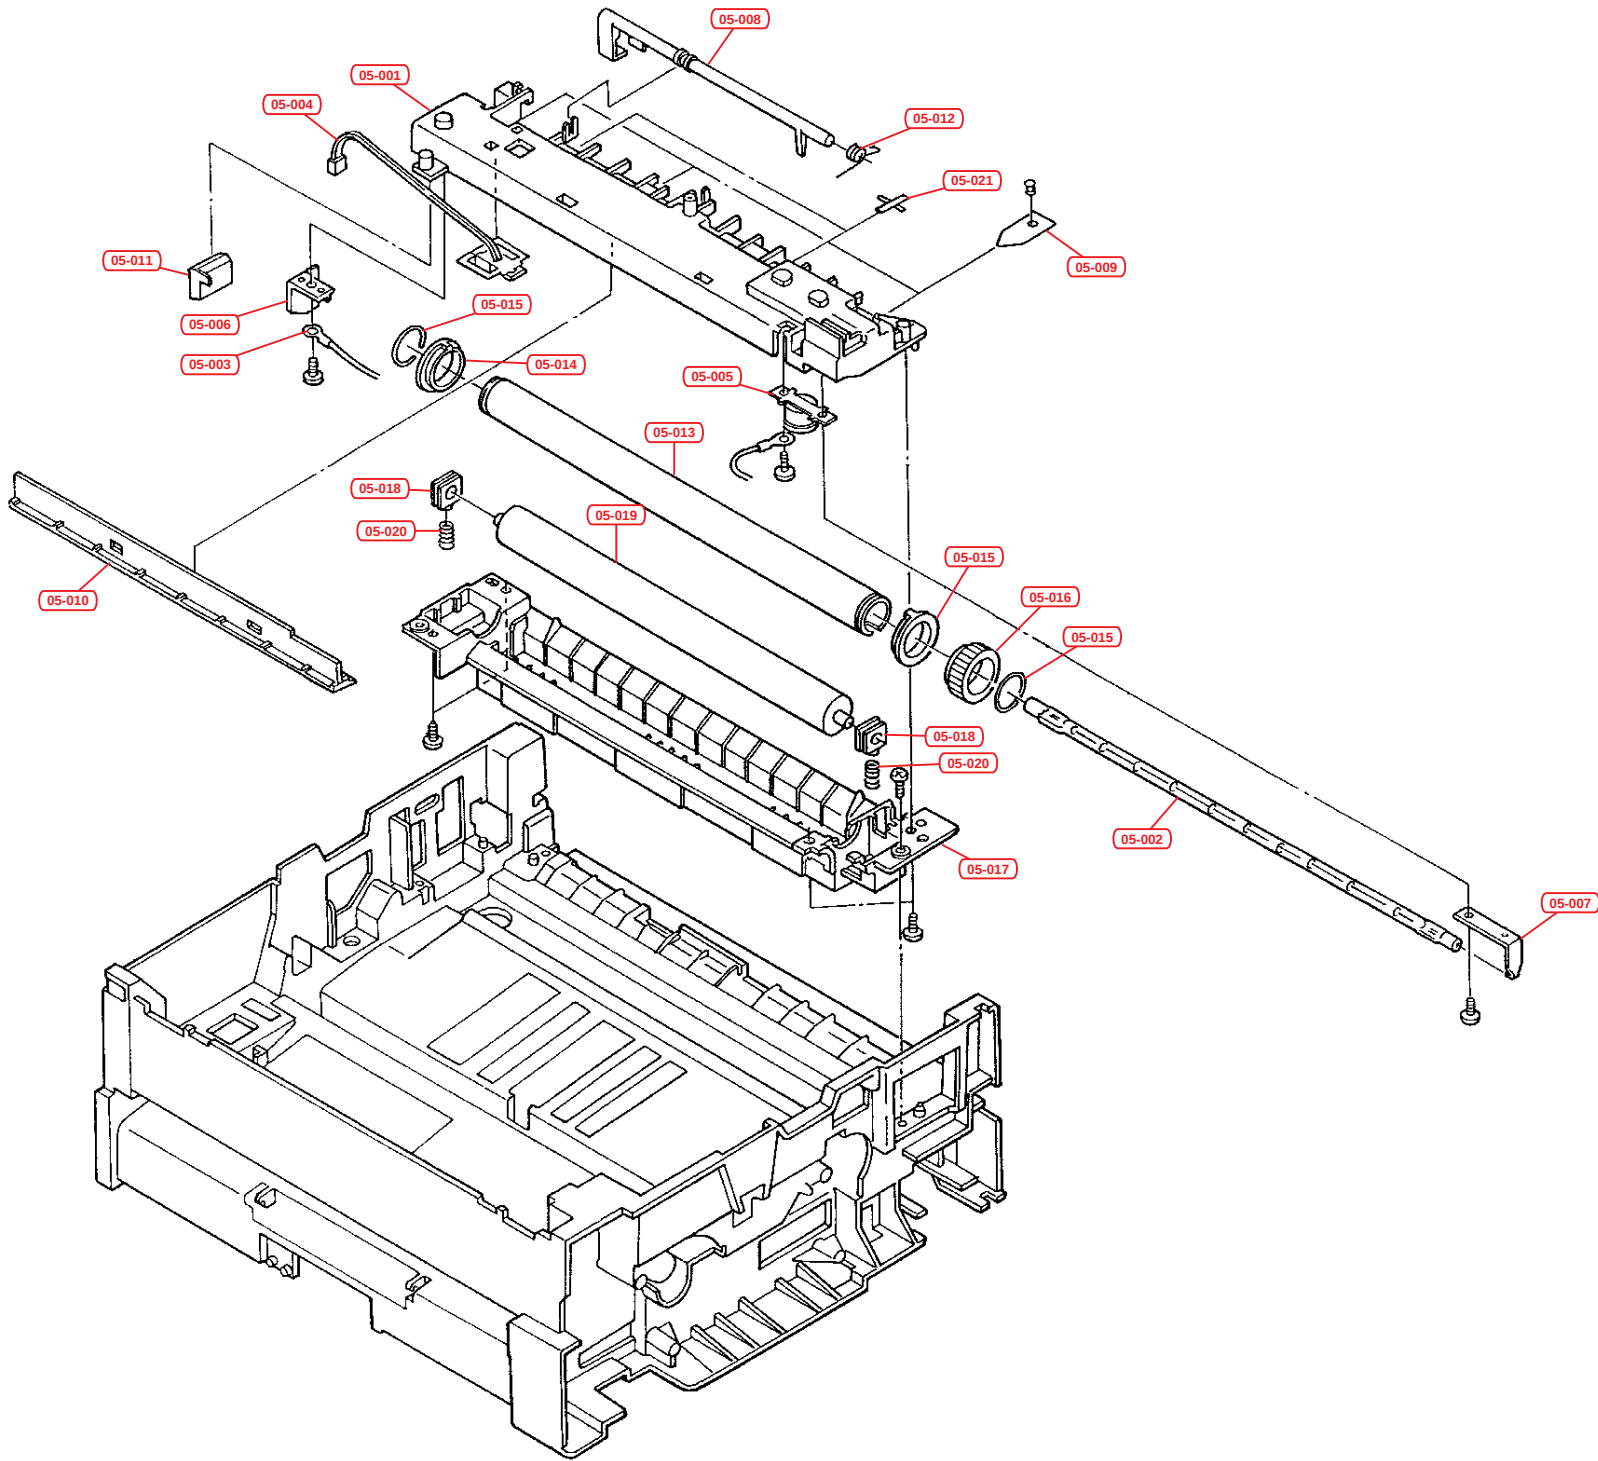

Ref No.	Part Code	Description	Quantity
05-000	FK-55	FUSER KIT	1
05-001	VB863KB001	FRAME FUSER UP	1
05-002	ZPB2411520101	LAMP HEATER 240V	1
05-003	ACCNF1GEA	CONN CORD ASSY	1
05-004	AXTM006GEA	THERMISTOR ASSY	1
05-005	YFFQ15001**02	THERMAL CUT-OUT	1
05-006	MX222LD011	PLATE LAMP L	1
05-007	MX431LD003	PLATE LAMP R	1
05-008	VX721CB001	ACTUATOR FUSER	1
05-009	VX322XN003	SEPARATOR	4
05-010	VX822KB001	PLATE FUSER	1
05-011	VX322KB001	SUPPORT LAMP	1
05-012	MW161LD018	SPRING ACTUATOR	1
05-013	MT877AX002	ROLLER HEAT	1
05-014	VM188XN011	BUSH HEAT	2
05-015	MW171SJ002	RING STOP	2
05-016	VG138XN006	GEAR FUSER Z30	1
05-017	VB864KB001	FRAME FUSER LOW	1
05-018	VX221XN001	BUSH PRESS	2
05-019	MT876SN040	ROLLER PRESS	1
05-020	MW261LD008	SPRING FUSER	2
05-021	VM365CB001	PULLEY FUSER	2
05-022	MW361LD009	SPRING A	4
05-023	VX833KD001	PAPER CHUTE FUSER	1
05-024	MX322CD004	PLATE EARTH A	1


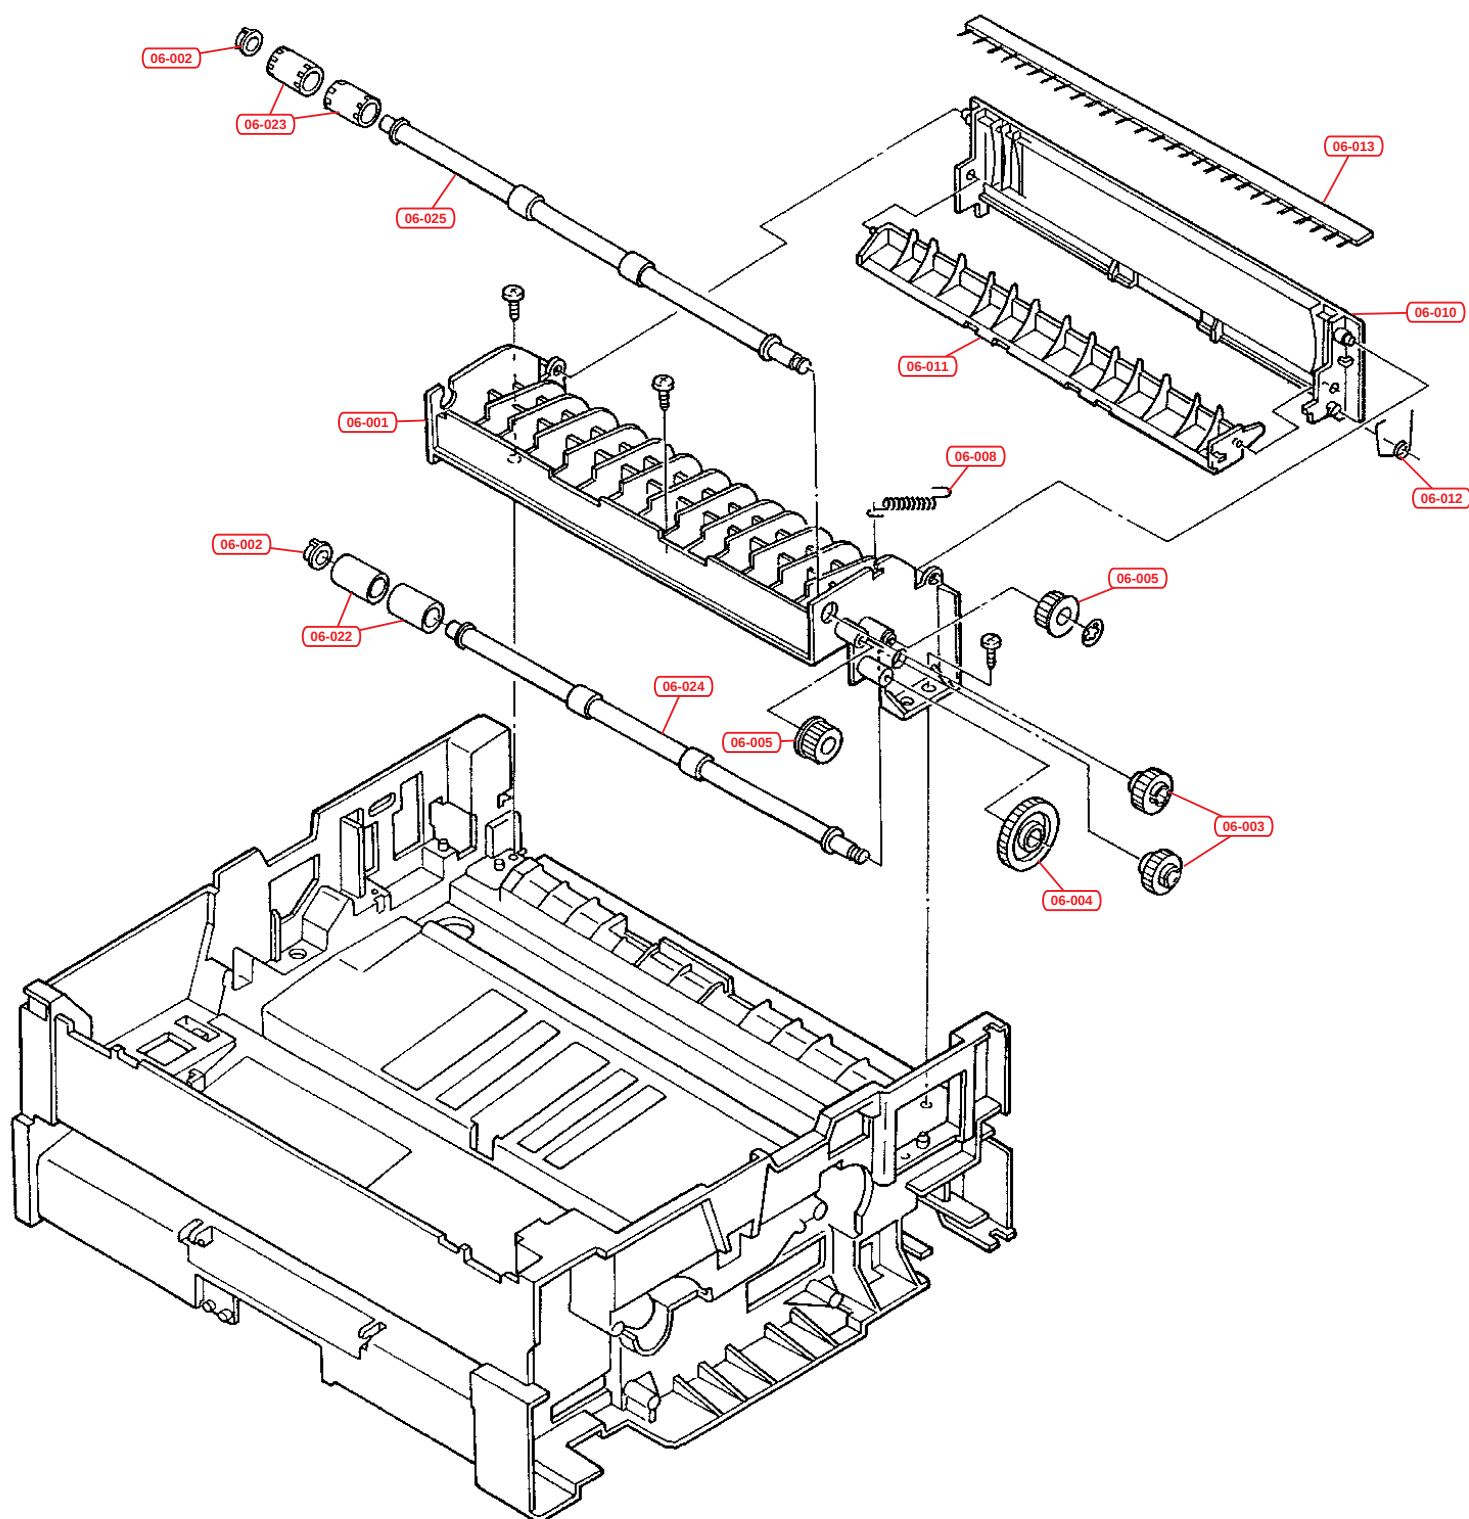


Fig.6 - Face Down Unit


Ref No.	Part Code	Description	Quantity
06-000	AYFS400E*09	FACE DOWN UNIT	1
06-001	VX866SH008	FRAME EXIT	1
06-002	VM176DN016	BUSH A	2
06-003	VG127DN033	GEAR EXIT Z20	2
06-004	VG148DN013	GEAR Z35	1
06-005	VG127DN032	GEAR Z18	2
06-006	VT866SB001	ROLLER EXIT	2
06-007	VM277RH001	TYRE EXIT FD	2
06-008	MW531SD001	SPRING COVER	1
06-009	VM277RH002	TYRE EXIT FU	2
06-010	VX863SH003	COVER REAR	1
06-011	VX832SH003	GUIDE CHANGE	1
06-012	MW161LD015	SPRING CHANGE	1
06-013	VS824XF003	DISCHARGER FD	1
06-014	VM177RH001	TYRE EXIT FD A	2
06-022	VM277RB009	TIRE EXIT	2
06-023	VM277RH001	TIRE EXIT FD	2
06-024	AYFS400E*21	ENTRANCE ROLLER	1
06-025	AYFS400E*28	EXIT ROLLER	1

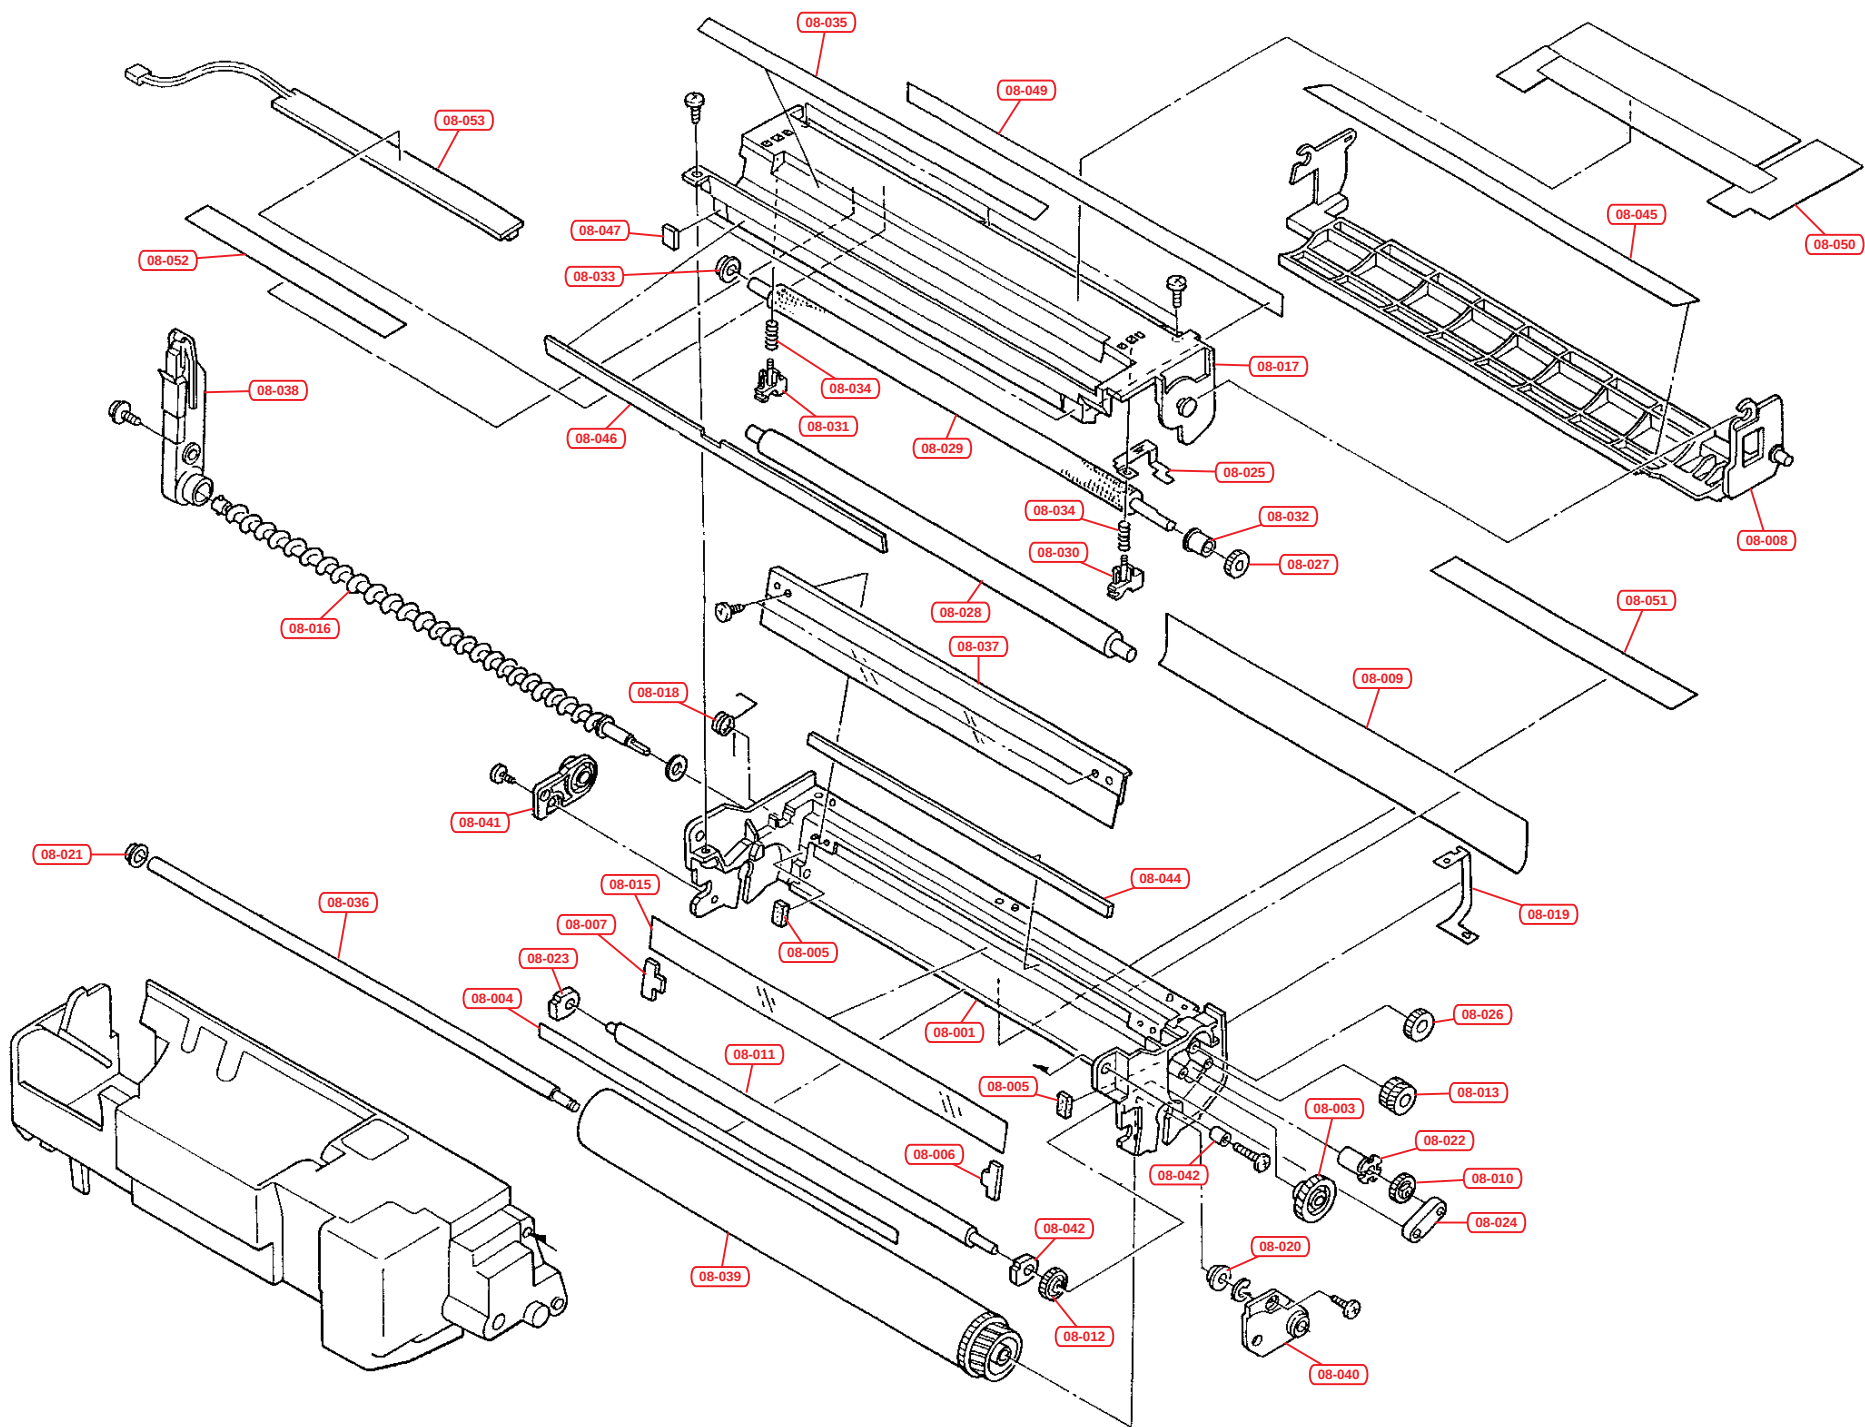

Ref No.	Part Code	Description	Quantity
08-000	PU-1	PROCESS UNIT	1
08-001	VB866CB003	FRAME DRUM	1
08-003	VG037DN001	GEAR IDLE MC Z25H	1
08-004	VS811KF011	SEAL DRUM	1
08-005	VS217RB008	SEAL BLADE DRUM	2
08-006	VS318LB001	SEAL DRUM R	1
08-007	VS328LB001	SEAL DRUM L	1
08-008	VB865SB037	COVER DRUM	1
08-009	VS865AF001	SHEET AL	1
08-010	VG137DN006	GEAR SCREW Z23	1
08-011	VT865SB001	ROLL SWEEP	1
08-012	VG137DN007	GEAR SWEEP Z22	1
08-013	VG037DN002	GEAR IDLE SCREW	1
08-015	VS821KF014	SHEET SWEEP	1
08-016	VT864CB002	SCREW	1
08-017	VB865SB036	FRAME DRUM UP	1
08-018	MW161SD005	SPRING COVER DRUM	1
08-019	MC152LD001	PLATE BIAS MC	1
08-020	VM166CN001	BUSH DRUM R	1
08-021	VM166CN002	BUSH DRUM L	1
08-022	VM165DN004	BUSH SCREW	1
08-023	VM154XN001	BUSH SWEEP L	2
08-024	VM276DB009	BUSH S	1
08-025	MS322LD001	PLATE BIAS R	1
08-026	VG137DB057	GEAR IDLE MC Z23	1
08-027	VG126DB024	GEAR MC Z16	1
08-028	MT876SN041	ROLL MC	1
08-029	MT876SX009	ROLL CLN MC	1
08-030	VX331DB005	BUSH MR	1
08-031	VX331DB006	BUSH ML	1
08-032	VM166DB006	BUSH CLN MR	1
08-033	VM166DB007	BUSH CLN ML	1
08-034	MW131LD006	SPRING MC	2
08-035	VS821KF016	SHEET LED	1
08-036	MT865LD002	SHAFT DRUM	1
08-037	AVBLADE022	BLADE CLN ASSY	1
08-038	AYFS400E23	CASE BELT ASSY	1
08-039	AVDRUM*037	DRUM ASSY	1
08-040	VF147CB001	CAP DRUM R	1
08-041	VF147CB002	CAP DRUM L	1
08-042	VM150CB001	COLLAR DLP	1
08-044	VS819RB004	SEAL BLADE	1
08-045	VS826LF001	SEAL COVER DRUM	1
08-046	VS818RB007	SEAL MAG UP	1

Ref No.	Part Code	Description	Quantity
08-047	VS218LB001	SEAL SIDE MAG	2
08-048	VS608RB008	SEAL SCREW	1
08-049	VS811KF014	SEAL MAG	1
08-050	VVL832WN01	LABEL DRUM	1
08-051	VS822KF007	SHEET DRUM	1
08-052	VS831KF003	SHEET DRUM UP	1
08-053	AXLD027GEA	LED ARRAY	1
08-054	VS325CN001	SPACER BLADE	2
08-055	VS332KB001	SHEET SIDE MAG	1
08-056	BWT42642CG	GND WASHER	1
08-057	VL311SB001	GUIDE PAPER DRUM R	1
08-058	VL311SB002	GUIDE PAPER DRUM L	1

Fig.9 - Developer Unit

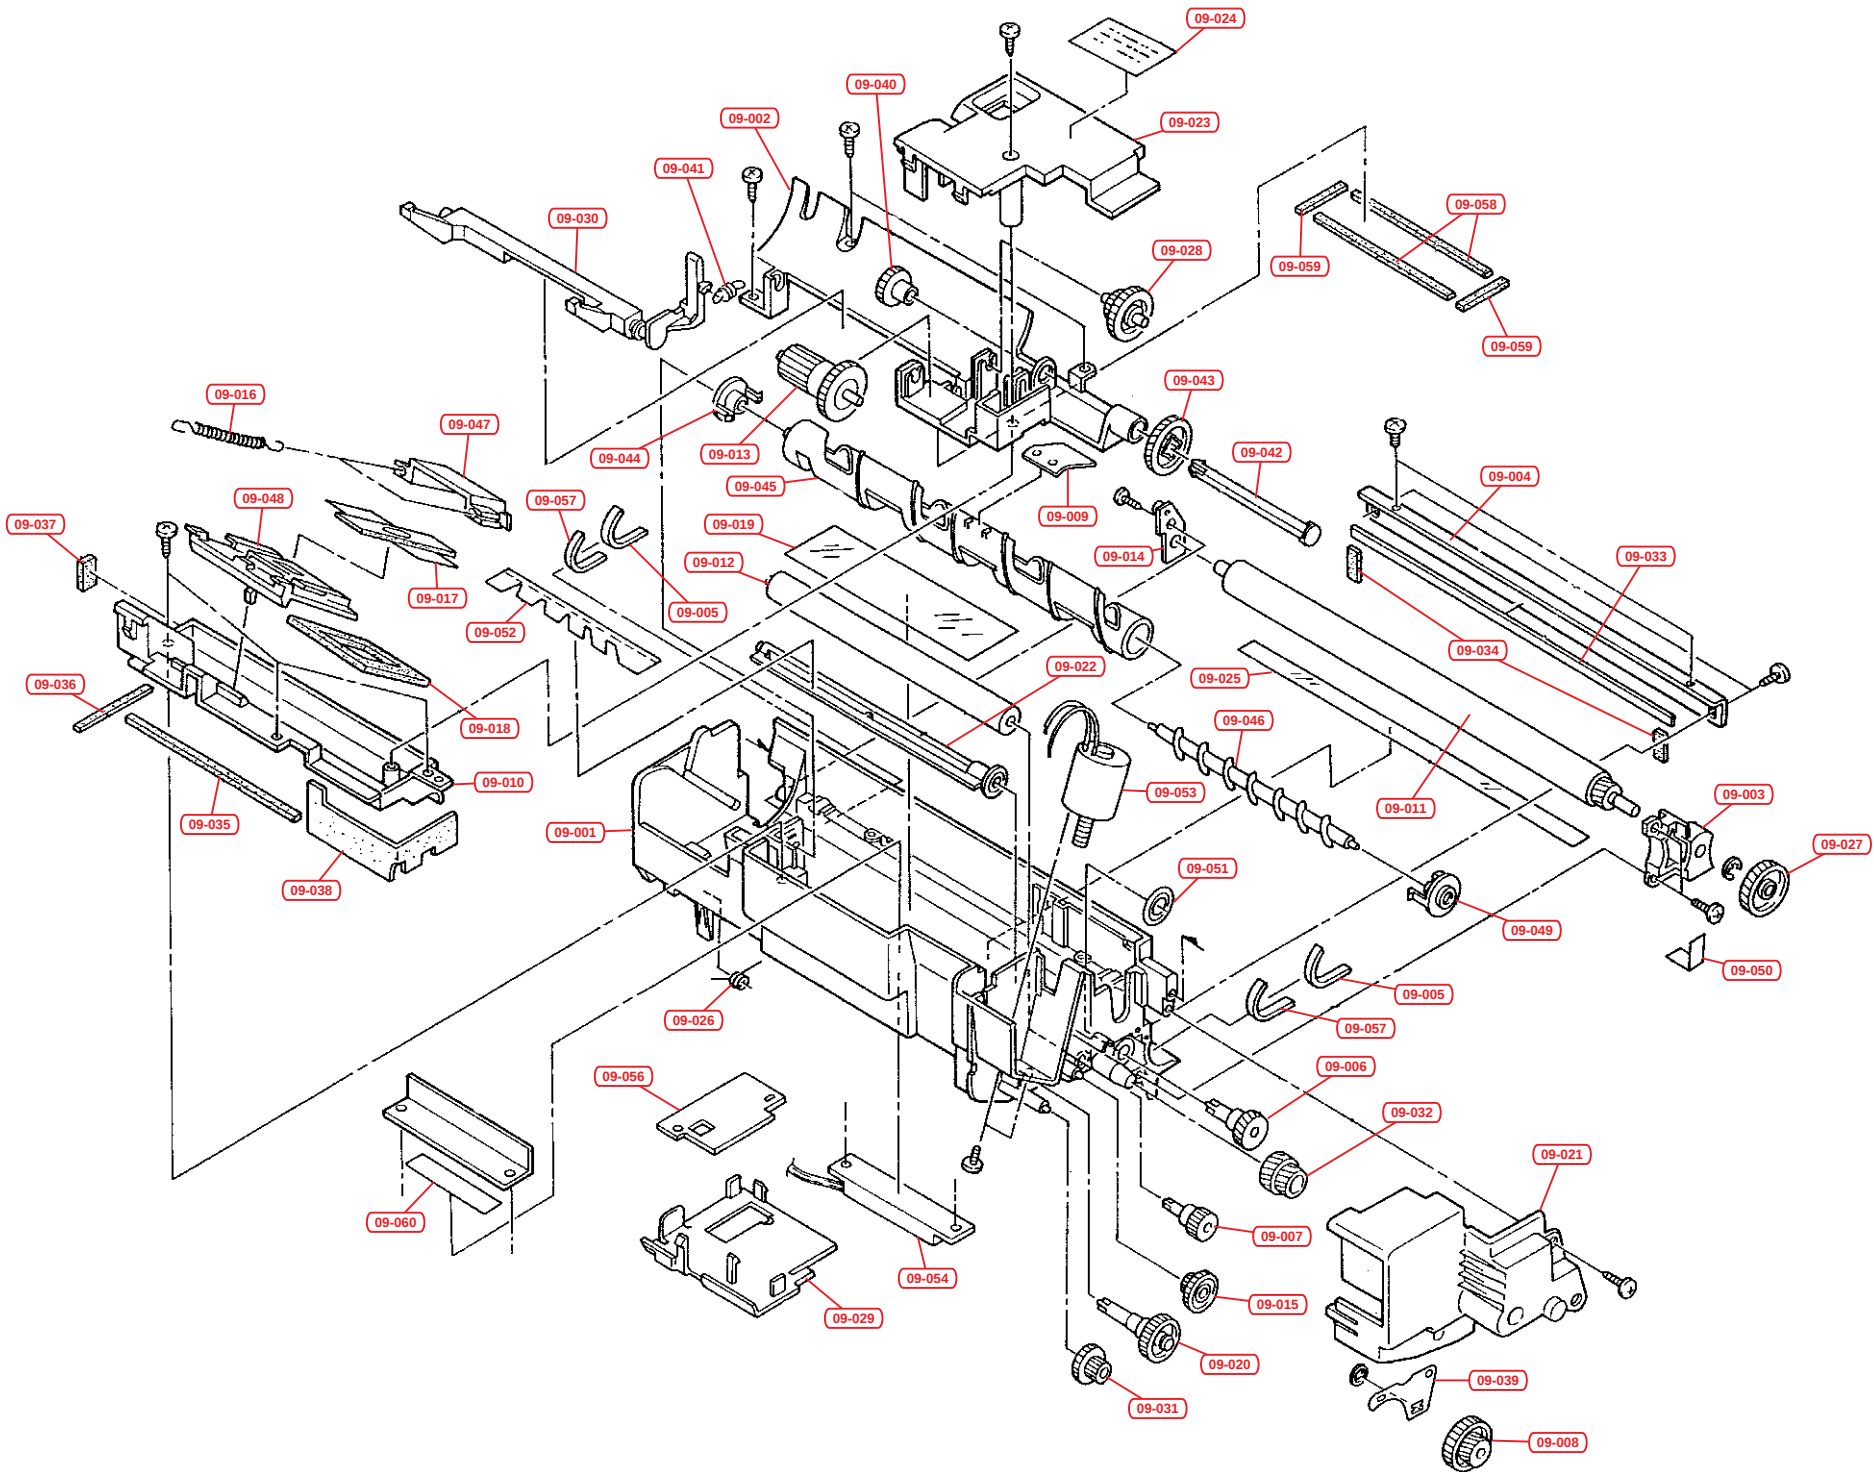

Ref No.	Part Code	Description	Quantity
09-001	VB866SB011	CASE DLP	1
09-002	VX865SB006	COVER DEVE	1
09-003	VX442DB002	FLANGE MG	1
09-004	ML821BD003	BLADE DLP	1
09-005	VS418YF001	SEAL SIDE DLP	2
09-006	VG127DN034	GEAR MIXER	1
09-007	VG137DN009	GEAR SUPPLY	1
09-008	VG148DB028	GEAR Z31S-Z15S	1
09-009	VS227LB002	SCRAPER SENSOR	1
09-010	VX755SB001	COVER HOPPER	1
09-011	AVROLER025	ROLL MAG	1
09-012	AVROLER026	ROLL SUPPLY	1
09-013	VG148DB029	GEAR Z32S-Z17S	1
09-014	VS326SB005	PLATE ANGLE	1
09-015	VG147DN007	GEAR Z34S-Z17S	1
09-016	MW231SX003	SPRING SHUTTER	2
09-017	VS431YB001	SEAL SHUTTER DLP	1
09-018	VS448RJ001	SEAL SHUTTER GUIDE	1
09-019	VS731KJ001	TAPE SENSOR FACE	1
09-020	VG142DN002	GEAR SCRAPER	1
09-021	VX766SB012	BKT GEAR MOTOR	1
09-022	VX720SN001	SCRAPER DLP	1
09-023	VX765SB003	COVER DLP	1
09-024	VVL542WN03	LABEL DLP	1
09-025	VS821KF015	SHEET MAG	1
09-026	MW401LD002	SPRING TACT	1
09-027	VG133DN003	GEAR JOINT DRUM	1
09-028	VG333DN001	GEAR Z30S-Z17S	1
09-029	VX663SB010	COVER PWB	1
09-030	VX755CB001	HOOK CONT	1
09-031	VG142DN001	WORM WHEEL DLP	1
09-032	VG122DN002	GEAR Z18S-Z16S	1
09-033	VS817RF012	SEAL L	1
09-034	VS217RF018	SEAL S	2
09-035	VS717RJ001	SEAL HOPPER A	1
09-036	VS617RJ002	SEAL HOPPER B	1
09-037	VS217RJ005	SEAL HOPPER C	1
09-038	VS927RJ001	SEAL HOPPER D	1
09-039	MS433LD001	PLATE GEAR	1
09-040	VG127DN035	GEAR CONT Z19	1
09-041	MW161LD019	SPRING HOOK	1
09-042	VX660SB001	SHAFT GEAR	1
09-043	VG143DN001	GEAR Z31S	1
09-044	VM170DN006	FLANGE TUBE L	1
09-045	VM870SN002	TUBE MIXER	1

Ref No.	Part Code	Description	Quantity
09-046	VX821SN001	SHAFT MIXER	1
09-047	VX531SB003	SHUTTER DLP	1
09-048	VX662SB016	GUIDE SHUTTER DLP	1
09-049	VM276DB010	FLANGE TUBE R	1
09-050	ML322LD002	PLATE BIAS	1
09-051	VS201KN002	SEAL SHIELD CNT	1
09-052	VS711KF002	SHEET SCRAPER	1
09-053	AYFS400E27	TONER MOTOR ASSY	1
09-054	AXTS018GEA	TONER SENSOR ASSY	1
09-056	APRZZC2005AH	P.W. BOARD ASSY	1
09-057	VS412XJ002	TAPE SIDE DLP	2
09-058	VS818RF011	SEAL COVER DEVE L	2
09-059	VS218RF022	SEAL COVER DEVE S	2
09-060	VVL641WN35	LABEL CAUTION DLP	1
09-061	VS642KF005	SHEET SP	1
09-062	VS811RF008	SHEET BOTTOM DLP	1
09-063	ML711RD001	PLATE SUPPLY	1
09-064	VS621KF011	SHEET SCRAPER A	1
09-065	VS621KF012	SHEET SCRAPER B	1
09-073	VS422RF003	SHEET FRANGE	1
09-074	VS324RF003	SHEET CASE R	1
09-075	VS224RF002	SHEET CASE L	1
09-076	VS628LB001	SEAL CASE SIDE	1