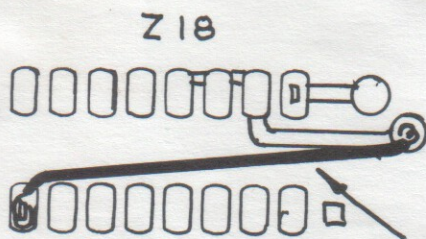**Processor Technology**

Three layout errors exist on the Sol-KBD PC board you received. These errors must be corrected before you check the circuit board and start assembly. How these errors are corrected are described below:
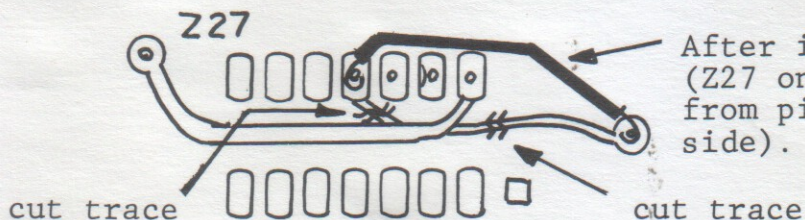
1. Key Pad #55

55
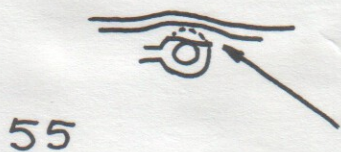
Using a sharp point, cut the bridge between the pad at 55 and the trace above (solder side).

2. U18, Pin 8

After installation of socket at U18 (Z18 on etch), install jumper wire from pin 8 to ground trace as shown. (Solder side.)

3. U27, Pin 11

cut trace

cut trace

After installation of socket at U27 (Z27 on etch) install jumper wire from pin 11 to pad as shown (solder side).

CN #3