



NETGEAR[®]

GS748T Gigabit Smart Switch

Hardware Installation Guide

350 East Plumeria Drive
San Jose, CA 95134
USA

August 2012
202-10725-02
v2.0

GS748T Gigabit Smart Switch

©2012 by NETGEAR, Inc. All rights reserved

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the written permission of NETGEAR, Inc.

NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice. Other brand and product names are registered trademarks or trademarks of their respective holders. ©2012 All rights reserved.

Technical Support

Thank you for choosing NETGEAR. To register your product, get the latest product updates, get support online, or for more information about the topics covered in this manual, visit the Support website at

<http://support.netgear.com>

Phone (US & Canada only): 1-888-NETGEAR

Phone (Other Countries): Check the list of phone numbers at

http://support.netgear.com/app/answers/detail/a_id/984

Statement of Conditions

To improve internal design, operational function, and/or reliability, NETGEAR reserves the right to make changes to the products described in this document without notice. NETGEAR does not assume any liability that may occur due to the use, or application of, the product(s) or circuit layout(s) described herein.

Revision History

Publication Part Number	Version	Publish Date	Comments
202-10725-02	v2.0	August 2012	Second publication

Contents

Chapter 1 Introduction

Overview	6
Features	7
Package Contents	8

Chapter 2 Physical Description

GS748T Front-Panel and Back-Panel Configuration	10
LED Designations	11
Port LEDs	11
System LED	11
Device Hardware Interfaces	12
RJ-45 Ports	12
SFP Ports	12
Reset Button	13
Factory Defaults Button	13

Chapter 3 Applications

Desktop Switching	16
Backbone Switching	17

Chapter 4 Installation

Step 1: Prepare the Site	20
Step 2: Install the Switch	21
Install the Switch on a Flat Surface	21
Install the Switch in a Rack	21
Step 3: Check the Installation	22
Step 4: Connect Devices to the Switch	23
Step 5: Install an SFP Transceiver Module	24
Step 6: Apply AC Power	25
Step 7: Manage the Switch using a Web Browser or the Smart Control Center	26

Appendix A Troubleshooting

Troubleshooting Chart	28
Additional Troubleshooting Suggestions	29
Network Adapter Cards	29
Configuration	29

Switch Integrity29
Auto-Negotiation.....29

Appendix B Technical Specifications

Appendix C Notification of Compliance

Index

Introduction

1

Congratulations on the purchase of your NETGEAR® ProSafe™ GS748T Gigabit Smart Switch! Your GS748T switch is a state-of-the-art, high-performance, IEEE-compliant network solution designed for users who require a large number of ports and want the power of Gigabit connectivity to eliminate bottlenecks, boost performance, and increase productivity. There are 48 twisted-paired ports with 4 SFP GBIC slots (two SFP slots are combo ports) on the front panel of the switch which support non-stop 10/100/1000 networks. To simplify installation, the switch is shipped ready for use out of the box.

The *GS748T Smart Switch Hardware Installation Guide* describes how to install and power on the GS748T. The information in this manual is intended for readers with intermediate computer and Internet skills.

This chapter serves as an introduction to the GS748T and provides the following information:

- *Overview*
- *Features*
- *Package Contents*

Overview

The NETGEAR GS748T Gigabit Smart Switch provides 48 twisted-pair ports with four built-in Small Form Factor (SFP) GBIC slots that support nonstop 1000M fiber networks.

Using these Gigabit slots, you can create high-speed connections to a server or network backbone. For example, you can:

- Connect switches to each other with high-speed links
- Link to high-speed servers
- Provide 10/100/1000M copper and 1000M fiber connectivity

The NETGEAR GS748T Gigabit Smart Switch also provides the benefit of administrative management with a complete package of features for the observation, configuration, and control of the network. With a Web-based Graphical User Interface (GUI), the switch's many capabilities can be viewed and used in a simple and intuitive manner. The switch's management features include configuration for port and switch information, VLAN for traffic control, port trunking for increased bandwidth, Class of Service (CoS) for traffic prioritization, IPv6 Management support to enable IPv6 operation over the network port, IPv6 QoS, IPv6 ACL, static routing, and EEE support. These features provide better understanding and control of the network. Initial discovery of the switch on the network requires the Smart Control Center program, a utility that runs on a computer.

The NETGEAR GS748T Gigabit Smart Switch can be free standing or rack mounted in a wiring closet or equipment room. It is IEEE-compliant and offers low latency for high-speed networking. All ports can automatically negotiate to the highest speed. This capability makes the switch ideal for environments that have a mix of Ethernet, Fast Ethernet, or Gigabit Ethernet devices. In addition, all RJ-45 ports operate in half-duplex or full-duplex mode. The maximum segment length is 328 feet (100 meters) over Category 5 Unshielded Twisted-Pair (UTP) cable.

Features

The following list identifies the key features of the GS748T:

- Forty-eight 10/100/1000 Mbps auto-sensing Gigabit-Ethernet switching ports.
- Two SFP combo ports.
- Two dedicated 1000M SFP fiber ports.
- Full NETGEAR Smart Switch functionality.
- Full compatibility with IEEE standards:
 - IEEE 802.3i (10BASE-T)
 - IEEE 802.3u (100BASE-TX)
 - IEEE 802.3ab (1000BASE-T)
 - IEEE 802.3z (1000BASE-x)
 - IEEE 802.3az (Energy Efficient Ethernet)
 - IEEE 802.3x (Full-duplex flow control)
- Autosensing and auto-negotiating capabilities for all ports.
- Auto Uplink™ on all ports to make the right connection.
- Automatic address learning function to build the packet-forwarding information table. The table contains up to 8K Media Access Control (MAC) addresses.
- Store-and-Forward transmission to remove bad packets from the network.
- Full-duplex IEEE 802.3x pause frame flow control.
- Active flow control to minimize packet loss and frame drops.
- Half-duplex backpressure control.
- Per port LEDs and power LED.
- Internal power supply.
- Standard NETGEAR 7xx series chassis.
- NETGEAR Green product series power-saving features:
 - Automatic power consumption adjustment based on the RJ-45 cable length.
 - Per port automatic power down when the port link is down.
 - Energy Efficient Ethernet (EEE), defined by IEEE 802.3az, supports operation in a Low Power Mode.

Package Contents

Figure 1 shows the package contents of the GS748T Gigabit Smart Switch.

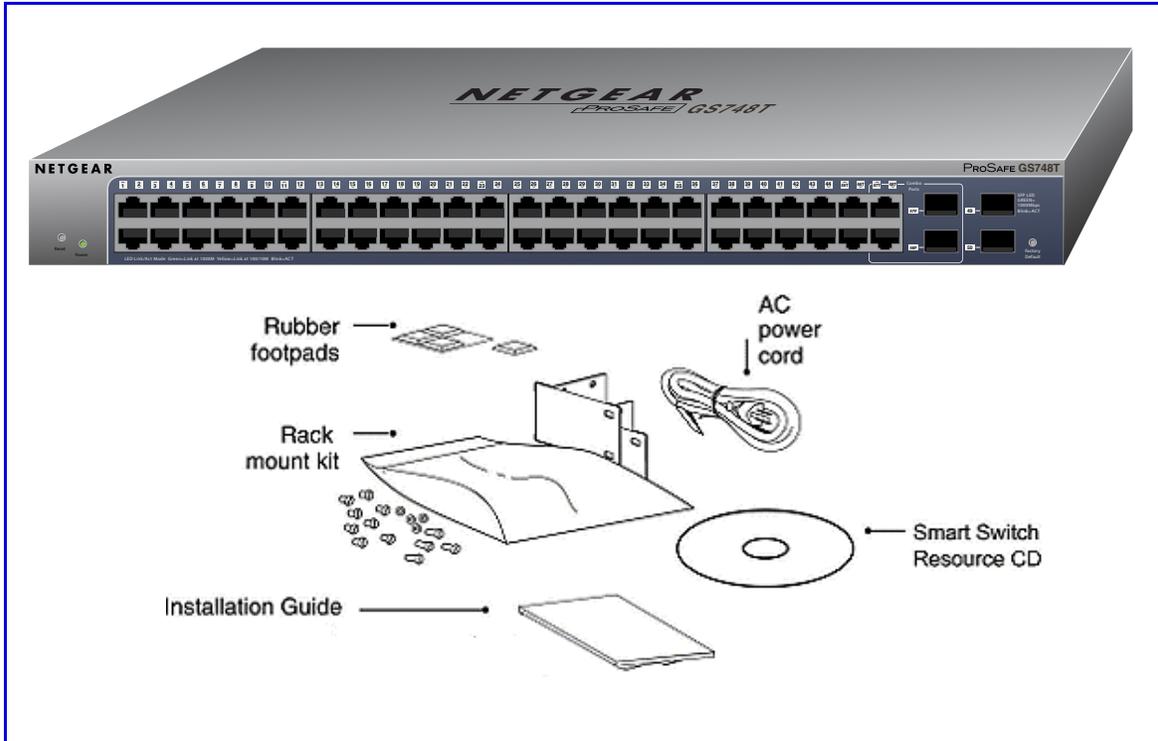


Figure 1. Package Contents

Verify that the package contains the following:

- GS748T Gigabit Smart Switch
- Rubber footpads for tabletop installation
- Rackmounting kits
- Power cord
- Quick Installation guide
- Smart Switch Resource CD with NETGEAR Smart Control Center and Installation Guide

If any item is missing or damaged, contact the place of purchase immediately.

Physical Description

2

This chapter describes the GS748T Gigabit Smart Switch hardware features. Topics include:

- *GS748T Front-Panel and Back-Panel Configuration*
- *LED Designations*
- *Device Hardware Interfaces*

GS748T Front-Panel and Back-Panel Configuration

The GS748T has 48 10/100/1000 Mbps copper ports, two 1000 Mbps SFP combo ports, and two dedicated 1000 Mbps SFP fiber ports. The SFP combo ports are shared with copper ports 47 and 48. If the SFP combo ports are in use, copper ports 47 and 48 are inactive.

Each port is capable of sensing the line speed and negotiating the duplex mode with the link partner automatically.

Figure 2 illustrates the front panel of the NETGEAR GS748T.

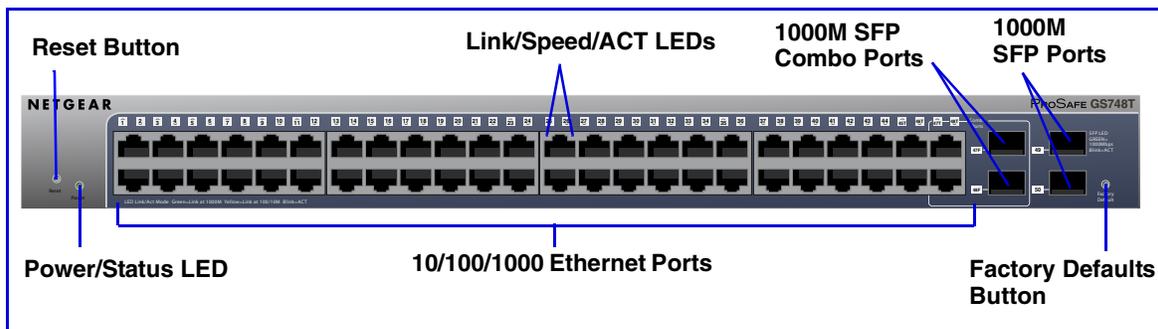


Figure 2. Front Panel

The front panel contains the following:

- 48 RJ-45 connectors for 10/100/1000 Mbps autosensing Gigabit Ethernet switching ports
- Two SFP combo Gigabit Ethernet switching ports
- Two dedicated 1000 Mbps SFP Gigabit Ethernet switching ports
- Reset button to restart the device
- Recessed default reset button to restore the device back to the factory defaults
- Link, Speed, and Activity LEDs for each port
- Power and Status LED

Figure 3 illustrates the NETGEAR GS748T back panel.

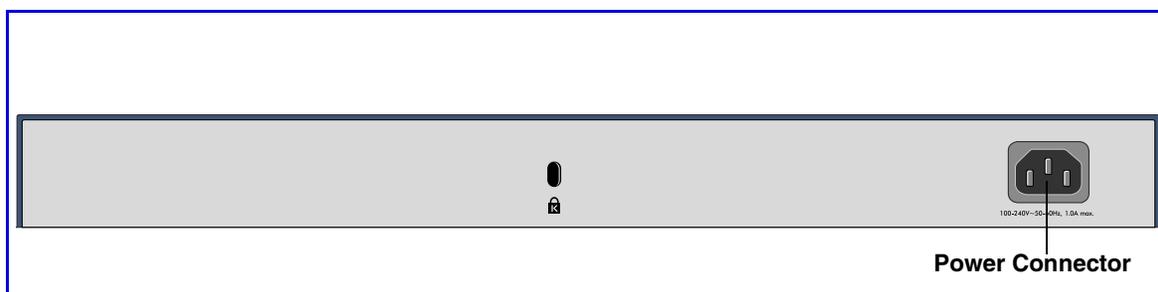


Figure 3. Back Panel

The back panel contains a power connector.

LED Designations

Port LEDs

The following table describes the RJ-45, combo, and dedicated SFP port LED designations. There are two LEDs for each RJ-45 port. Each SFP port has its own indication LED.

LED	Designation
Link/Speed/ACT LED mode for copper ports 1 to 48:	<ul style="list-style-type: none"> • Off—No link established. • Solid Green—A valid 1000 Mbps link is established. • Blinking Green—The port is transmitting or receiving packets at 1000 Mbps. • Solid Yellow—A valid 10/100 Mbps link is established. • Blinking Yellow—The port is transmitting or receiving packets at 10/100 Mbps. <p>If the media for ports 47 and 48 changes to SFP, the port LED for copper ports 47 and 48 changes to off.</p>
Link/ACT LED for SFP ports 47 to 50:	<ul style="list-style-type: none"> • Off—No SFP module link is established • Solid Green—A valid 1000 Mbps SFP module link is established. • Blinking Green—The port is transmitting or receiving packets at 1000 Mbps. <p>If the media for ports 47 and 48 changes to copper, the port LED for the SFP combo ports changes to off.</p>

System LED

The following table describes the system LED designations.

LED	Designation
Power	<ul style="list-style-type: none"> • Green—Device is powered on, run-time code is up and running • Off—Power is not supplied to the device

Device Hardware Interfaces

RJ-45 Ports

RJ-45 ports are autosensing ports. When inserting a cable into an RJ-45 port, the switch automatically ascertains the maximum speed (10, 100, or 1000 Mbps) and duplex mode (half-duplex or full-duplex) of the attached device. All ports support only unshielded or shielded twisted-pair (UTP or STP) cable terminated with an 8-pin RJ-45 plug.

To simplify the procedure for attaching devices, all RJ-45 ports support Auto Uplink. This technology allows attaching devices to the RJ-45 ports with either straight-through or crossover cables. When inserting a cable into the switch's RJ-45 port, the switch automatically:

- Senses whether the cable is a straight-through or crossover cable.
- Determines whether the link to the attached device requires a “normal” connection (such as when connecting the port to a computer) or an “uplink” connection (such as when connecting the port to a router, switch, or hub).
- Configures the RJ-45 port to enable communications with the attached device, without requiring user intervention. In this way, the Auto Uplink technology compensates for setting uplink connections, while eliminating concern about whether to use crossover or straight-through cables when attaching devices.

SFP Ports

To enable you to have fiber connections on your network, there are four SFP ports that accommodate standard SFP transceiver modules, which are sold separately. Two SFP ports are combo ports and share connections with the last two RJ-45 ports. The SFP combo ports and the shared RJ-45 ports are ports 47 and 48.

Only one type of connection of a combo port can be active at any time. For example, if SFP port 48 is in use, copper port 48 is not active.

Note: If both connectors of a combo port are connected to other devices, only the fiber port is active.

SFP ports 49 and 50 are dedicated SFP ports and are not combined with any RJ-45 ports.

Reset Button

The Smart Switch has a Reset button on the front panel to allow you to manually reboot the switch. This action is equivalent to powering the unit off and back on. The last saved configuration is loaded into the switch as it resets. To operate the Reset button, insert a device such as a paper clip into the opening to press the recessed button. The front-panel LEDs should extinguish and light again as the switch performs its Power On Self Test (POST).

Factory Defaults Button

The Smart Switch has a Factory Defaults button on the front panel so that you can remove the current configuration and return the device to its factory settings. When you enable the Factory Defaults button, all settings including the password, VLAN settings, and port configurations are removed. To operate the Factory Defaults button, insert a device such as a paper clip into the opening to press the recessed button for over two seconds.

Applications

3

Your GS748T Gigabit Smart Switch is designed to provide flexibility in configuring your network connections. It can be used as your only network traffic-distribution device or with 10 Mbps, 100 Mbps, and 1000 Mbps hubs and switches.

Desktop Switching

The GS748T can be used as a desktop switch to build a small network that enables users to have 1000 Mbps access to a file server. With full-duplex enabled, the switch port connected to the server or computer can provide 2000 Mbps throughput.

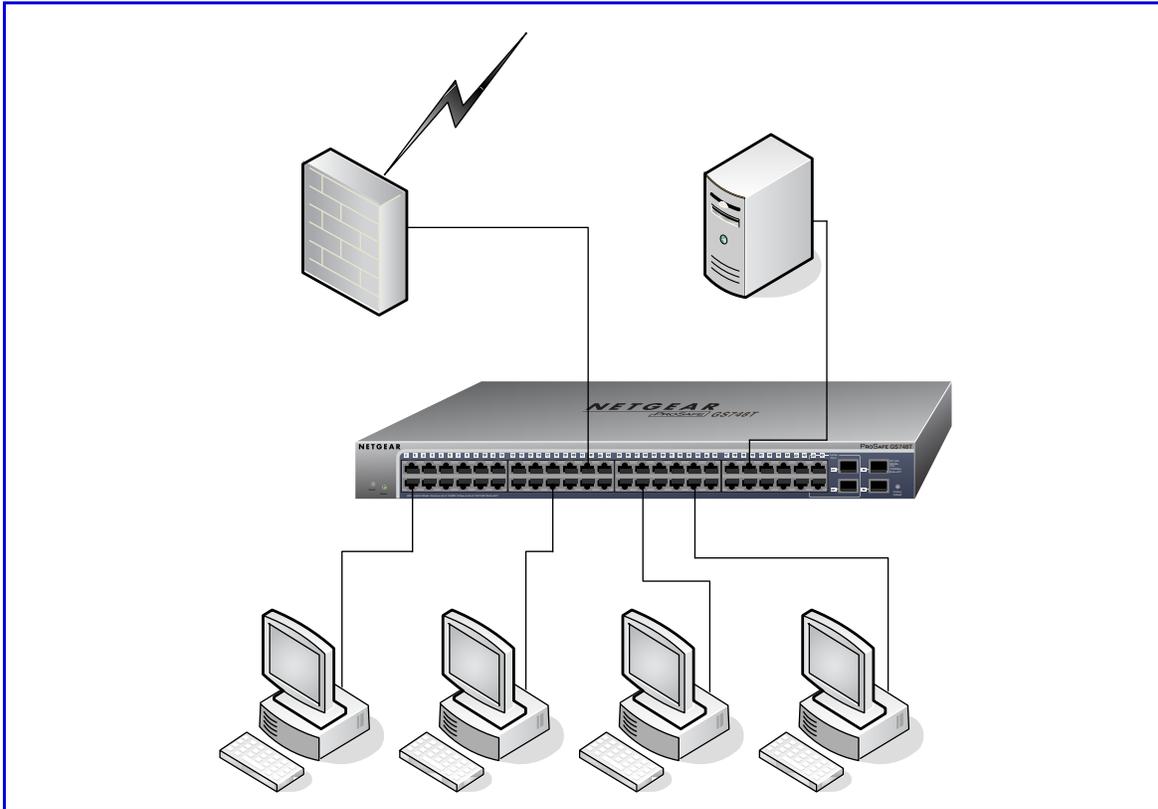


Figure 4. Desktop Switching

Backbone Switching

You can use the GS748T Gigabit Smart Switch as a backbone switch in a small network that gives users high-speed access to servers and other network devices.

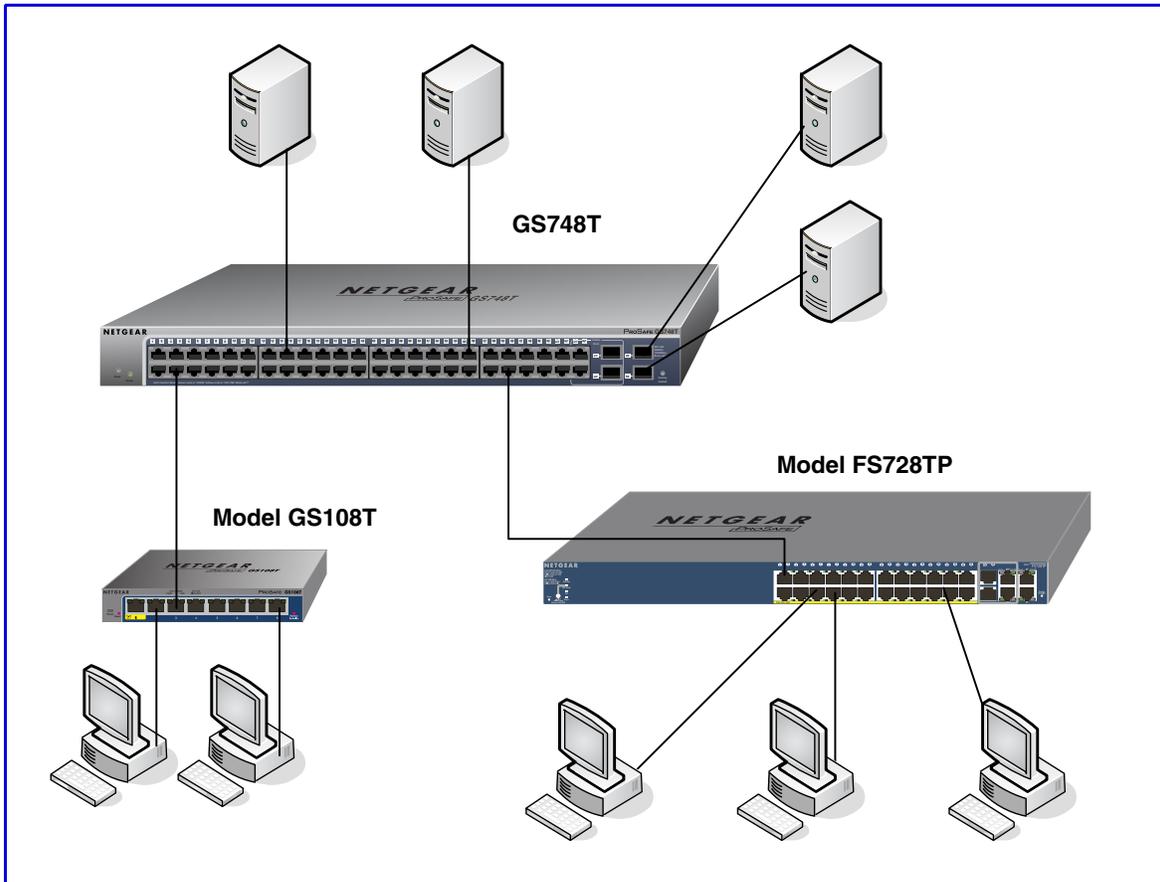


Figure 5. Backbone Switching

Installation

4

This chapter describes the installation procedures for your GS748T Gigabit Smart Switch. Switch installation involves the following steps:

Step 1: Prepare the Site

Step 2: Install the Switch

Step 3: Check the Installation

Step 4: Connect Devices to the Switch

Step 5: Install an SFP Transceiver Module

Step 6: Apply AC Power

Step 7: Manage the Switch using a Web Browser or the Smart Control Center

Step 1: Prepare the Site

Before you install the switch, ensure the operating environment meets the site requirements in the following table.

Characteristics	Requirements
Mounting	<ul style="list-style-type: none"> • Desktop installations - Provide a flat table or shelf surface. • Rackmount installations - Use a 19-inch (48.3-centimeter) EIA standard equipment rack that is grounded and physically secure. The rackmount kit supplied with the switch is also required.
Access	Locate the switch in a position that allows access to the front-panel RJ-45 ports, view the front-panel LEDs, and access the power connector.
Power source	Provide a power connection cord. Power specifications for the switch are shown in Appendix A . Ensure the AC outlet is not controlled by a wall switch, which can accidentally turn off power to the outlet and the switch.
Environmental	<ul style="list-style-type: none"> • Temperature - Install the switch in a dry area, with ambient temperature between 0 and 50°C (32°F and 122°F). Keep the switch away from heat sources such as direct sunlight, warm air exhausts, hot-air vents, and heaters. • Operating humidity - The installation location should have a maximum relative humidity of 90%, non-condensing. • Ventilation - Do not restrict airflow by covering or obstructing air inlets on the sides of the switch. Keep at least 2 inches (5.08 centimeters) free on all sides for cooling. Be sure there is adequate airflow in the room or wiring closet where the switch is installed. • Operating conditions - Keep the switch at least 6 ft. (1.83 meters) away from nearest source of electromagnetic noise, such as a photocopy machine.

Step 2: Install the Switch

The GS748T can be used on a flat surface or mounted in a standard network equipment rack.

Install the Switch on a Flat Surface

The switch ships with four self-adhesive rubber footpads. Stick one rubber footpad on each of the four concave spaces on the bottom of the switch. The rubber footpads cushion the switch against shock and vibrations. They also provide ventilation space between stacked switches.

Install the Switch in a Rack

To install the switch in a rack, you need the 19-inch rackmount kit supplied with switch.

1. Attach the supplied mounting brackets to the side of the switch.
2. Insert the screws provided in the rackmount kit through each bracket and into the bracket mounting holes in the switch.
3. Tighten the screws with a #1 Phillips screwdriver to secure each bracket.
4. Align the mounting holes in the brackets with the holes in the rack, and insert two pan-head screws with nylon washers through each bracket and into the rack.
5. Tighten the screws with a #2 Phillips screwdriver to secure mounting brackets to the rack.

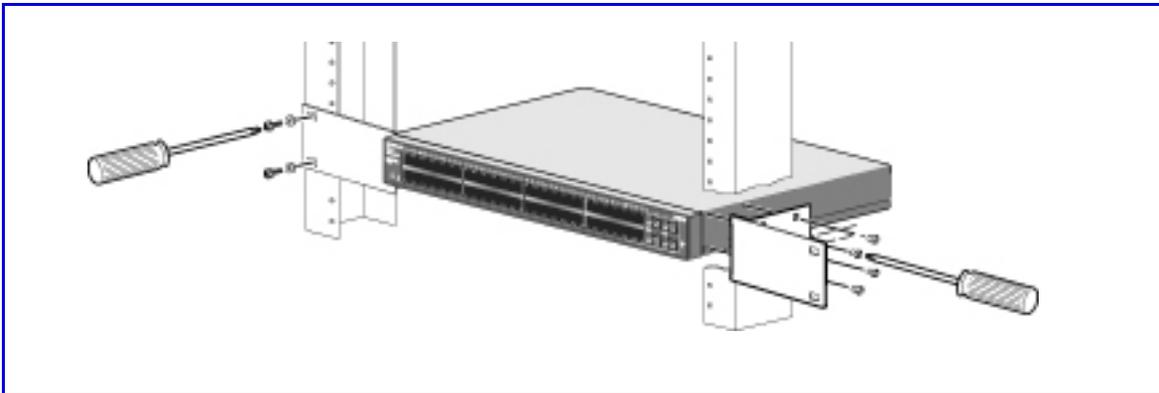


Figure 6. Rack Mount

Step 3: Check the Installation

Before applying power to the switch, perform the following steps:

- Inspect the equipment thoroughly.
- Verify that all cables are installed correctly.
- Check cable routing to make sure cables are not damaged or creating a safety hazard.
- Ensure all equipment is mounted properly and securely.

Step 4: Connect Devices to the Switch

The following procedure describes how to connect computers to the switch's RJ-45 ports. The GS748T contains Auto Uplink technology, which allows the attaching of devices using either straight-through or crossover cables.

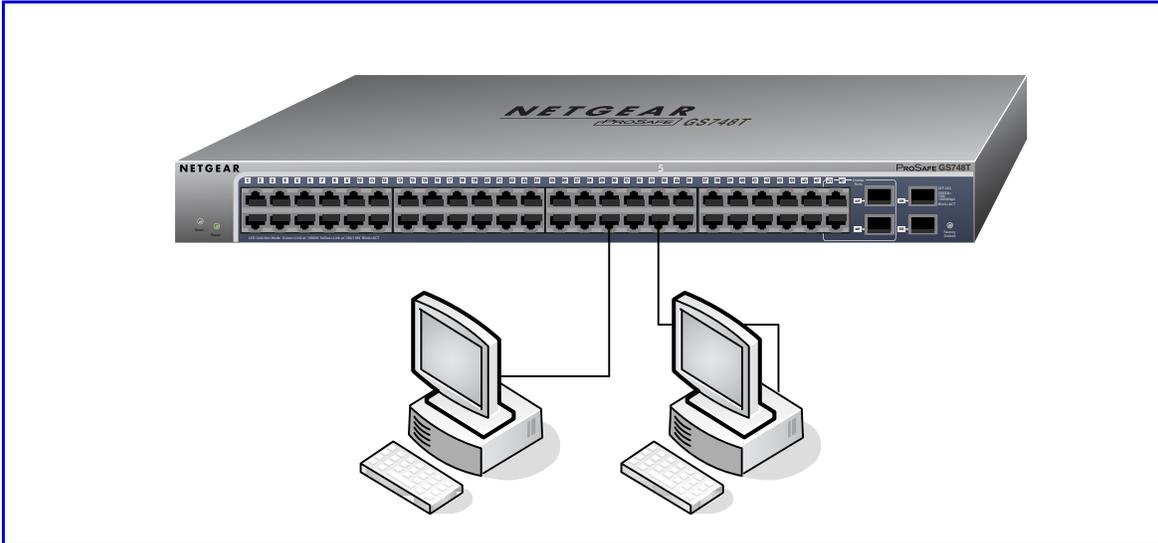


Figure 7. Connect Devices to the Switch

Connect each computer to an RJ-45 network port on the Switch front panel (*Figure 7*). Use Category 5 (Cat5) Unshielded Twisted-Pair (UTP) cable terminated with an RJ-45 connector to make these connections.

Note: Ethernet specifications limit the cable length between the switch and the attached device to 100m (328 ft.).

Step 5: Install an SFP Transceiver Module

The following procedure describes how to install an optional SFP transceiver module into one of the SFP ports of the switch.

Note: Contact your NETGEAR sales office to buy these modules. If you do not want to install an SFP module, skip this procedure.

To install an SFP transceiver, insert the transceiver into the SFP port. Press firmly on the flange of the module to seat it securely into the connector. You can install up to three additional Gigabit Ethernet modules using this procedure.

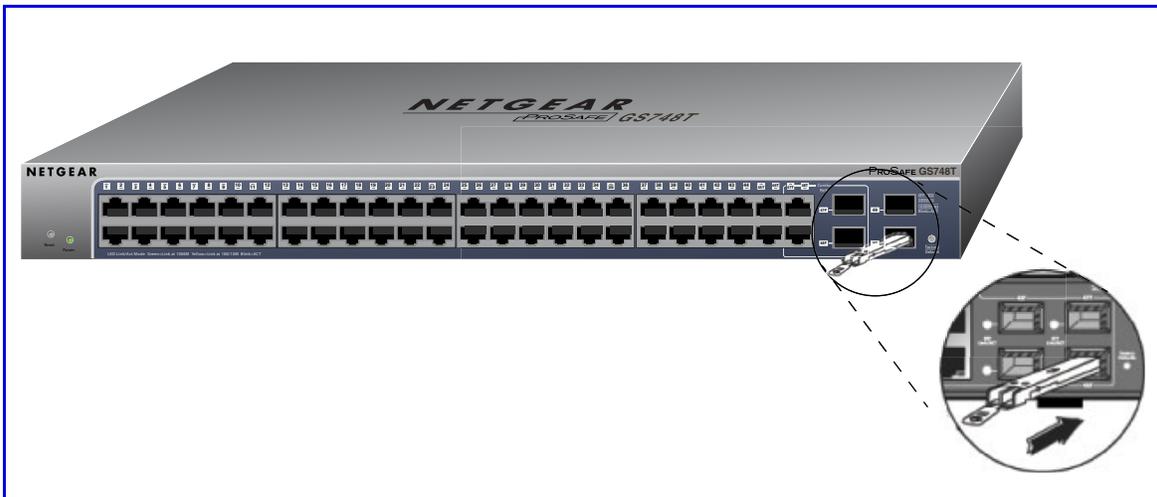


Figure 8. Install an SFP Transceiver Module

Step 6: Apply AC Power

The GS748T Gigabit Smart Switch does not have an ON/OFF switch. Power must be controlled by the power cord connection.

Before connecting the power cord, select an AC outlet that is not controlled by a wall switch, which can turn off power to the switch. After selecting an appropriate outlet, use the following procedure to apply AC power:

1. Connect the end of the power connection cable to the power receptacle on the back of the switch.
2. Connect the AC power connection cable into a power source such as a wall socket or power strip.

When applying power, the green Power LED on the switch's front panel illuminates.

If the Power LED does not go on, check that the power cable is plugged in correctly and that the power source is good. If this does not resolve the problem, refer to [Appendix A](#).

Step 7: Manage the Switch using a Web Browser or the Smart Control Center

The GS748T contains software for viewing, changing, and monitoring the way it works. This management software is not required for the switch to work. The ports can be used without using the management software. However, the management software enables the setup of VLAN and trunking features, IPv6 management support to enable IPv6 operation over the network port, IPv6 QoS (ACL), static routing, EEE support, and also improves the efficiency of the switch, which results in the improvement of its overall performance as well as the performance of the network.

After powering up the switch for the first time, the Smart Switch can be configured using a Web browser or a program called Smart Control Center. For more information about managing the switch, see the *GS748T Software Administration Manual* on the Smart Switch Resource CD.

Note: The switch is configured with a default IP address of 192.168.0.239 and a subnet mask of 255.255.255.0.

Troubleshooting



This chapter provides information about troubleshooting the NETGEAR Smart Switch. Topics include the following:

- *Troubleshooting Chart*
- *Additional Troubleshooting Suggestions*

Troubleshooting Chart

The following table lists symptoms, causes, and solutions of possible problems.

Symptom	Cause	Solution
Power LED is off.	No power is received.	Check the power cord connections and the connected device. Ensure all cables used are correct and comply with Ethernet specifications.
Link LED is off or intermittent.	Port connection is not working.	Check the crimp on the connectors and make sure that the plug is properly inserted and locked into the port at both the switch and the connecting device. Ensure all cables used are correct and comply with Ethernet specifications. Check for a defective computer adapter card, cable, or port by testing them in an alternate environment where all products are functioning.
File transfer is slow or performance degradation is a problem.	Half-duplex or full-duplex setting on the switch and the connected device are not the same.	Make sure the attached device is set to auto-negotiate.
A segment or device is not recognized as part of the network.	One or more devices are not properly connected, or cabling does not meet Ethernet guidelines.	Verify that the cabling is correct. Ensure all connectors are securely positioned in the required ports. Equipment may have been accidentally disconnected.
ACT LED is flashing continuously on all connected ports and the network is disabled.	A network loop (redundant path) has been created.	Break the loop by ensuring that there is only one path from any networked device to any other networked device. After you connect to the switch management interface, you can configure the Spanning Tree Protocol (STP) to prevent network loops.

Additional Troubleshooting Suggestions

If the suggestions in Troubleshooting Chart do not resolve the problem, refer to the troubleshooting suggestions in this section.

Network Adapter Cards

Ensure the network adapter cards installed in the computers are in working condition and the software driver has been installed.

Configuration

If problems occur after altering the network configuration, restore the original connections and determine the problem by implementing the new changes, one step at a time. Ensure that cable distances, repeater limits, and other physical aspects of the installation do not exceed the Ethernet limitations.

Switch Integrity

If required, verify the integrity of the switch by resetting the switch. To reset the switch, remove the AC power from the switch and then reapply AC power. If the problem continues, contact NETGEAR technical support. In North America, call 1-888-NETGEAR. If you are outside of North America, please refer to the support information card included with your product.

Auto-Negotiation

The RJ-45 ports negotiate the correct duplex mode, speed, and flow control if the device at the other end of the link supports auto negotiation. If the device does not support auto negotiation, the switch determines only the speed correctly, and the duplex mode defaults to half-duplex.

Technical Specifications



Network Protocol and Standards Compatibility

IEEE 802.3 10BASE-T

IEEE 802.3u 100BASE-TX

IEEE 802.3ab 1000BASE-T

IEEE 802.3z 1000BASE-X

IEEE 802.3az (Energy Efficient Ethernet)

IEEE 802.3x full-duplex flow control

Management

Windows 2000 + XP, Vista; Windows 7, Microsoft Explorer 7.0 or above

IEEE 802.1Q VLAN

IEEE 802.3ad Link Aggregation

IEEE 802.1D Spanning Tree Protocol

IEEE 802.1w Rapid Spanning Tree Protocol

IEEE 802.1s MSTP

IEEE 802.1X Port Security

IEEE 802.1AB LLDP

SNMP v1, v2c, and v3

HTTP and HTTPS

Port Mirroring (RX, TX, and Both)

IGMP Snooping v1/v2/v3

IEEE 802.1p Class of Service (CoS)

SNTP (Simple Network Time Protocol) 3 servers. Disabled by default.

Jumbo Frame Support (9K)

Static LAGs
Broadcast Storm Recovery
RMON 1,2,3,9
Static L2 Multicast Filtering
Voice VLAN
Protected Ports
DHCP Filtering
Cable Test
Syslog (RFC 3164)
Persistent log supported
Port Locking
Denial of Service Protection (control plane)
Denial of Service Protection (data plane)
TACACS+
RADIUS
EAPoL Forwarding
BPDU Flooding
Auto VoIP
Auto Video
Auto DoS
ACL Wizard
Management Security
Smart Control Center Discovery
Static Routing
Boot code update
Password management
IPv6 management
Text-based config
Inventory Support (Customized)
Restore Defaults Push Button
Restore Defaults via Web

Standard L2 MIBs support

User ID configuration

Authentication login lists

IPv4 and IPv6 DiffServ

MAC, IPv4 and IPv6 ACL

Dual Image Support

Interface

48 RJ-45 connectors for 10BASE-T, 100BASE-TX, and 1000BASE-T (Auto Uplink™ on all ports)

Two SFP combo ports for SFP modules

Two dedicated SFP ports for SFP modules

LEDs

Per RJ-45 port: Speed/Link/Activity

Per SFP port: Speed/Link/Activity

Per device: Power

Performance Specifications

Forwarding modes: Store-and-forward

Bandwidth: 100 Gbps

Address database size: 8K media access control (MAC) addresses per system

Mean Time Between Failure (MTBF): greater than 160,000 hours at 25°C

Power Supply

100 VAC–240 VAC/50 Hz–60 Hz, 2.0A Max, universal input

Physical Specifications

Dimensions (H x W x D): 1.7 x 17.3 x 10.1/43 x 440 x 257 (in/mm)

Weight: 3.8 kg (8.4 lbs)

Environmental Specifications

Operating temperature: 0°C to 50°C (32°F to 122°F)

Operating humidity: 10% to 90% maximum relative humidity, noncondensing

GS748T Gigabit Smart Switch

Storage temperature: -20°C to 70°C (-4°F to 158°F)

Storage humidity: 5% to 95% maximum relative humidity, noncondensing

Electromagnetic Emissions

CE Class A, including EN 55022 (CISPR 22), EN 55024, and EN 50082-1

FCC Part 15 Class A

VCCI Class A

C-Tick

KC

Safety

UL/cUL

CE EN 60950-1

Notification of Compliance



NETGEAR Wired Products

Regulatory Compliance Information

This section includes user requirements for operating this product in accordance with National laws for usage of radio spectrum and operation of radio devices. Failure of the end-user to comply with the applicable requirements may result in unlawful operation and adverse action against the end-user by the applicable National regulatory authority.

This product's firmware limits operation to only the channels allowed in a particular Region or Country. Therefore, all options described in this user's guide may not be available in your version of the product.

FCC Requirements for Operation in the United States

FCC Information to User

This product does not contain any user serviceable components and is to be used with approved antennas only. Any product changes or modifications will invalidate all applicable regulatory certifications and approvals

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Guidelines for Human Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Declaration Of Conformity

We, NETGEAR, Inc., 350 East Plumeria Drive, San Jose, CA 95134, declare under our sole responsibility that the GS748T Gigabit Smart Switch complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and

- This device must accept any interference received, including interference that may cause undesired operation.

FCC Radio Frequency Interference Warnings & Instructions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an electrical outlet on a circuit different from that which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications made to the product, unless expressly approved by NETGEAR, Inc., could void the user's right to operate the equipment.

Canadian Department of Communications Radio Interference Regulations

This digital apparatus, GS748T Gigabit Smart Switch, does not exceed the Class B limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

This Class [B] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada

European Union

The GS748T Gigabit Smart Switch complies with essential requirements of EU EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC as supported by applying the following test methods and standards:

- EN55022: 2006 / A1: 2007
- EN55024: 1998 / A1: 2001 / A2: 2003
- EN60950-1: 2005 2nd Edition
- EN 61000-3-2:2006
- EN 61000-3-3:1995 w/A1: 2001+A2: 2005

Index

Numerics

1U [7](#)
8-pin [12](#)

A

Applying AC Power [25](#)
Auto Uplink [12](#)
Auto-negotiating [7](#)
Autosensing [12](#)

B

Backpressure [7](#)

C

Category 5 Unshielded Twisted-Pair [6](#)
Checking the Installation [22](#)
Class of Service [6](#)
compliance [35](#)
Connecting Devices to the Switch [23](#), [24](#)
Crossover [12](#)

D

Default Reset Button [10](#)
Device Hardware Interfaces [12](#)
Duplex Mode [12](#)

F

Factory Default Button [13](#)
Factory Defaults [10](#)
Flat Surface [21](#)
Full-duplex [6](#)

G

Gigabit Ports [6](#)

I

IEEE 802.3x [7](#)
IEEE Standards [7](#)
IEEE-compliant [6](#)
Installation Guide [8](#)
Installing the Switch [21](#)

L

LED Designations [11](#)
Low Latency [6](#)

M

MAC [7](#)
Media Access Control [7](#)

O

Operating Conditions [20](#)
Operating Environment [20](#)
Operating humidity [20](#)
Overview [6](#)

P

Package Contents [8](#)
Pause Frame Flow Control [7](#)
Port LEDs [11](#)
Preparing the Site [20](#)

R

Rackmount kit [8](#)
Reset Button [10](#)
RJ-45 Ports [12](#)
RJ-45 ports [6](#)
Rubber footpads [8](#), [21](#)

S

Smart Switch Resource CD [8](#)
Straight-through [12](#)

System LEDs **11**

T

technical support **2**

Temperature **20**

trademarks **2**

Traffic Control **6**

Troubleshooting Chart **28**

U

User Intervention **12**

User's Manual **8**

UTP **23**

V

Ventilation **20**

VLAN **6, 26**

W

Web-based Graphical User Interface **6**